HCD-D270/G3100/N255

SERVICE MANUAL

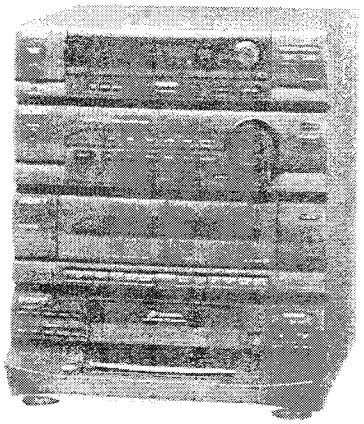

Photo : HCD-D270

US Model
HCD-D270/G3100
Canadian Model
HCD-D270
AEP Model
UK Model
E Model
Australian Model
PX Model
HCD-N255

HCD-D270, HCD-G3100, HCD-N255 is the tuner, deck, CD and amplifier section in LBT-D270, LBT-G3100, LBT-N255.

CD SECTION	Model Name Using Similar Mechanism	NEW
	CD Mechanism Type	CDM37-5BD19
	Base Unit Type	BU-5BD19
	Optical Pick-up Type	KSS-213BA/S-N
TAPE DECK SECTION	Model Name Using Similar Mechanism	NEW
	Tape Transport Mechanism Type	TCM-YSW47C24

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:
LBT-D270/LBT-G3100 for the U.S.A.:
With 8 ohm loads, both channels driven, from 70 – 20,000 Hz; rated 100 watts per channel minimum RMS power, with no more than 0,9% total harmonic distortion from 250 milliwatts to rated output.

CD player section

System: Compact disc and digital audio system
Laser: Semiconductor laser (λ = 780 nm) Emission duration: continuous
Laser output: Max 44.6 μW*
* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.
Wavelength: 780 – 790 nm

Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range: 87.5 - 108.0 MHz (100 kHz step)
Antenna: FM wire antenna
Antenna terminals: 75 ohm unbalanced
Intermediate frequency: 10.7 MHz

— Continued on next page —

COMPACT DISC DECK RECEIVER

MICROFILM

MC-Service

SONY

AM tuner section

Tuning range AM:

US, Canadian models:
530 – 1,710 kHz
(with the AM tuning interval set at 10 kHz)
531 – 1,710 kHz
(with the AM tuning interval set at 9 kHz)

German and Italian models:
AM: 531 – 1,602 kHz

AEP, East European models:
MW: 531 – 1,602 kHz
LW: 153 – 279 kHz
(with the tuning interval set at 3 kHz)

E, Australian, Argentine, Mexican, PX models:
AM: 531 – 1,602 kHz
(with the AM tuning interval set at 9 kHz)
530 – 1,710 kHz
(with the AM tuning interval set at 10 kHz)

Antenna: AM loop antenna
External antenna terminals

Intermediate frequency
450 kHz

Cassette deck section

Recording system
4-track 2-channel stereo

Frequency response
(DOLBY NR OFF)
60 – 13,000 Hz (±3 dB), using SONY TYPE I cassette
60 – 14,000 Hz (±3 dB), using SONY TYPE II cassette

Wow and flutter
0.1% WRMS ±0.3% (DIN)

Amplifier section

US, Canadian models:
Continuous RMS power output:
100 W + 100 W (8 ohms at 1 kHz, 10% THD)

AEP, German, Italian, East European models:
Continuous RMS power output:
50 W + 50 W (6 ohms at 1 kHz, DIN)
60 W + 60 W (6 ohms at 1 kHz, 10% DIN)

Music power output
100 W + 100 W (6 ohms at 1 kHz, 10% THD)

Other models:
Peak music power output 650 W
Continuous RMS power output:
35 W + 35 W
(6 ohms at 1 kHz, 5% THD)

Inputs
PHONO (phono jack)
Sensitivity 3 mV, impedance 47 kilohms
VIDEO (AUDIO) (phono jack):
Sensitivity 300 mV, impedance 47 kilohms

Outputs
PHONES (phone jack)
accept headphones of 8 ohms or more.
SPEAKER:
accept impedance of 8 to 16 ohms

MIC (phono jack) (E, Australian, Argentine, Mexican, PX models):
Sensitivity 1 mV, impedance 10 kilohms

General

Power requiements
US, Canadian, Mexican models :
120 V AC, 60 Hz
AEP, German, Italian, East European models
: 220 - 230 V AC, 50/60 Hz
Australian model: 240 VAC, 50/60 Hz
Other model:
110 - 120 V or 220 – 240 V AC
50/60 Hz adjustable with the voltage selector

Power consumption
US, Canadian models : 195 W
AEP, German, Italian, East European models : 100 W
Other models: 85 W

Dimensions
Approx. 355 × 425 × 400 mm
(14 × 16 3/4 × 15 3/4 inches) (w/h/d)
incl. projecting parts and controls

Mass Approx. 10.8 kg (23 lb 13 oz)
(D27/G3100 models)

Approx. 9.9 kg (21 lb 13 oz) (N255 models)

Design and specifications subject to change without notice.

MODEL IDENTIFICATION
— BACK PANEL —

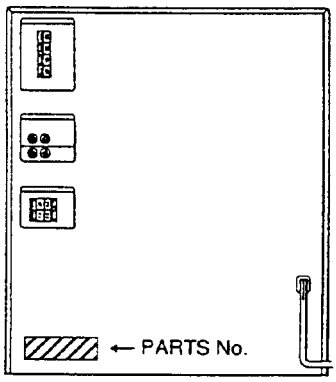

MODEL	PARTS No.
N255 : AEP model	4-978-187-2□
N255 : German model	4-978-187-3□
N255 : Italian model	4-978-187-4□
N255 : East European model	4-978-187-7□
N255 : E2 model	4-978-188-0□
N255 : Argentine model	4-978-188-1□
N255 : Australian model	4-978-188-2□
N255 : PX model	4-978-188-3□
N255 : Mexican model	4-978-188-4□
D270 : US model	4-979-319-0□
D270 : Canadian model	4-979-319-1□
G3100 : US model	4-979-319-2□

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

The following caution label is located inside the unit.

CAUTION	:	INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.
ADVARSEL:		USYNLIG LASERSTRÅLING VED ÅBNING NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	:	AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA LASERSÄTEILYLLE.
VARNING	:	LASERSTRÅLING NÄR DENNA DEL ÄR OPPNAD OCH SPÄRREN ÄR URXOPPLAD.
ADVERSEL:		USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES UNNGÅ EKSPONERING FOR STRÅLEN.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol ▯▯ are trademarks of Dolby Laboratories Licensing Corporation.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.

2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.

3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

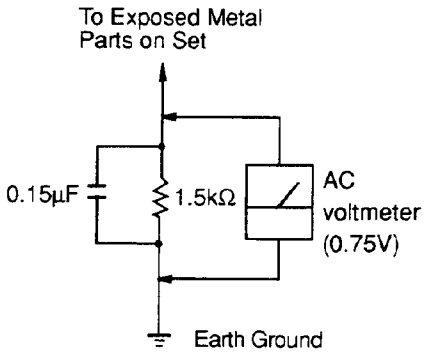

Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SERVICING NOTE

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.
During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the "S curve check" in "CD section adjustment" and check that the S curve waveform is output three times.

[All lights of FL tube]

After the power supply is turned on, press [TUNER/BAND] button, [DISPLAY/DEMO] button and [FILE 2] button simultaneously to enter in the mode which the FL tube lights all. If you want to quit the mode, press the above buttons simultaneously again.

[Switching the channel step 9 KHz/10 KHz]

Press [ENTER/NEXT] button and [POWER] button simultaneously to switch the AM channel step 9 KHz and 10 KHz. Be sure not to change with carelessness.

- Abbreviation
  CND : Canadian model.
  G : German model.
  IT : Italian model.
  EE : East European model.
  MX : Mexican model.
  AUS : Australian model.
  AR : Argentine model.

TABLE OF CONTENTS

Section	Title	Page
SECTION 1. GENERAL		5
SECTION 2. DISASSEMBLY		
2-1.	Front Panel ASSY and Main Board	6
2-2.	TC Mechanism Deck	6
2-3.	CD Mechanism Deck	7
2-4.	BU Bracket ASSY	7
2-5.	Disc Table	8
SECTION 3. MECHANICAL ADJUSTMENTS		9
SECTION 4. ELECTRICAL ADJUSTMENTS		
DECK Section		9
TUNER Section		12
AM Section		12
CD Section		13
SECTION 5. DIAGRAMS		
5-1.	Circuit Boards Location	15
5-2.	IC Pin Functions	
	• IC501 Graphic Control (ASD042) IC Pin Functions	16
5-3.	Block Diagrams	
	• Tuner Section (US, CND, E, MX, AUS, PX, AR Models)	17
	• Tuner Section (AEP, G, IT, EE Models)	19
	• Deck Section	21
	• CD Section	23
	• Main Section	25
5-4.	Printed Wiring Board — CD Section —	27
5-5.	Schematic Diagram — CD Section —	29
5-6.	Printed Wiring Board — Main Section —	32
5-7.	Schematic Diagram — Main Section —	35
5-8.	Schematic Diagram — Deck Section —	39
5-9.	Schematic Diagram — Tuner Section — (US, CND, E, MX, AUS, PX, AR Models)	43
5-10.	Printed Wiring Board — Tuner Section — (US, CND, E, MX, AUS, PX, AR Models)	46
5-11.	Schematic Diagram — Tuner Section — (AEP, G, IT, EE Models)	47
5-12.	Printed Wiring Board — Tuner Section — (AEP, G, IT, EE Models)	50
5-13.	Schematic Diagram — CD Motor Section —	51
5-14.	Printed Wiring Board — CD Motor Section —	51
5-15.	Schematic Diagram — Panel Section —	53
5-16.	Printed Wiring Board — Panel Section —	55
5-17.	IC Pin Functions	
	• IC701 Master Control (TMP87CS64)	58
5-18.	IC Block Diagrams — CD Section —	61
SECTION 6. EXPLODED VIEWS		
6-1.	Case and Back Panel Section	63
6-2.	Panel Board Section	64
6-3.	Front Panel Section	65
6-4.	Chassis Section	66
6-5.	TC Mechanism Section 1 (TCM-YSW47C24)	67
6-6.	TC Mechanism Section 2 (TCM-YSW47C24)	68
6-7.	TC Mechanism Section 3 (TCM-YSW47C24)	69
6-8.	CD Mechanism Section (CDM37-5BD19)	70
6-9.	Base Unit Section (BU-5BD19)	71
SECTION 7. ELECTRICAL PARTS LIST		72

SECTION 1
GENERAL

This section is extracted from instruction manual.

Index to Parts and Controls

Refer to the pages indicated in parentheses for details on how to use the controls.Front Panel

Tuner section

Refer to the pages indicated in parentheses for details on how to use the controls.

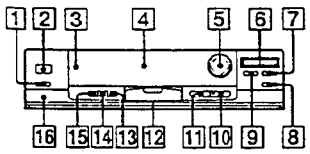

1 SLEEP button (18)
2 SYSTEM POWER switch (7)
3 Remote sensor
4 Display window (23)
5 CURSOR CONTROL buttons (6, 17, 19)
6 TUNING +/– buttons (11)
7 TUNER MEMORY button (12)
8 STEREO/MONO button (11)
9 TUNING MODE button (11)
10 ENTER/NEXT button (6, 12, 19)
11 DISPLAY/DEMO button (6, 8)
12 TUNER/BAND button (11)
13 DAILY 2 button (18)
14 DAILY 1 button (18)
15 TIMER SET button (19)
16 CLOCK SET button (6)

Amplifier section

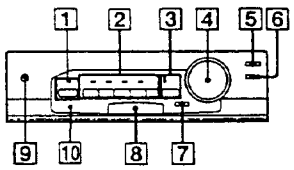

1 EFFECT button/indicator (16)
2 FILE 1 – 5 buttons/indicators (16)
3 FILE SELECT button/indicators (16, 17)
4 VOLUME control (7, 16, 19)
5 DBFB button (16)
6 S-SURROUND button (16)
7 EQ MEMORY button (17)
8 FUNCTION button (7, 14)
9 PHONES jack (16)
10 KARAOKE PON button (E2, AUS, PX, MX, AR MODEL)

Tape player section

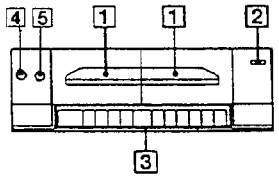

1 Cassette compartments (13)
2 DOLBY NR button (13) (D270/G3100/N255 : AEP, IT, G, EE MODEL)
3 Tape operating buttons
▷ (play) (13)
▷▷ (fast rightward) (13)
◁◁ (fast leftward) (13)
□/≙ (stop/eject) (13)
○ (recording) (for deck B only) (13)
▯▯ (pause) (13)
4 MIC jack (E2, AUS, PX, MX, AR MODEL)
5 MIC LEVEL knob (E2, AUS, PX, MX, AR MODEL)

CD player section

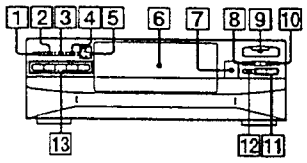

1 CONTINUE button (7)
2 SHUFFLE button (8)
3 PROGRAM button (9)
4 REPEAT button (9)
5 AUTO button/indicator (7)
6 Front cover (7)
7 ≙ OPEN button (7)
8 ▯▯ (pause) button (7)
9 ▷ (play) button (7)
10 □ (stop) button (7)
11 AMS ⏮/⏭ buttons (7, 15)
12 DISC SKIP button (7)
13 DISC 1 – 5 buttons (7)

Rear Panel

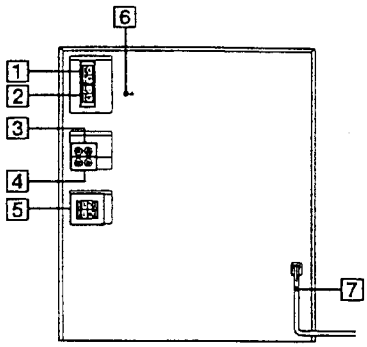

1 AM terminal (4)
2 FM 75Ω terminal (4)
3 PHONO IN jacks (19)
4 VIDEO (AUDIO) IN jacks (19)
5 SPEAKER connectors (4)
6 ⏚ ground terminal (4)
7 AC power cord (5)

Display Window

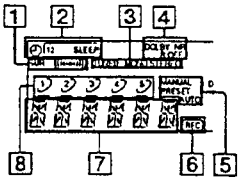

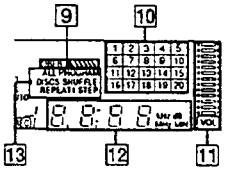

1 SURROUND indication (16)
2 TIMER mode indications (18)
3 Tuner indication (11)
4 DOLBY NR B indication (13)
5 AUTO/MANUAL/PRESET indications (12)
6 REC indication (14)
7 Band/disc/track/sound frequency range indications (11)
8 Disc calendar/playing position indicator (7)
9 DBFB indication (16)
10 Music calendar (7)
11 VOLUME indication (16, 19)
12 Radio frequency/playing time/sound frequency level indications (7, 11, 17)
13 CD play mode indicators (7)

Remote

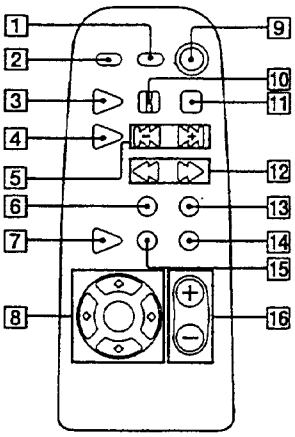

1 SLEEP button (18)
2 LOOP button (10)
3 CD ▷ (play) button (7)
4 TUNER/BAND ▷ button (11)
5 ⏭/⏮ buttons (7, 12, 15)
6 CHECK button (9)
7 FUNCTION button (7, 14)
8 MUSIC MENU buttons (16)
9 POWER button (7)
10 ▯▯ (pause) button (7)
11 □ (stop) button (7)
12 ◁ / ▷ buttons
13 EDIT button (14)
14 DISC SKIP button (7)
15 CLEAR button (9)
16 VOL (volume) +/– buttons (7, 16, 19)

MC-Service

SECTION 2
DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. FRONT PANEL ASSY AND MAIN BOARD

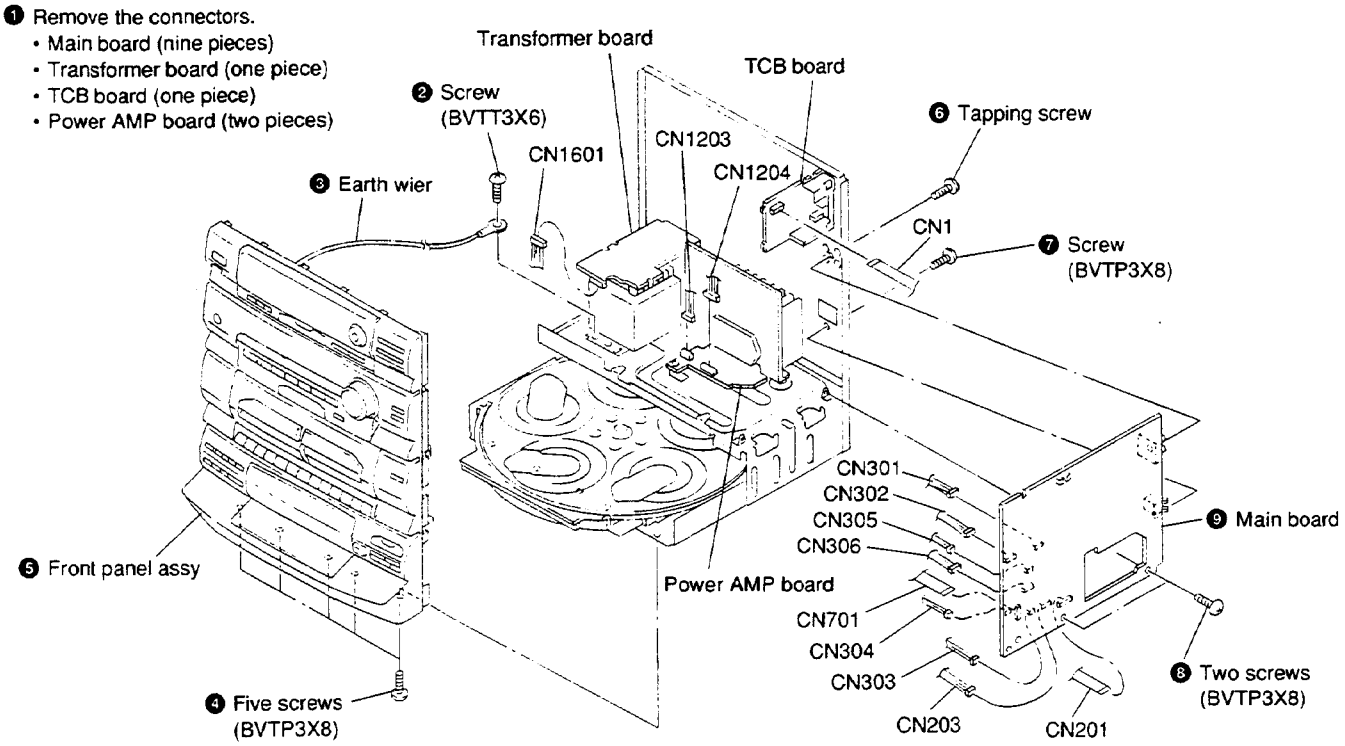

2-2. TC MECHANISM DECK

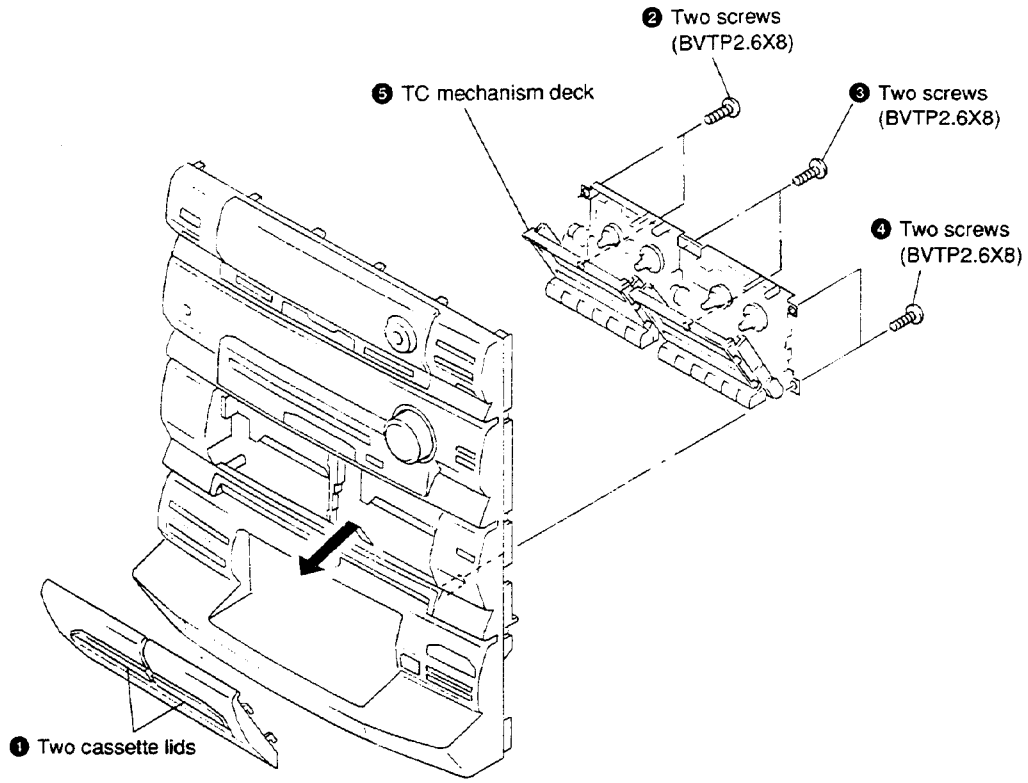

2-3. CD MECHANISM DECK

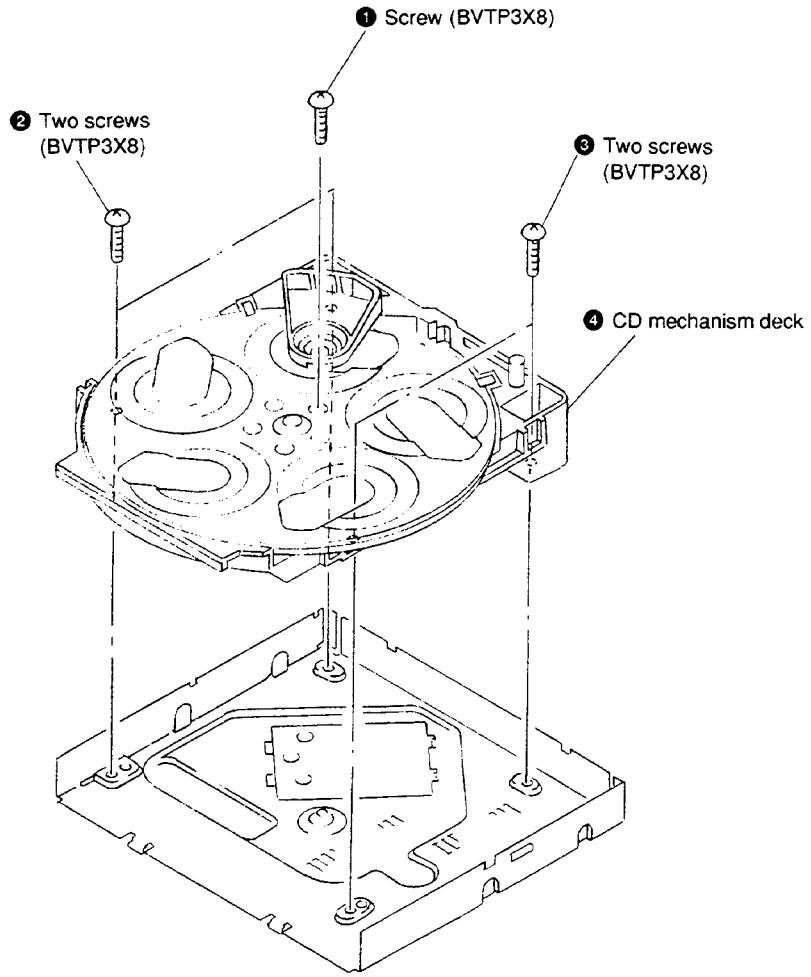

2-4. BU BRACKET ASSY

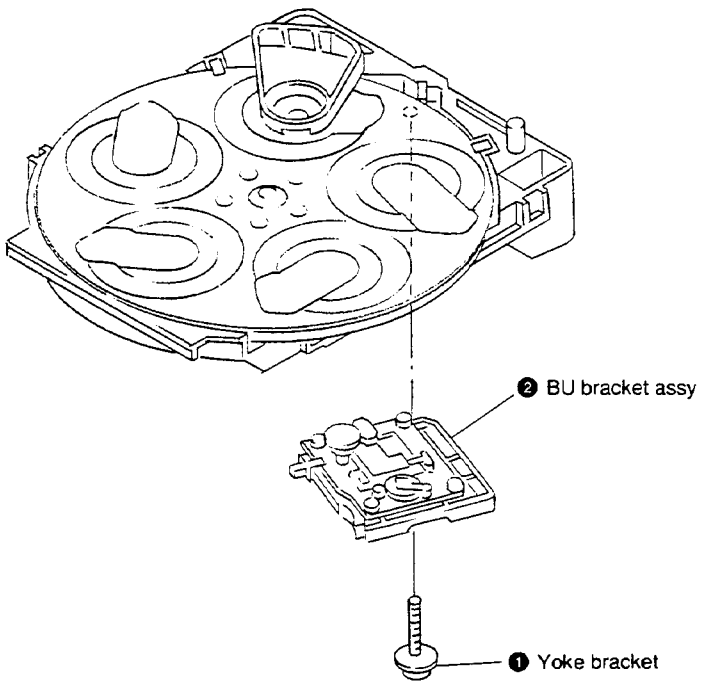

2-5. DISC TABLE

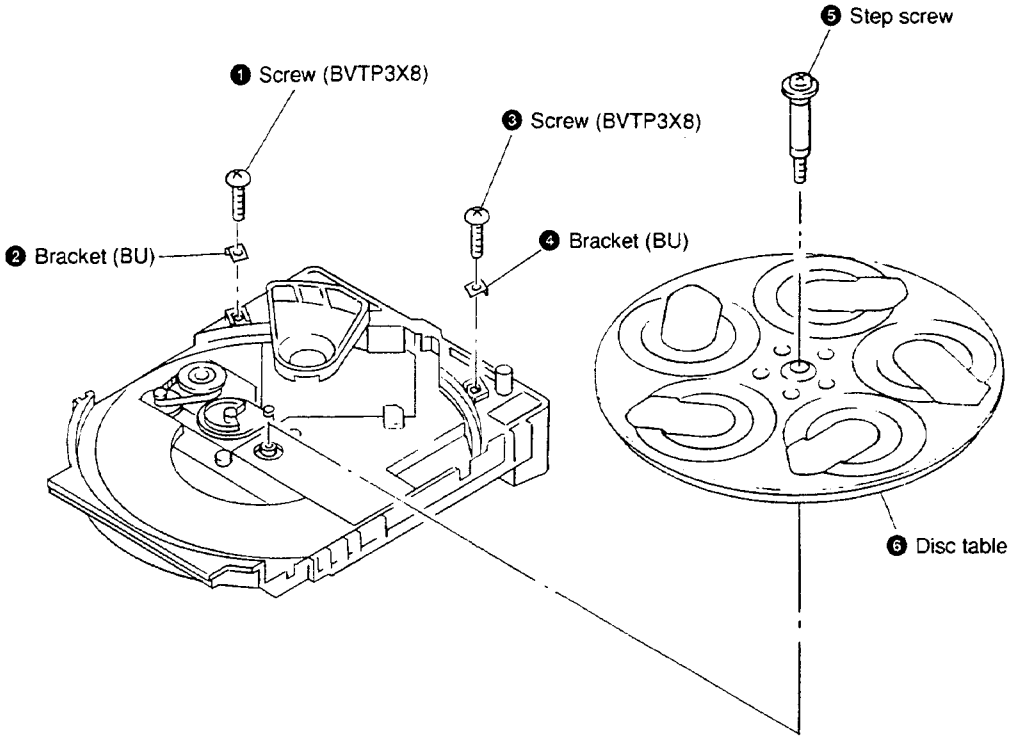

SECTION 3
MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured alcohol-moistened swab :
   record/playback heads — pinch rollers
   erase head — rubber belts
   capstan — idlers
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Torque	Torque meter	Meter reading
FWD	CQ-102C	30 to 80g • cm (0.41 – 1.11 oz • inch)
FWD back tension	CQ-102C	1.5 to 5.5g • cm (0.02 – 0.08 oz • inch)
FF/REW	CQ-201B	55 to 130g • cm (0.76 – 1.80 oz • inch)
FWD tension	CQ-403A	100g or more (3.53 oz or more)

SECTION 4
ELECTRICAL ADJUSTMENTS

DECK SECTION **0 dB=0.775V**

1. Demagnetize the record/playback head with a head damagnetizer. (Do not bring the head demagnetizer close to the erase head.)
2. Do not use a magnetized screwdriver for the adjustments.
3. After the adjustments, apply suitable locking compound to the parts adjusted.
4. The adjustments should be performed with the rated power supply voltage unless otherwise noted.
5. The adjustments should be performed in the order given in this service manual. (As a general rule, playback circuit adjustment should be completed before performing recording circuit adjustment.)
6. The adjustments should be performed for both L-CH and R-ch.
7. Switches and controls should be set as follows unless otherwise specified.

Tape	Signal	Used for
P-4-A100	10 kHz, –10 dB	Azimuth Adjustment
WS-48B	3 kHz, 0 dB	Tape Speed Adjustment
P-4-L300	315 Hz, 0 dB	Level Adjustment

Record/Playback Head Azimuth Adjustment

DECK A **DECK B**

Note : Perform this adjustments for both decks.
Procedure :
1. Mode : Playback

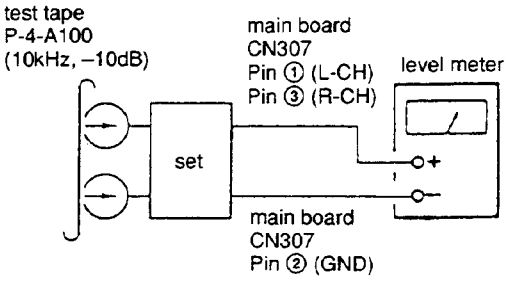

2. Turn the adjustment screw and check output peaks. If the peaks do not match for L-CH and R-CH, turn the adjustment screw so that outputs match within 1 dB of peak.

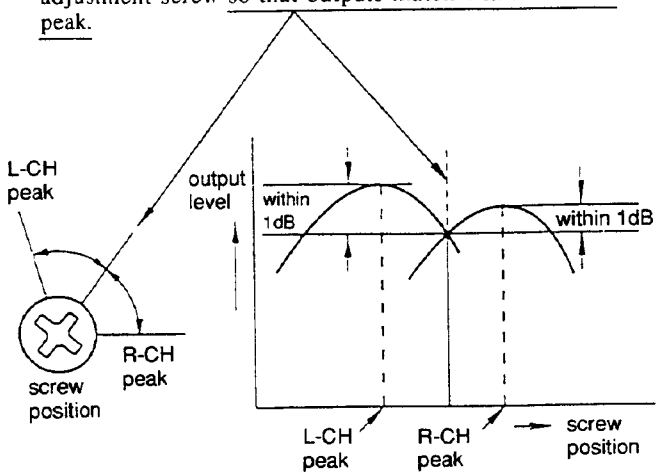

3. Mode : Playback

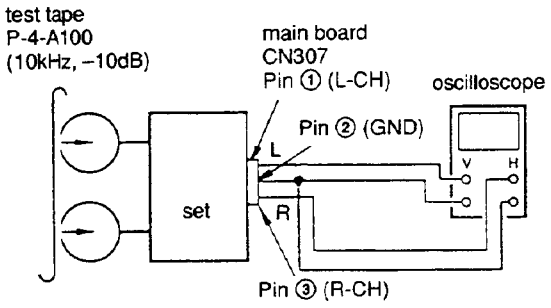

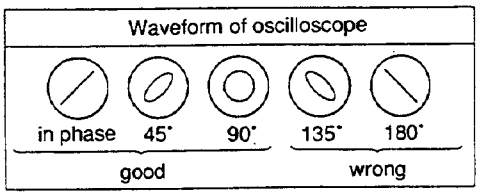

4. After the adjustments, apply suitable locking compound to the parts adjusted.

Adjustment Location :

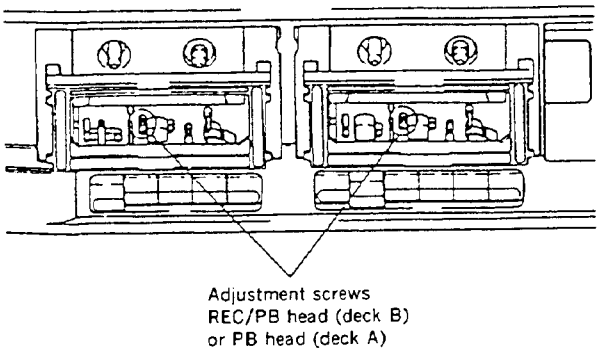

Tape Speed Adjustment DECK A DECK B

Procedure :
Mode : Playback

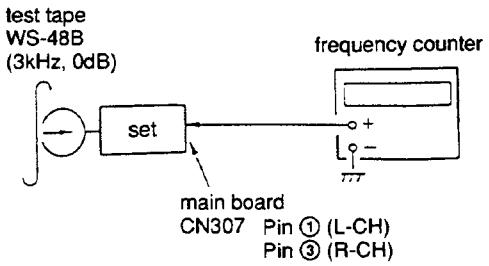

1. Insert the WS-48B to the deck B, and playback.
2. Adjust the RV380 so that the reading of the frequency counter will become 3000 ± 10 Hz.
3. Stop the deck B, and insert the WS-48B to the deck A, playback. Be sure to check that the difference of the frequency compared with the deck B becomes within +2% and −0.5%.
4. Insert the CS-123 (blank tape) to the deck A and insert the WS-48B to the deck B, then playback them simultaneously. Be sure to check that the reading of the deck B's frequency counter becomes 3000 ± 50 Hz.

Adjustment Location : main board

Playback Level Adjustment DECK A DECK B

Procedure :
Mode : Playback

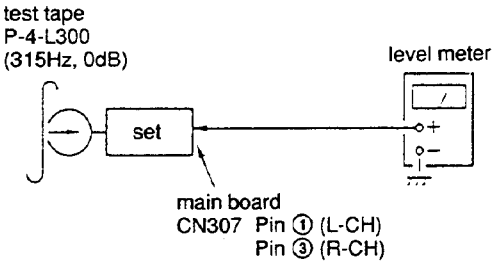

Deck A is RV301 (L-CH) and RV401 (R-CH),
Deck B is RV302 (L-CH) and RV402 (R-CH)
so that adjustment within adjustment level as follows.

Adjustment level :
CN307 PB level: 301.5 to 338.3 mV (−8.2 to −7.2 dB)
level difference between the channels: within ±0.5 dB

Adjustment Location : main board

Record Bias Adjustment DECK B

Procedure :

1. Mode : record

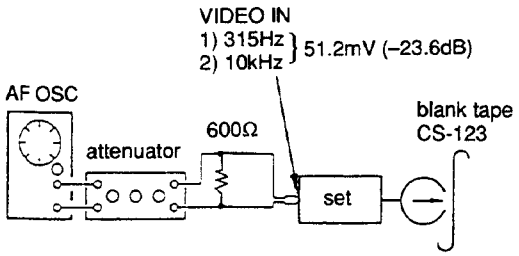

2. Mode : Playback

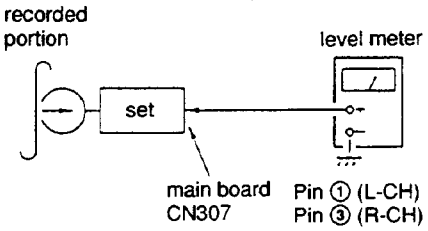

Confirm playback the signal recorded in step 1 become adjustment level as follows.
If these levels do not adjustment level, adjustment the RV304 (L-CH) and RV404 (R-CH) on the main board to repeat steps 1 and 2.

Adjustment level : Playback output of 315 Hz to playback output of 10 kHz : 0±0.5 dB
Adjustment Location : main board

Record Level Adjustment DECK B

Procedure :

1. Mode: record

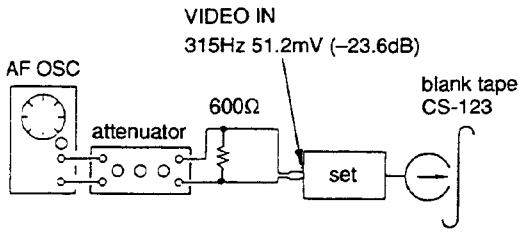

2. Mode: Playback

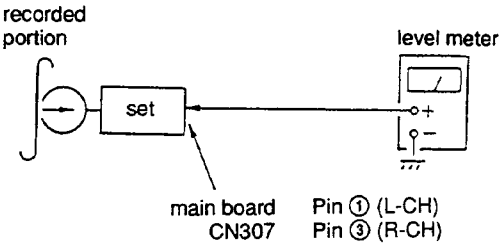

Confirm playback the signal recorded in step 1 become adjustment level as follows.
If these levels do not adjustment level, adjustment the RV303 (L-CH) and RV403 (R-CH) on the main board to repeat steps 1 and 2.

Adjustment level :
CN307 PB level : 47.3 to 53.1 mV (–24.3 to –23.3 dB)

Adjustment Location :

[MAIN BOARD] (Component Side)

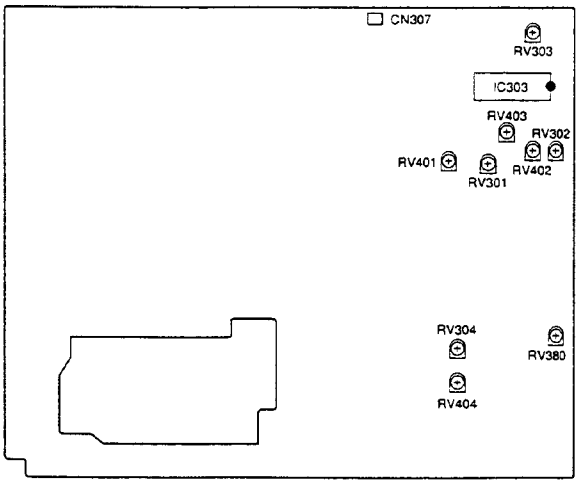

TUNER SECTION **0dB=1μV**

Note : As a front-end (FE1) is difficult to repair if faulty, replace it with new one.

AM Section Adjustment

Setting :

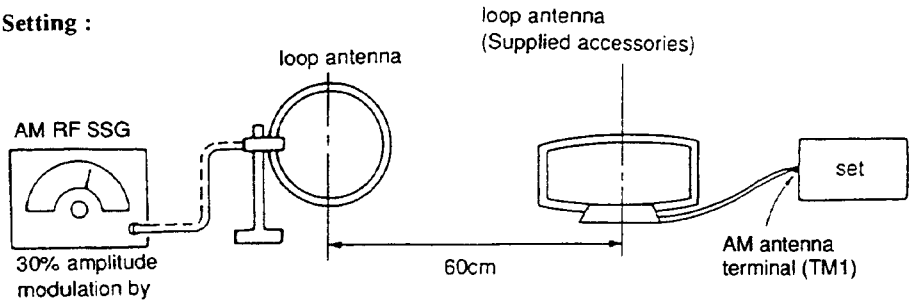

Field strength dB (μV/m) = SSG output level dB (μV/m) −26dB.

AM Tuned Level Adjustment

Band : AM or MW

Procedure :

1. Set the output of SSG so that the input level of the set becomes 55 dB.
2. Tune the set to 1,050 kHz (US, CND models), 999 kHz (other models).
3. Adjust RV41 (AEP, IT, G, EE models), RV42 (other models) to the point (moment) when the TUNED indicator will change from going off to going on.

Adjustment Location : TCB board

FM Section Adjustment

Note : This adjustment should be performed after the AM Tuned Level Adjustment due to the same adjustment element.

Setting :

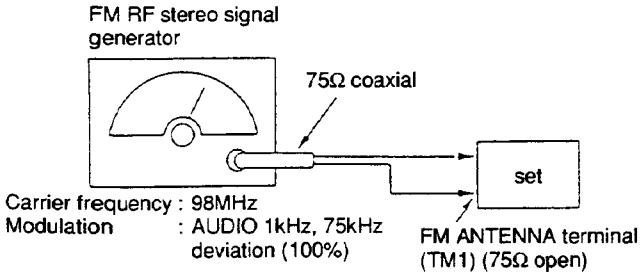

FM Tuned Level Adjustment

Band : FM

Procedure :

1. Supply a 25dBμ 98 MHz signal from the ANTENNA terminal.
2. Tune the set to 98 MHz.
3. If the TUNED indicator does not light, adjust RV42 (AEP, IT, G, EE models), RV41 (other models) to the point (moment) when the TUNED indicator will change from going off to going on.

Adjustment Location : TCB board

Adjustment Location :

AEP, G, IT, EE model

[TCB BOARD] (Component Side)

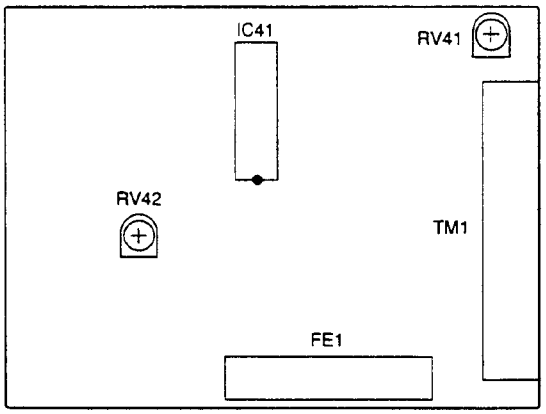

Other model

[TCB BOARD] (Component Side)

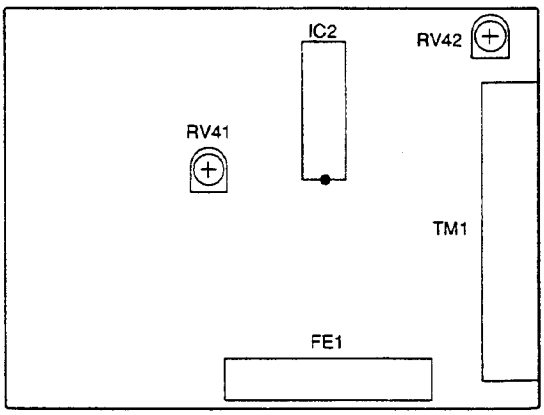

- Abbreviation
  CND : Canadian model
  G : German model
  IT : Italian model
  EE : East European model

CD SECTION

Note :

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.
5. Adjust the focus bias adjustment when optical block is replaced.

Focus Bias Adjustment

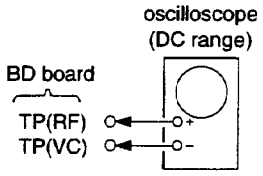

Procedure:

1. Connect oscilloscope to test point TP (RF).
2. Turned Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Adjust RV101 so that the waveform is clear.
   (Clear RF signal waveform means that the shape "◊" can be clearly distinguished at the center of the waveform.)
5. After adjustment, check the RF signal level.

• RF signal
VOLT/DIV : 200 mV
TIME/DIV : 500 nS

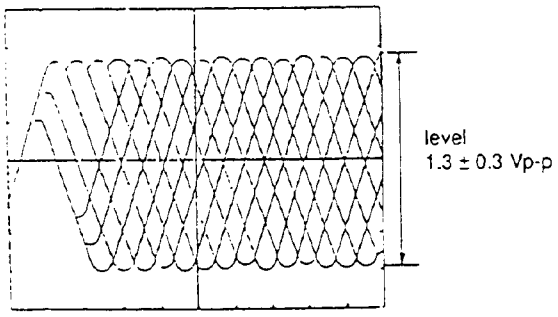

S Curve Check

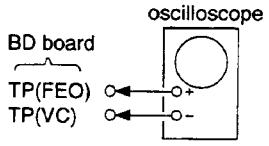

Procedure :

1. Connect oscilloscope to test point TP (FEO).
2. Connect between test point TP (FOK) and GND by lead wire.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and turned Power switch on again and actuate the focus search. (actuate the focus search when disc table is moving in and out.)
5. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 2.4 ± 0.7 Vp-p.

S-curve waveform

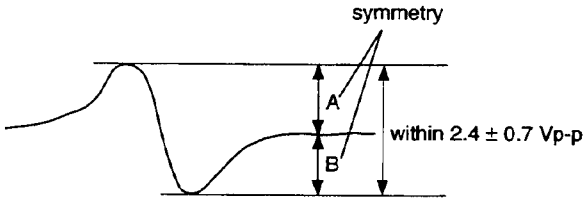

6. After check, remove the lead wire connected in step 2.

Note : • Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
• Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

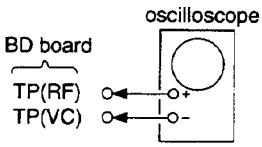

Procedure :

1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turned Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note :

Clear RF signal waveform means that the shape "◊" can be clearly distinguished at the center of the waveform.

RF signal waveform

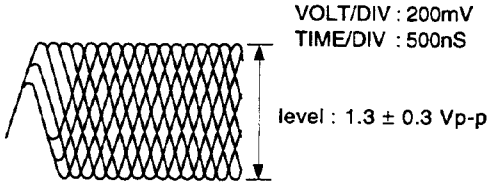

E-F Balance Check

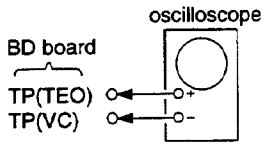

Procedure :

1. Connect test point TP703 (ADJ2) on Main board to GND with a lead wire.
2. Connect oscilloscpe to test point TP (TEO).
3. Turned Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0Vdc, and check this level.

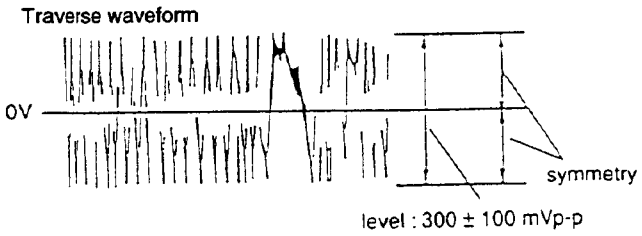

6. Remove the lead wire connected in step 1.

Focus/Tracking Gain Adjustment (RV102, RV103)

This gain has a margin, so even if it is slightly off.
There is no problem.
Therfore, do not perform this adjustment.
Please note that it should be fixed to mechanical center position when you moved and do not know original position.

Adjustment Location:

[BD BOARD] — Component Side —

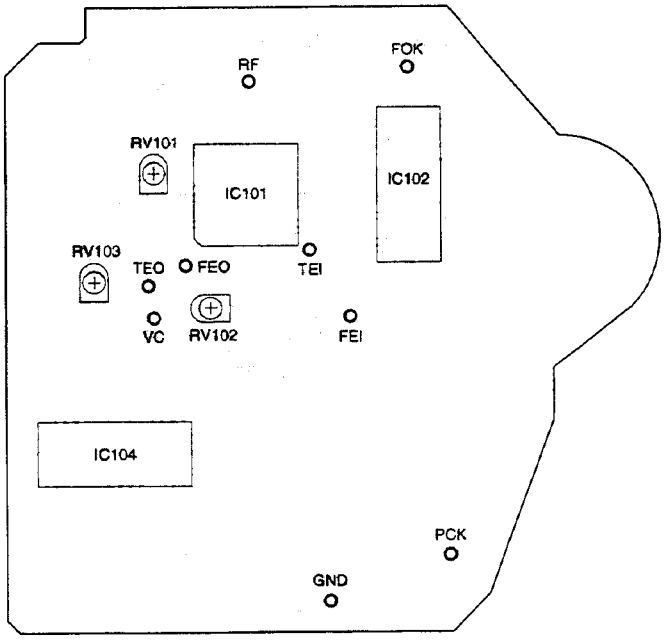

[MAIN BOARD] — Conductor Side —

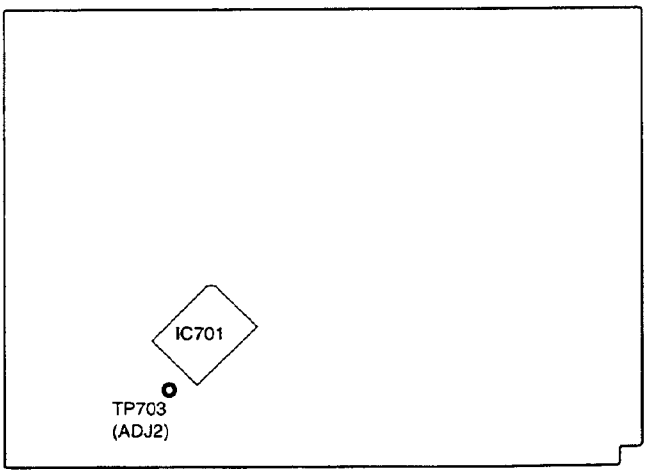

SECTION 5
DIAGRAMS

5-1. CIRCUIT BOARDS LOCATION

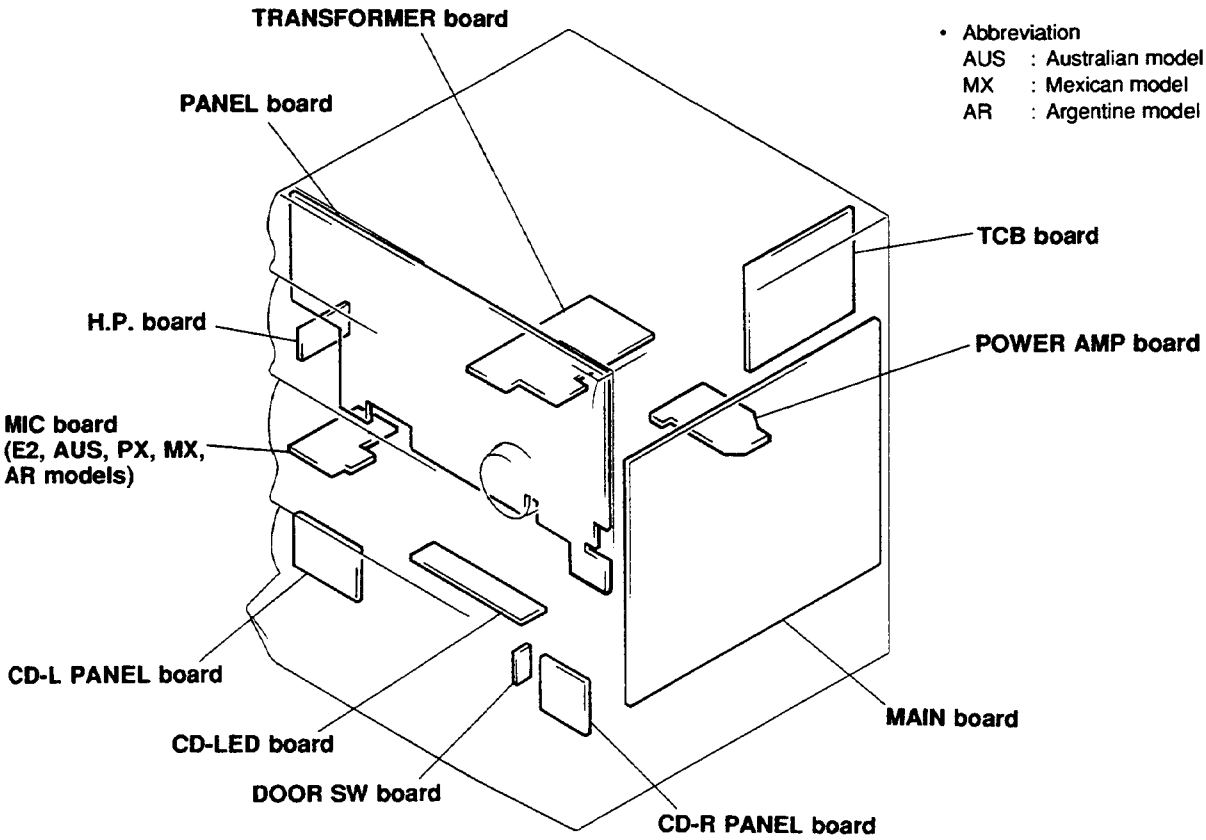

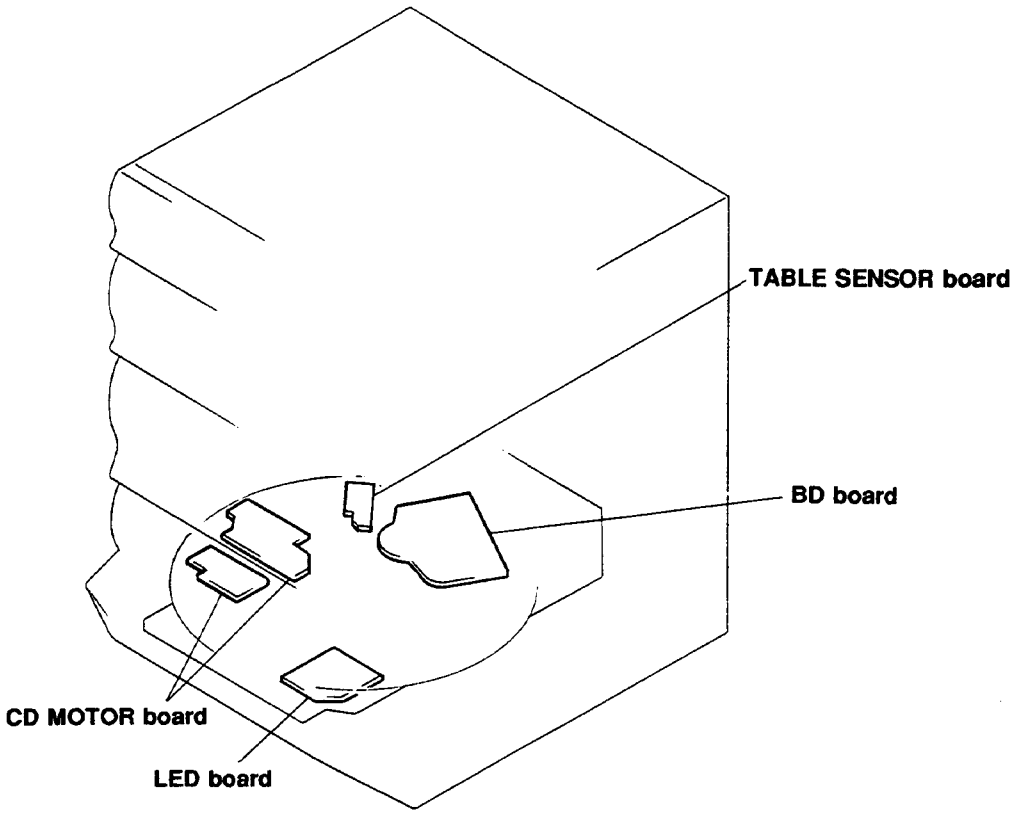

5-2. IC BLOCK DIAGRAMS (IC501)

- **IC501 GRAPHIC CONTROL (ASD042) IC PIN FUNCTIONS**

Pin No.	Pin Name	I/O	Function
1–7	GR1–7	O	FL grid signal output.
8	V_{DD}	–	+5V
9, 10	LED9, 10	O	LED drive signal output.
11	KEY SELECT	O	Not used.
12	VOL IN B	I	Volume encoder signal input.
13	REQ. GM	I/O	Reguest signal from/to master control.
14	CLK MG	I	Serial clock input.
15	DATA GM	O	Serial data output.
16	DATA MG	I	Serial data input.
17	RESET	I	Reset signal input.
18	PANEL SW	I	CD door open detection input.
19	LED SELECT	O	LED select signal output.
20	AVss	–	GND
21–24	SPEANA IN1–4	I	Spectram analizer signal input. (Connected to GND)
25–28	KEY IN1–4	I	Key matrix input.
29	AV_{DD}	–	} +5V
30	AV_{REF}	–	
31	JOG IN B	I	Not used. (Pull down)
32	XT2	I	Not used.
33	Vss	–	GND
34	X1	I	} X'tal (5 MHz).
35	X2	O	
36–39	LED5–8	O	LED drive signal output.
40, 41	LED3, 4	O	Not used.
42, 43	LED1, 2	O	LED drive signal output.
44	VOL IN A	I	Volume encoder signal input.
45	JOG IN A	I	Not used. (Pull down)
46	RDY MG	I	RDY signal from master control.
47	SIRCS IN	I	SIRCS signal input.
48	IC (VPP)	–	GND
49, 50	LEDS12, 13	O	Not used. (Pull up)
51	LEDS11	O	LED drive signal output.
52	V_{DD}	–	Not used.
53–70	SEG5–22	O	FL segment signal output.
71	V. LOAD	–	–25V for FL
72–75	SEG1–4	O	FL segment signal output.
76–80	GR8–12	O	FL grid signal output.

- Abbreviation
  FL : FLUORESCENT INDICATOR TUBE

5-3. BLOCK DIAGRAMS

— TUNER SECTION — (US, CND, E, MX, AUS, PX, AR MODELS)

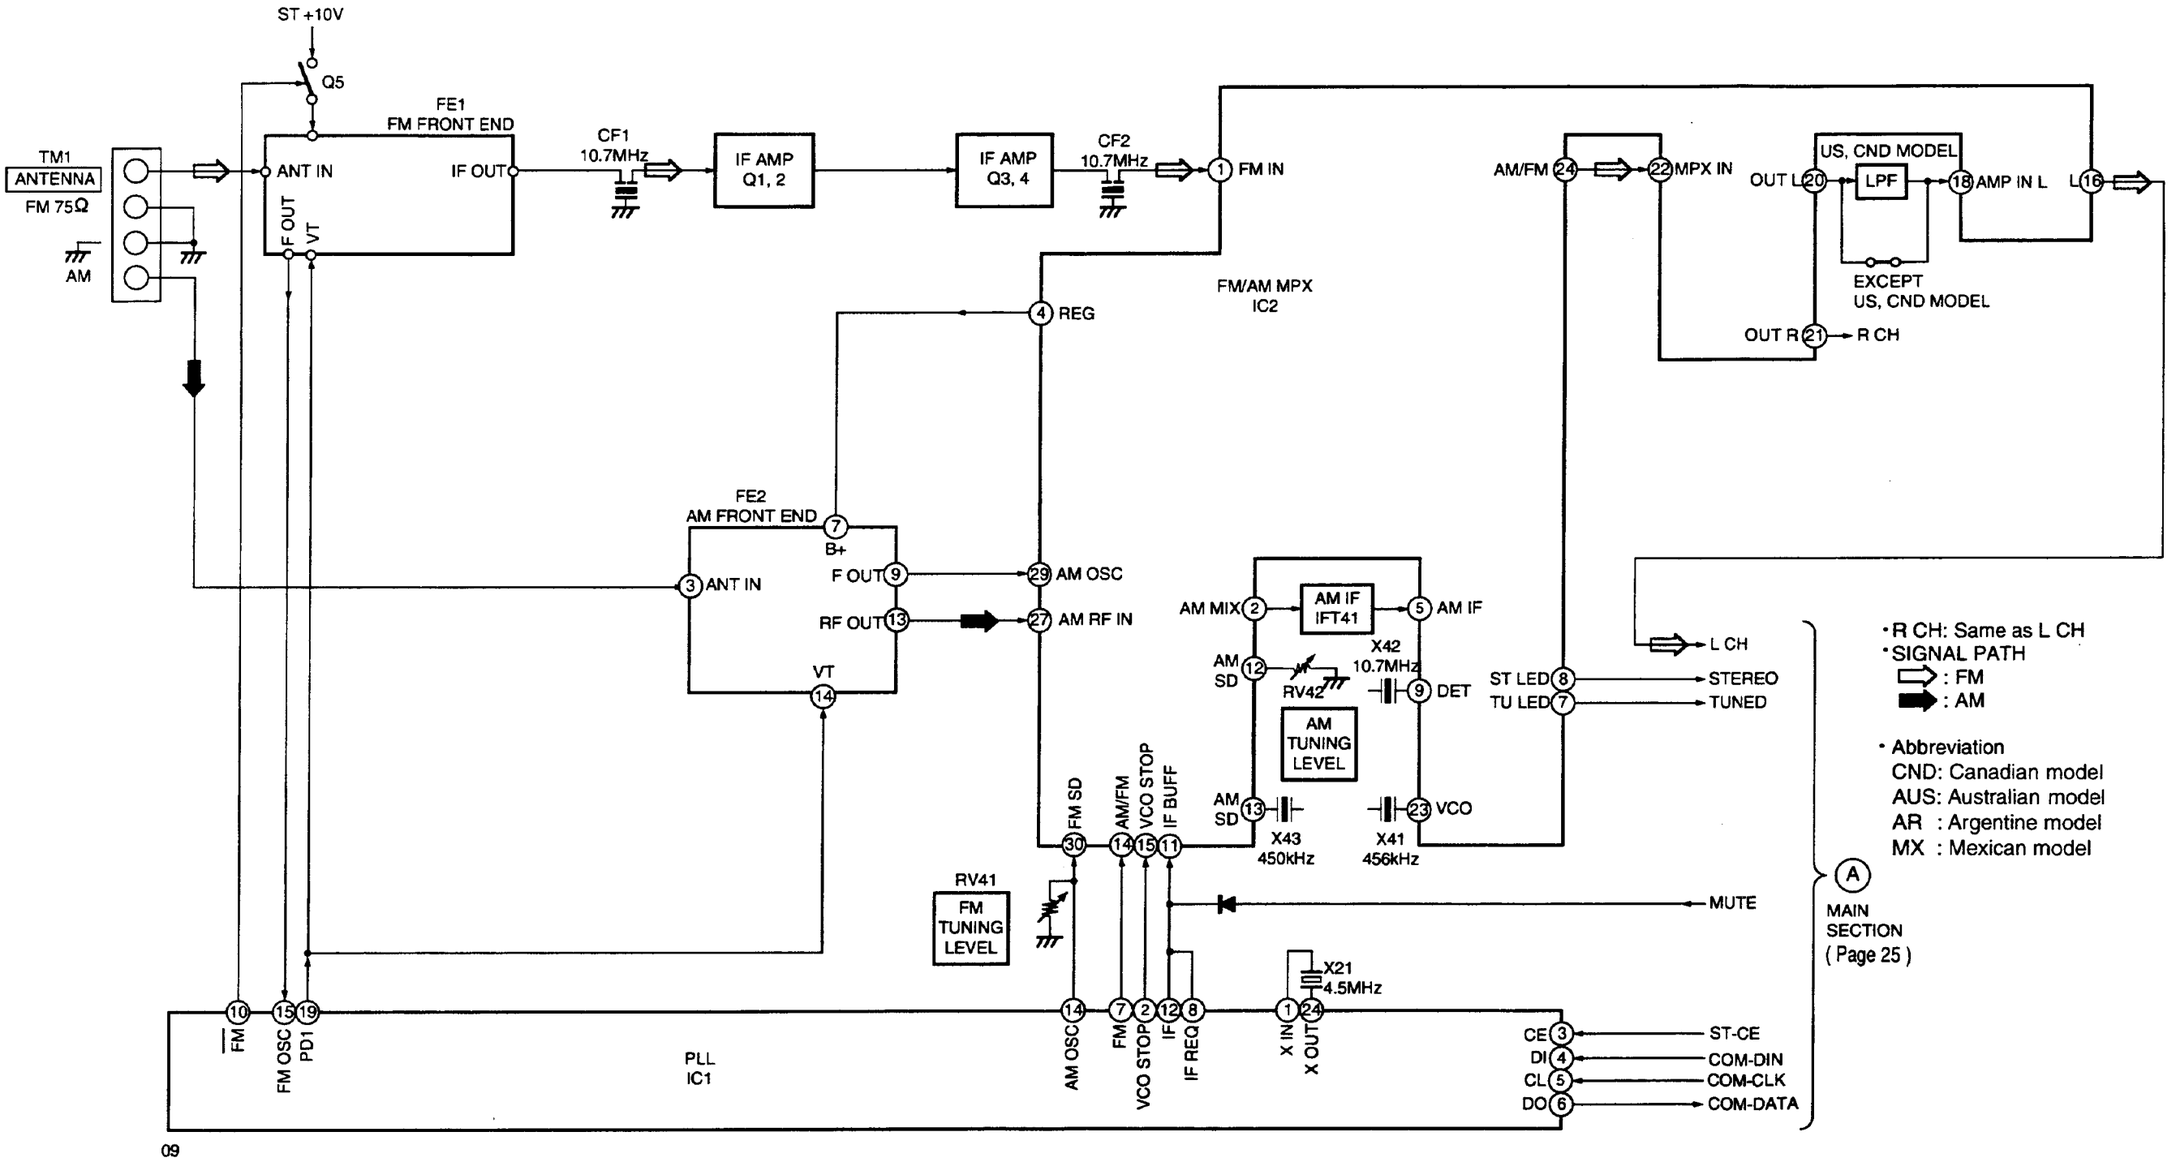

— TUNER SECTION — (AEP, G, IT, EE MODELS)

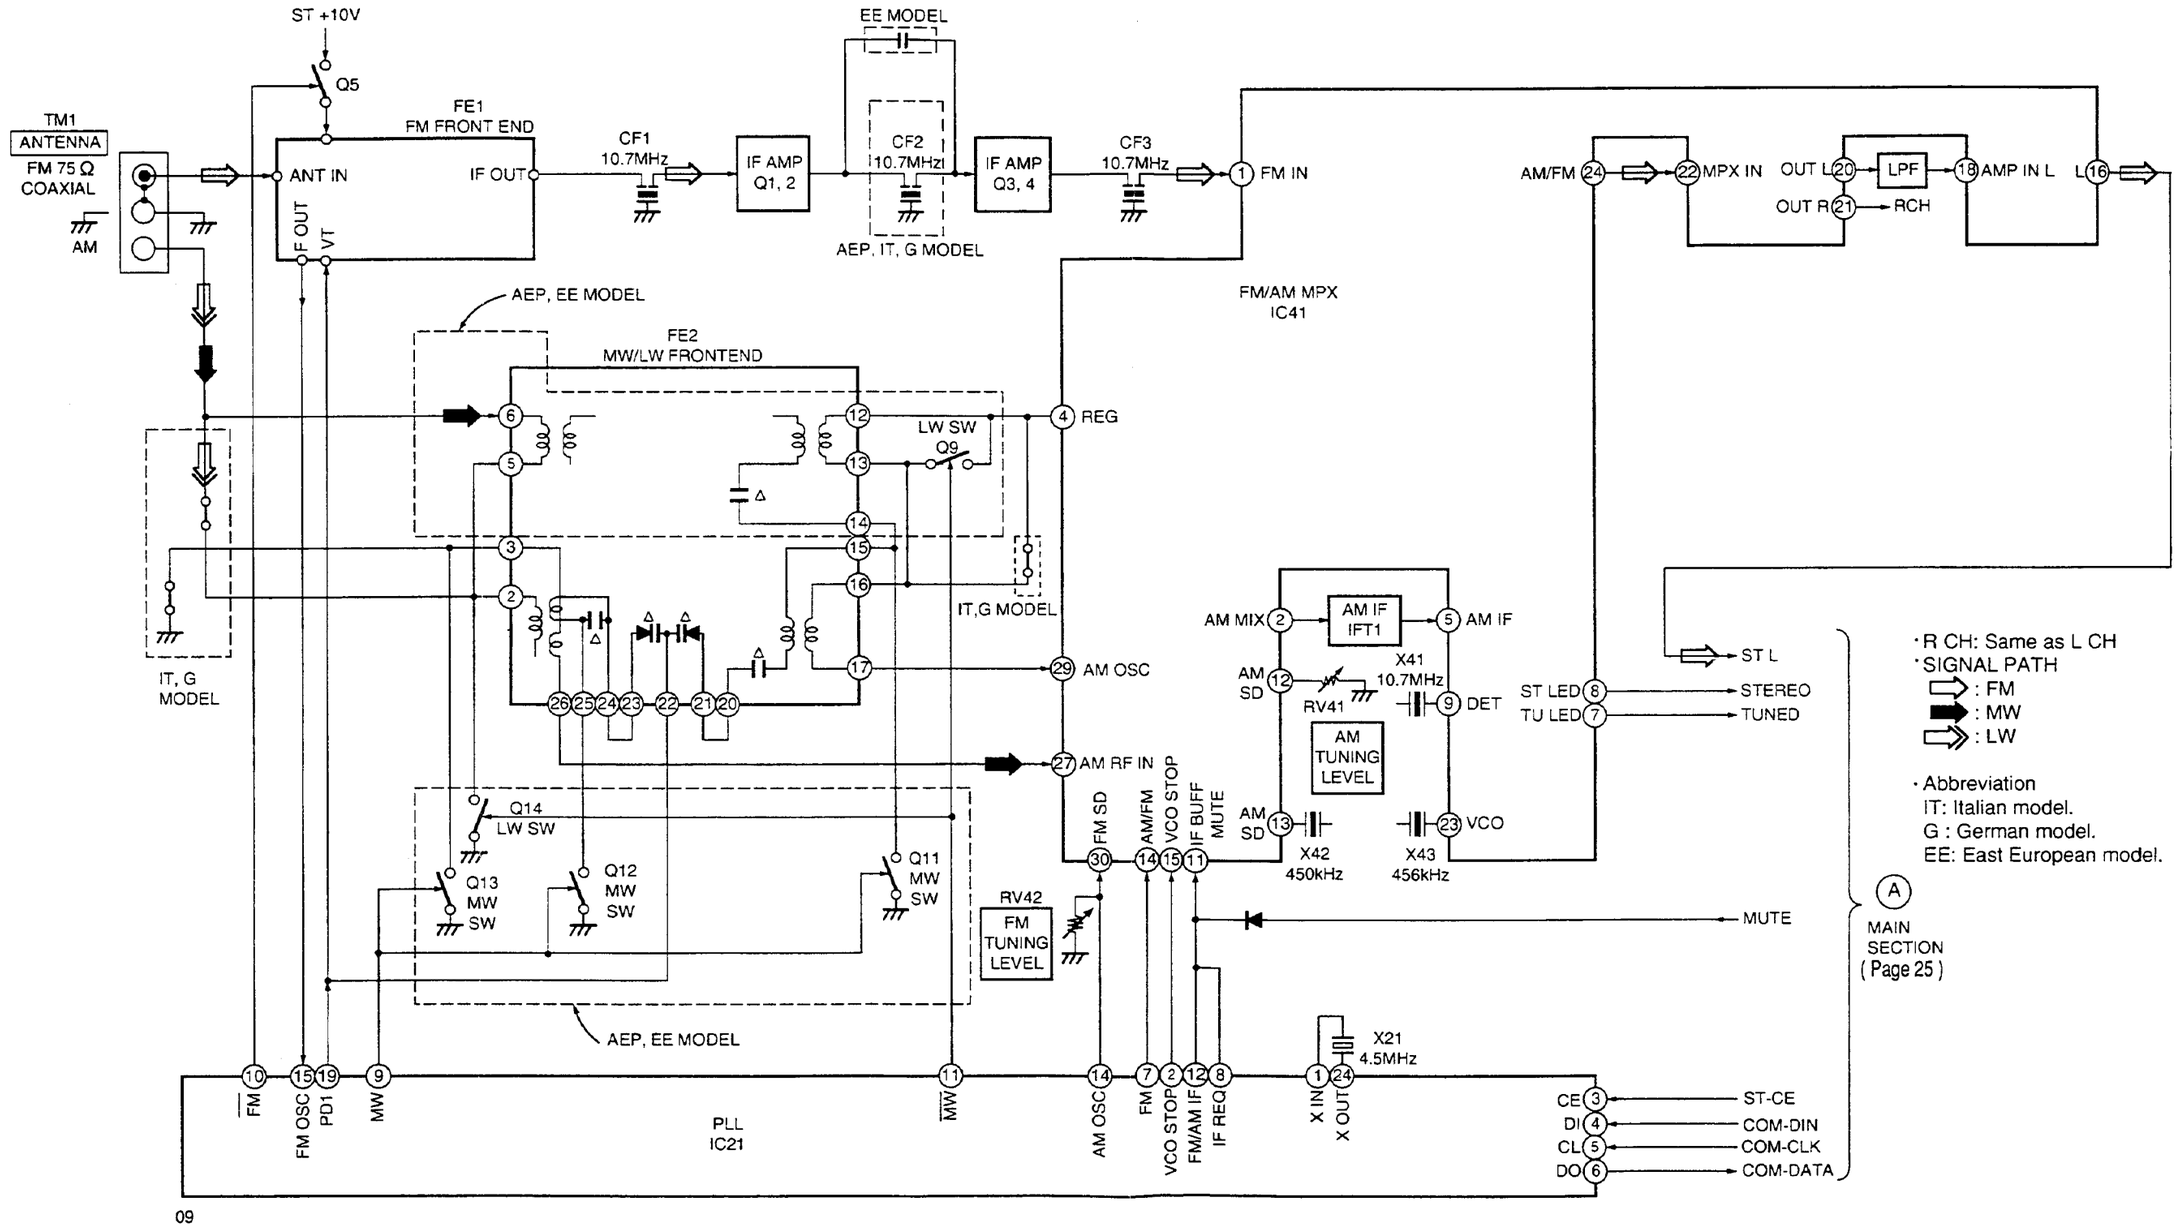

MC-Service

— DECK SECTION —

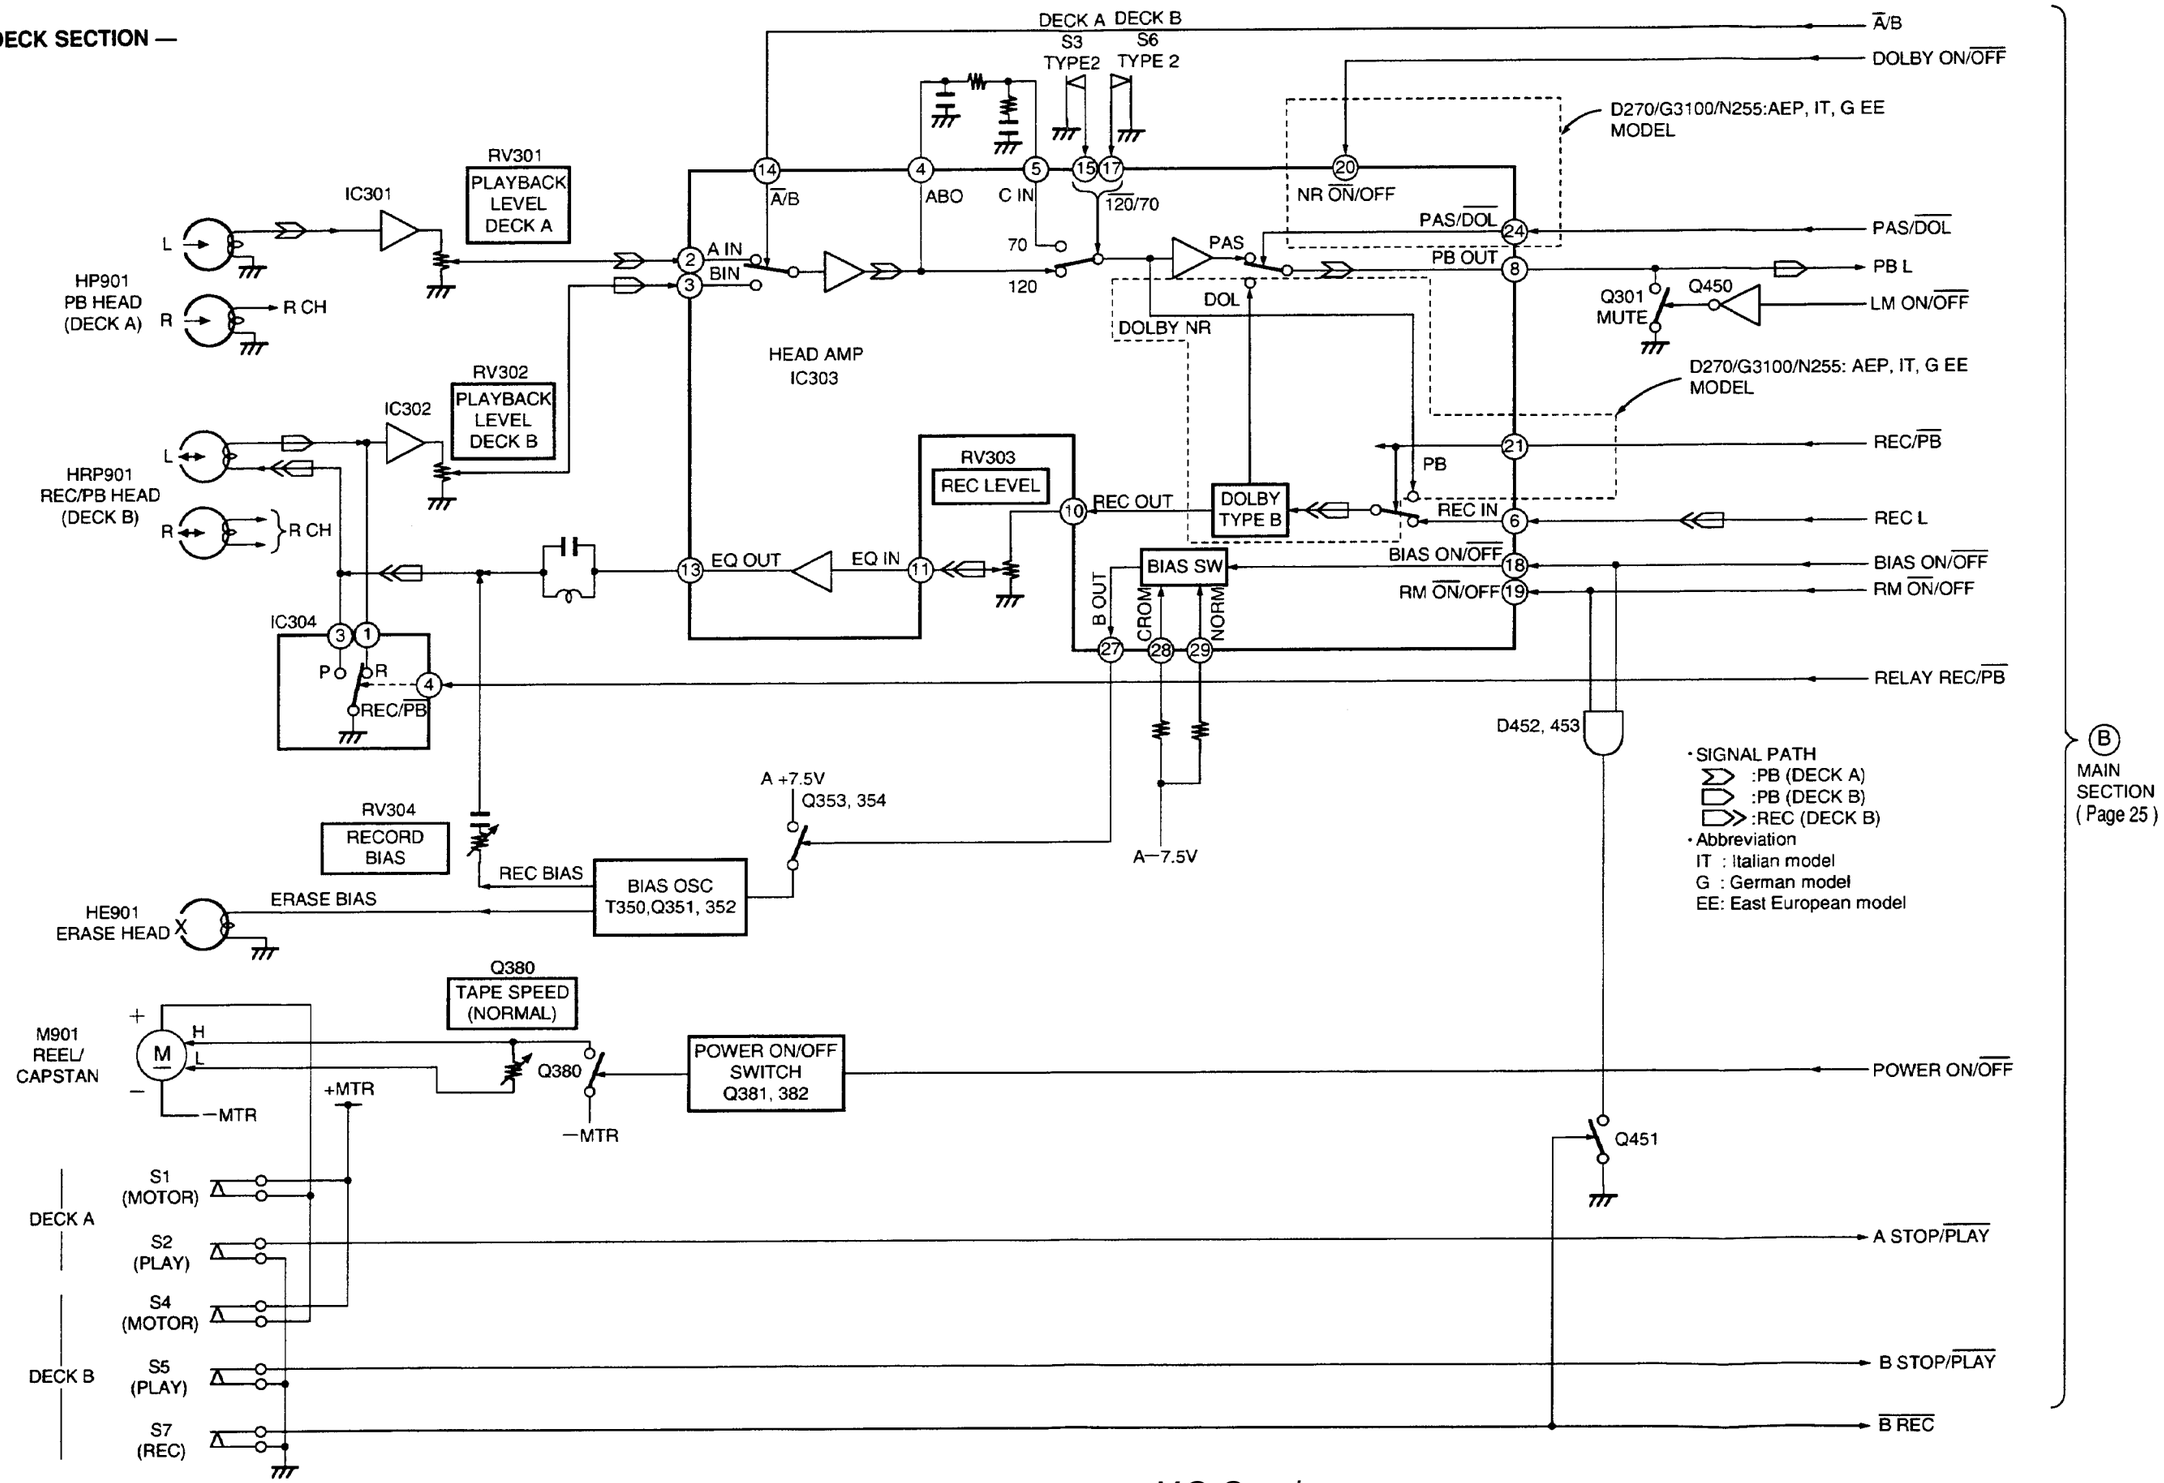

— CD SECTION —

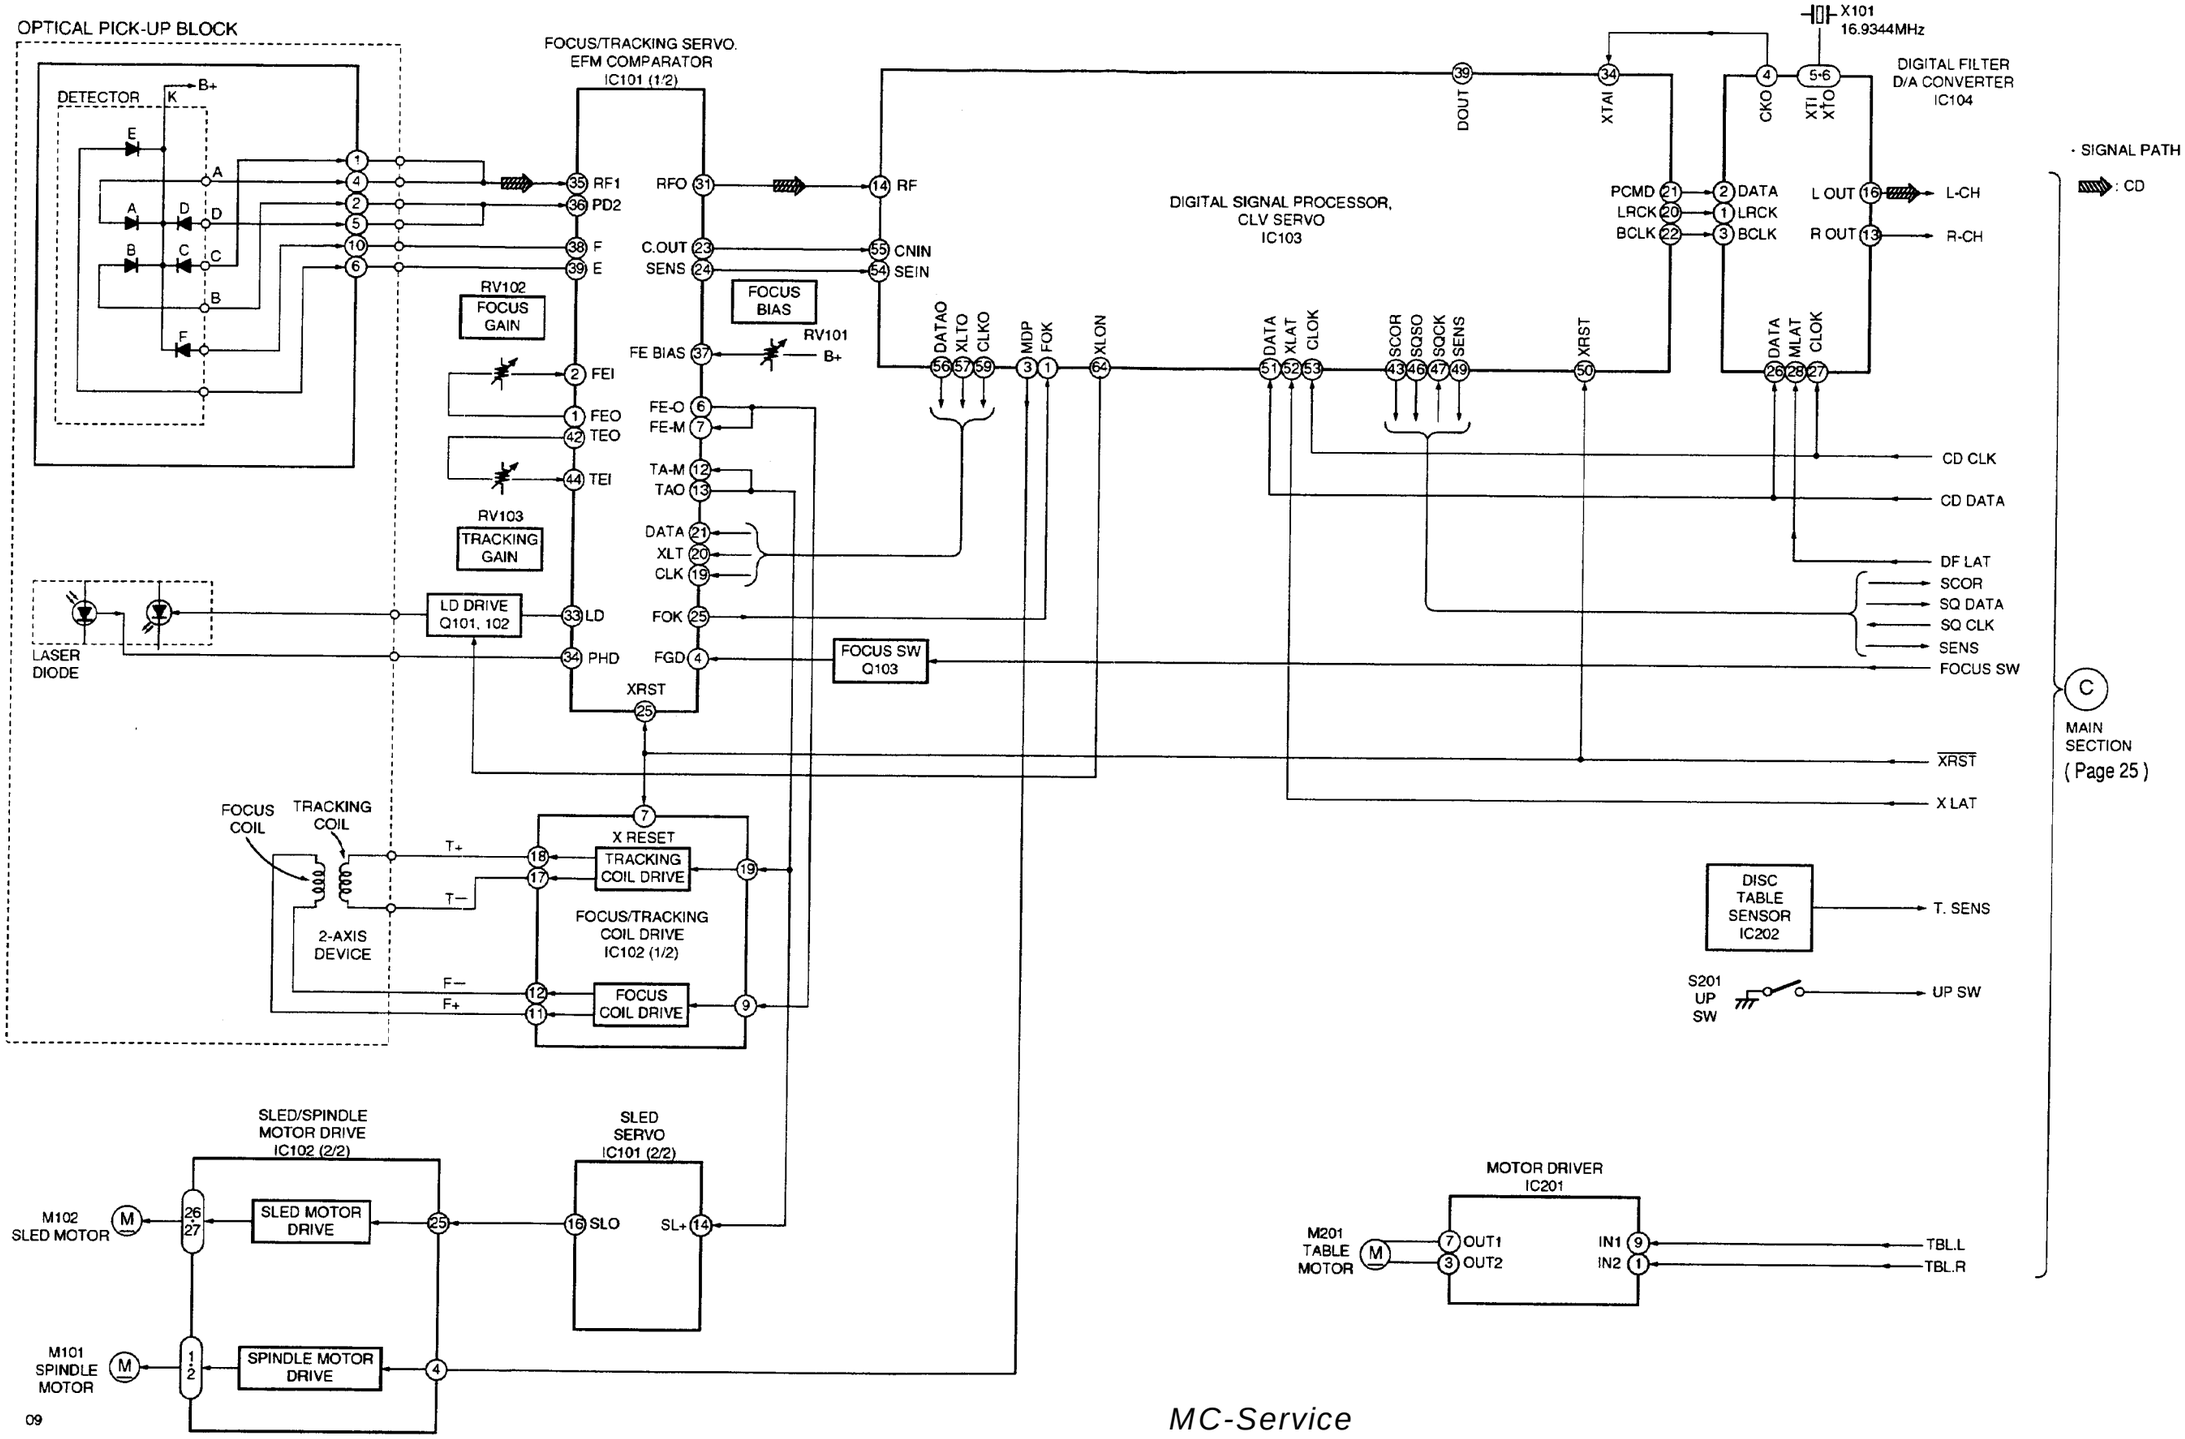
OPTICAL PICK-UP BLOCK
DETECTOR
B+
K
E
A
D
B
C
F
FOCUS/TRACKING SERVO.
EFM COMPARATOR
IC101 (1/2)
RF1
PD2
F
E
RFO
C.OUT
SENS
RF
CNIN
SEIN
RV102
FOCUS
GAIN
FOCUS
BIAS
RV101
B+
FE BIAS
FEI
FEO
TEO
TEI
FE-O
FE-M
TA-M
TAO
RV103
TRACKING
GAIN
DATA
XLT
CLK
FOK
FGD
LD DRIVE
Q101, 102
LD
PHD
LASER
DIODE
FOCUS SW
Q103
XRST
FOCUS
COIL
TRACKING
COIL
T+
T—
F—
F+
X RESET
TRACKING
COIL DRIVE
FOCUS/TRACKING
COIL DRIVE
IC102 (1/2)
2-AXIS
DEVICE
FOCUS
COIL DRIVE
SLED/SPINDLE
MOTOR DRIVE
IC102 (2/2)
SLED
SERVO
IC101 (2/2)
M102
SLED MOTOR
SLED MOTOR
DRIVE
SLO
SL+
M101
SPINDLE
MOTOR
SPINDLE MOTOR
DRIVE
09
DOUT
XTAI
CKO
XTI
XTO
X101
16.9344MHz
DIGITAL FILTER
D/A CONVERTER
IC104
DIGITAL SIGNAL PROCESSOR,
CLV SERVO
IC103
DATAO
XLTO
CLKO
MDP
FOK
XLON
DATA
XLAT
CLOK
SCOR
SQSO
SQCK
SENS
XRST
PCMD
LRCK
BCLK
DATA
LRCK
BCLK
L OUT
R OUT
L-CH
R-CH
DATA
MLAT
CLOK
CD CLK
CD DATA
DF LAT
SCOR
SQ DATA
SQ CLK
SENS
FOCUS SW
XRST
X LAT
DISC
TABLE
SENSOR
IC202
T. SENS
S201
UP
SW
UP SW
MOTOR DRIVER
IC201
M201
TABLE
MOTOR
OUT1
OUT2
IN1
IN2
TBL.L
TBL.R
· SIGNAL PATH
: CD
C
MAIN
SECTION
(Page 25)

— MAIN SECTION —

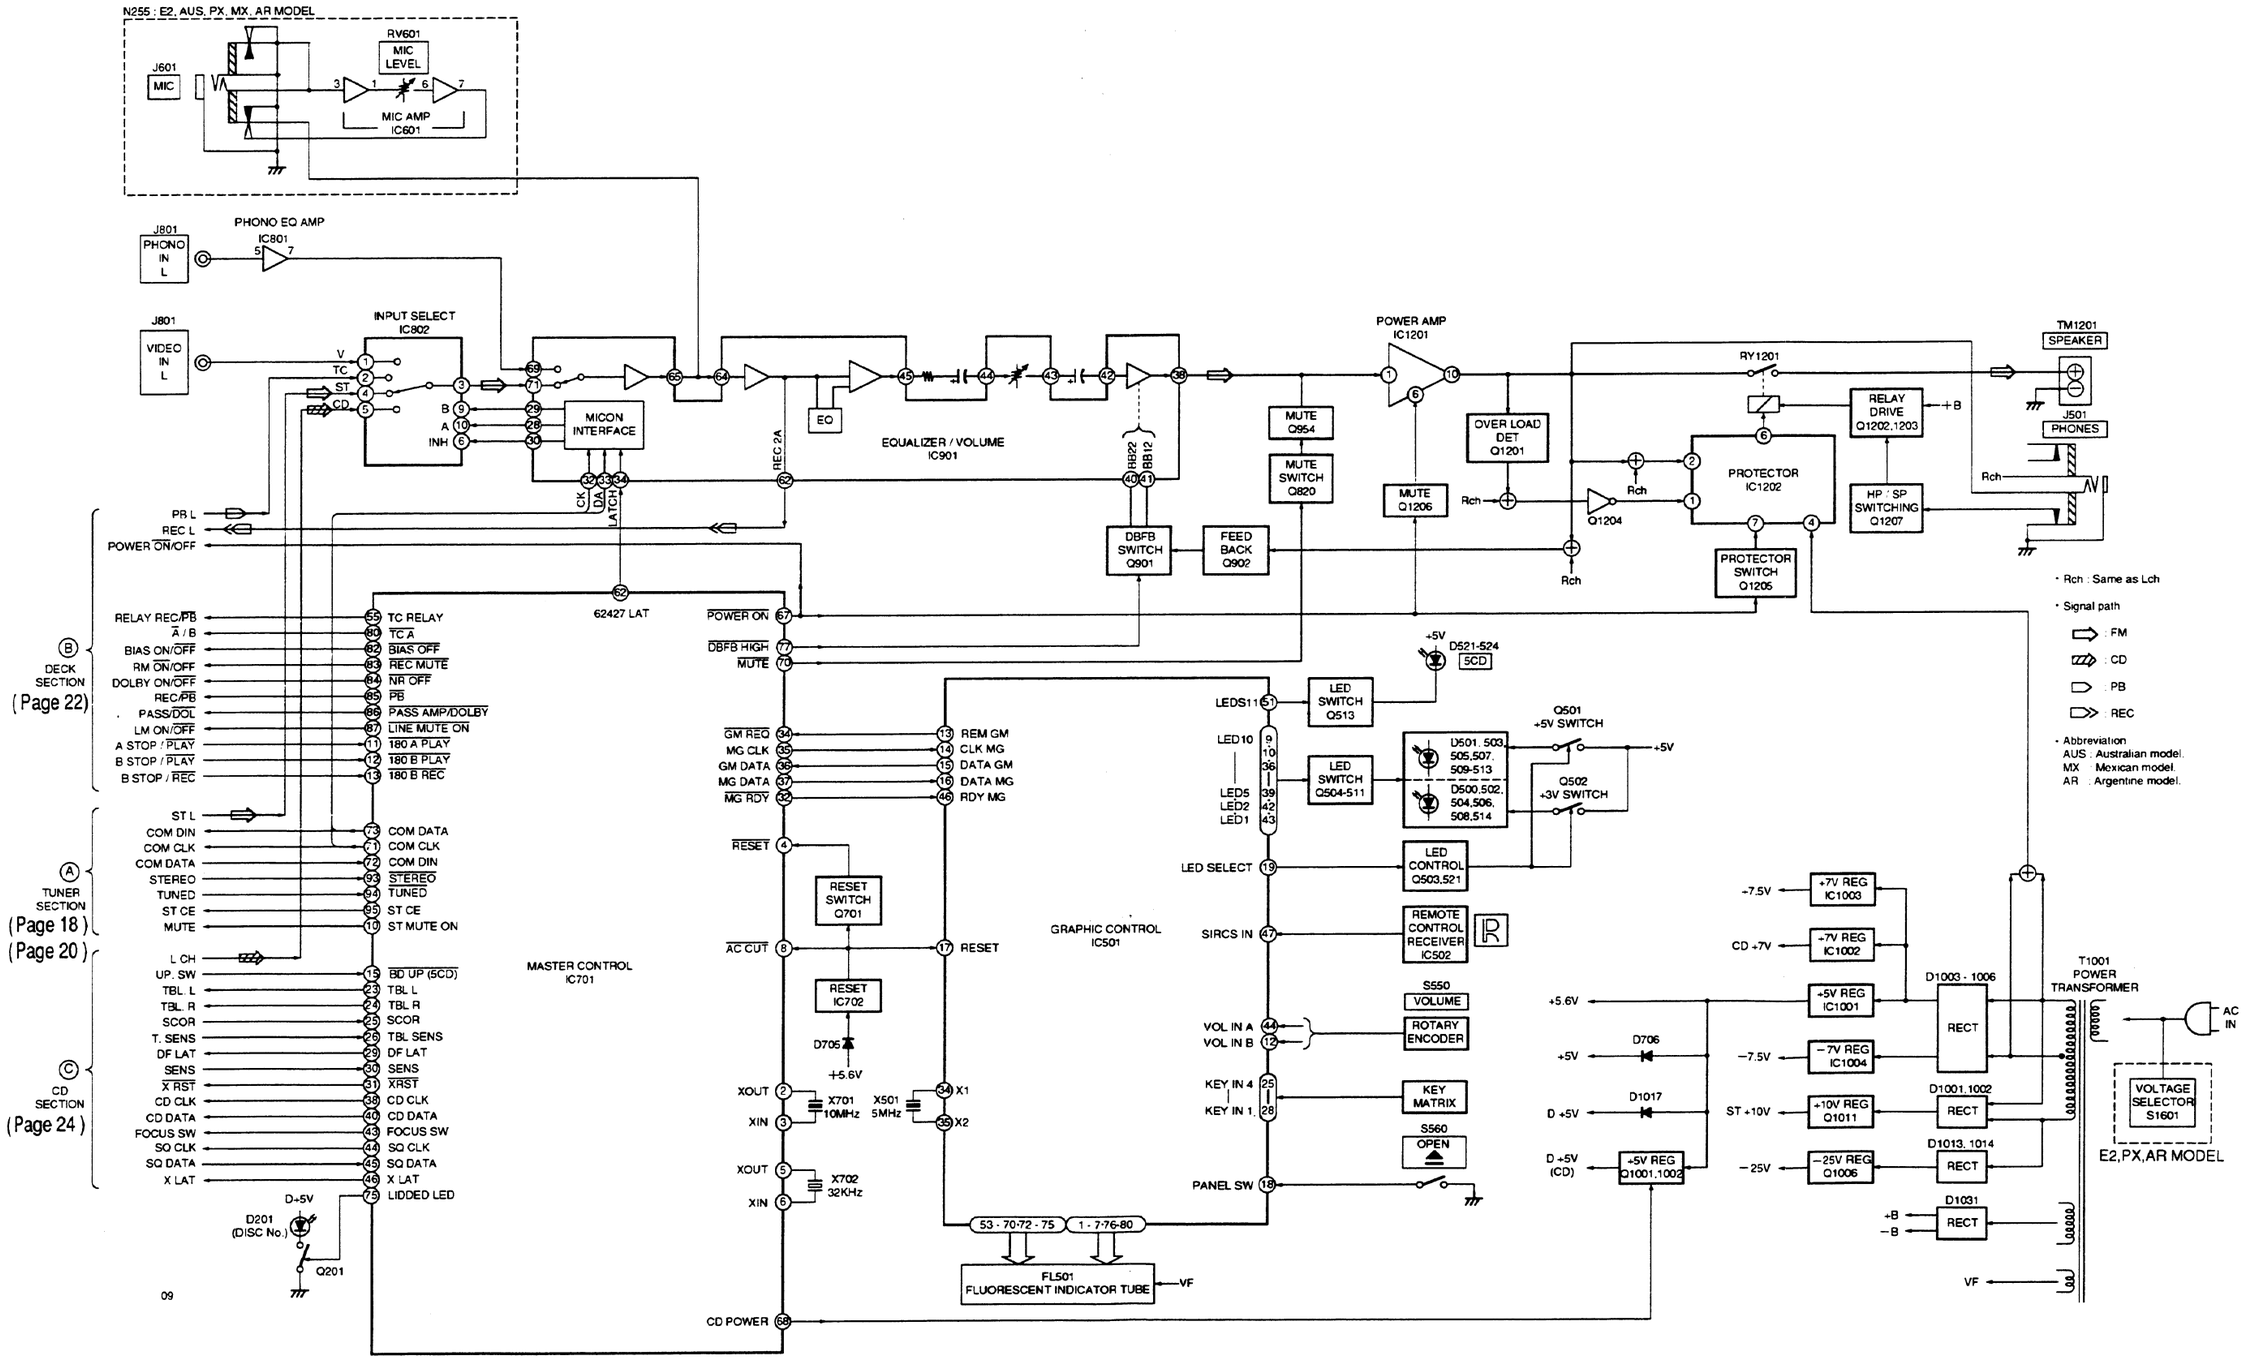

MC-Service

5-4. PRINTED WIRING BOARD — CD SECTION —

• See page 15 for Circuit Boards Location.

• **Semiconductor Location**

Ref. No.	Location
IC101	E-9
IC102	C-8
IC103	E-3
IC104	F-11
Q101	D-6
Q102	D-7
Q103	F-6

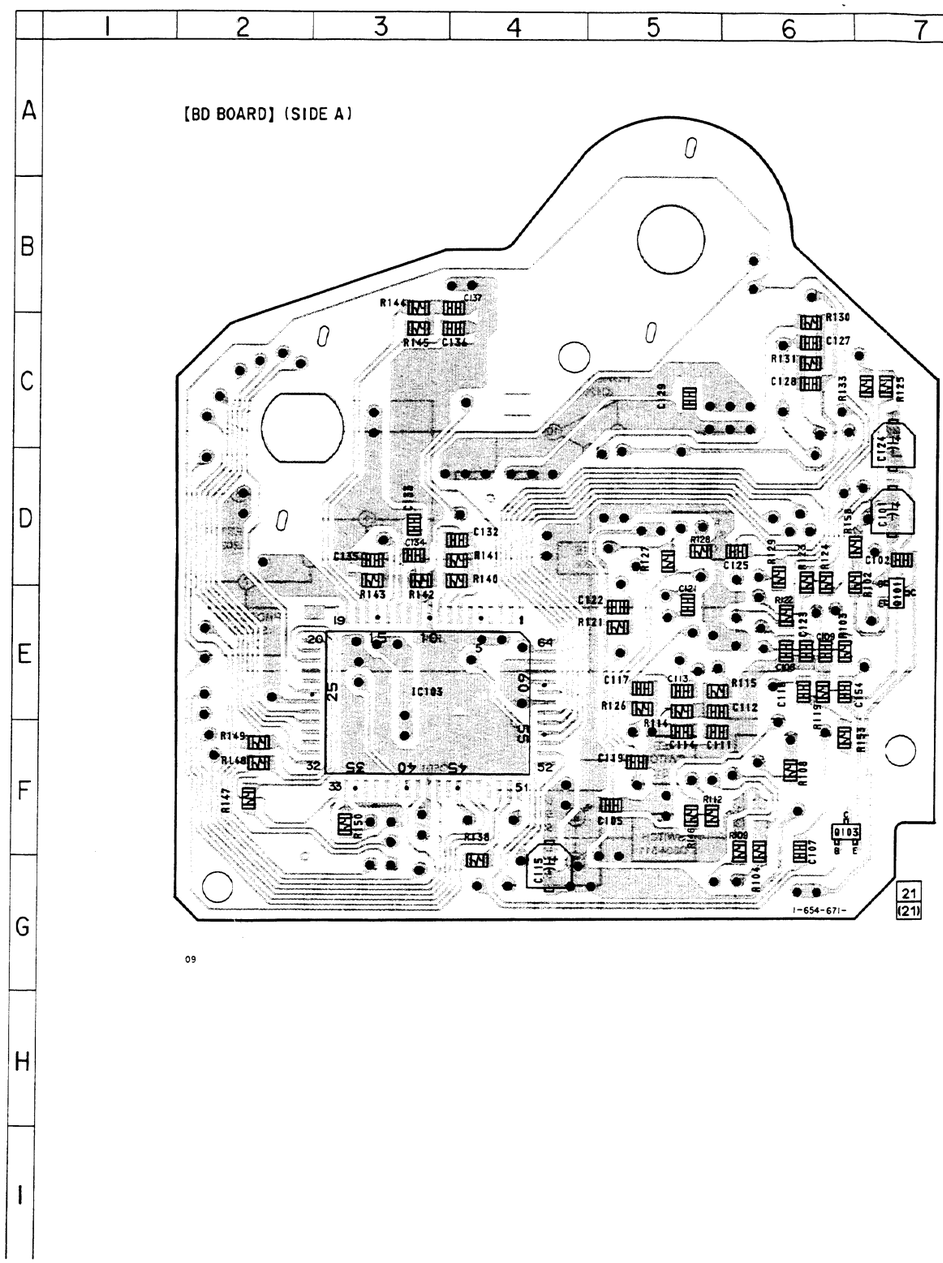

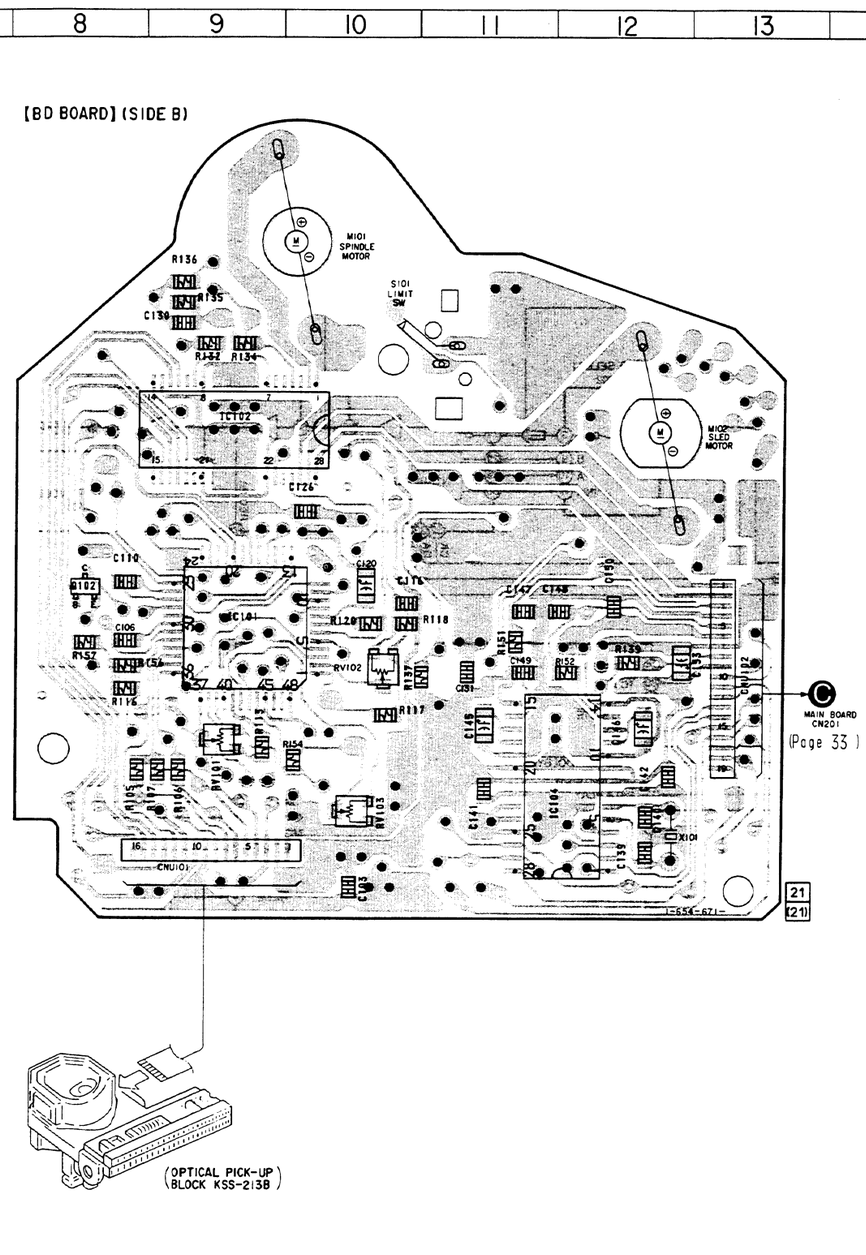

Note:

- ⟜—— : parts extracted from the component side.
- ● : Through hole.
- ▨ : Pattern from the side which enable seeing. (The other layer's patterns are not indicated.)

5-5. SCHEMATIC DIAGRAM — CD SECTION —

• See page 61 for IC Block Diagrams. (IC101 — 104)

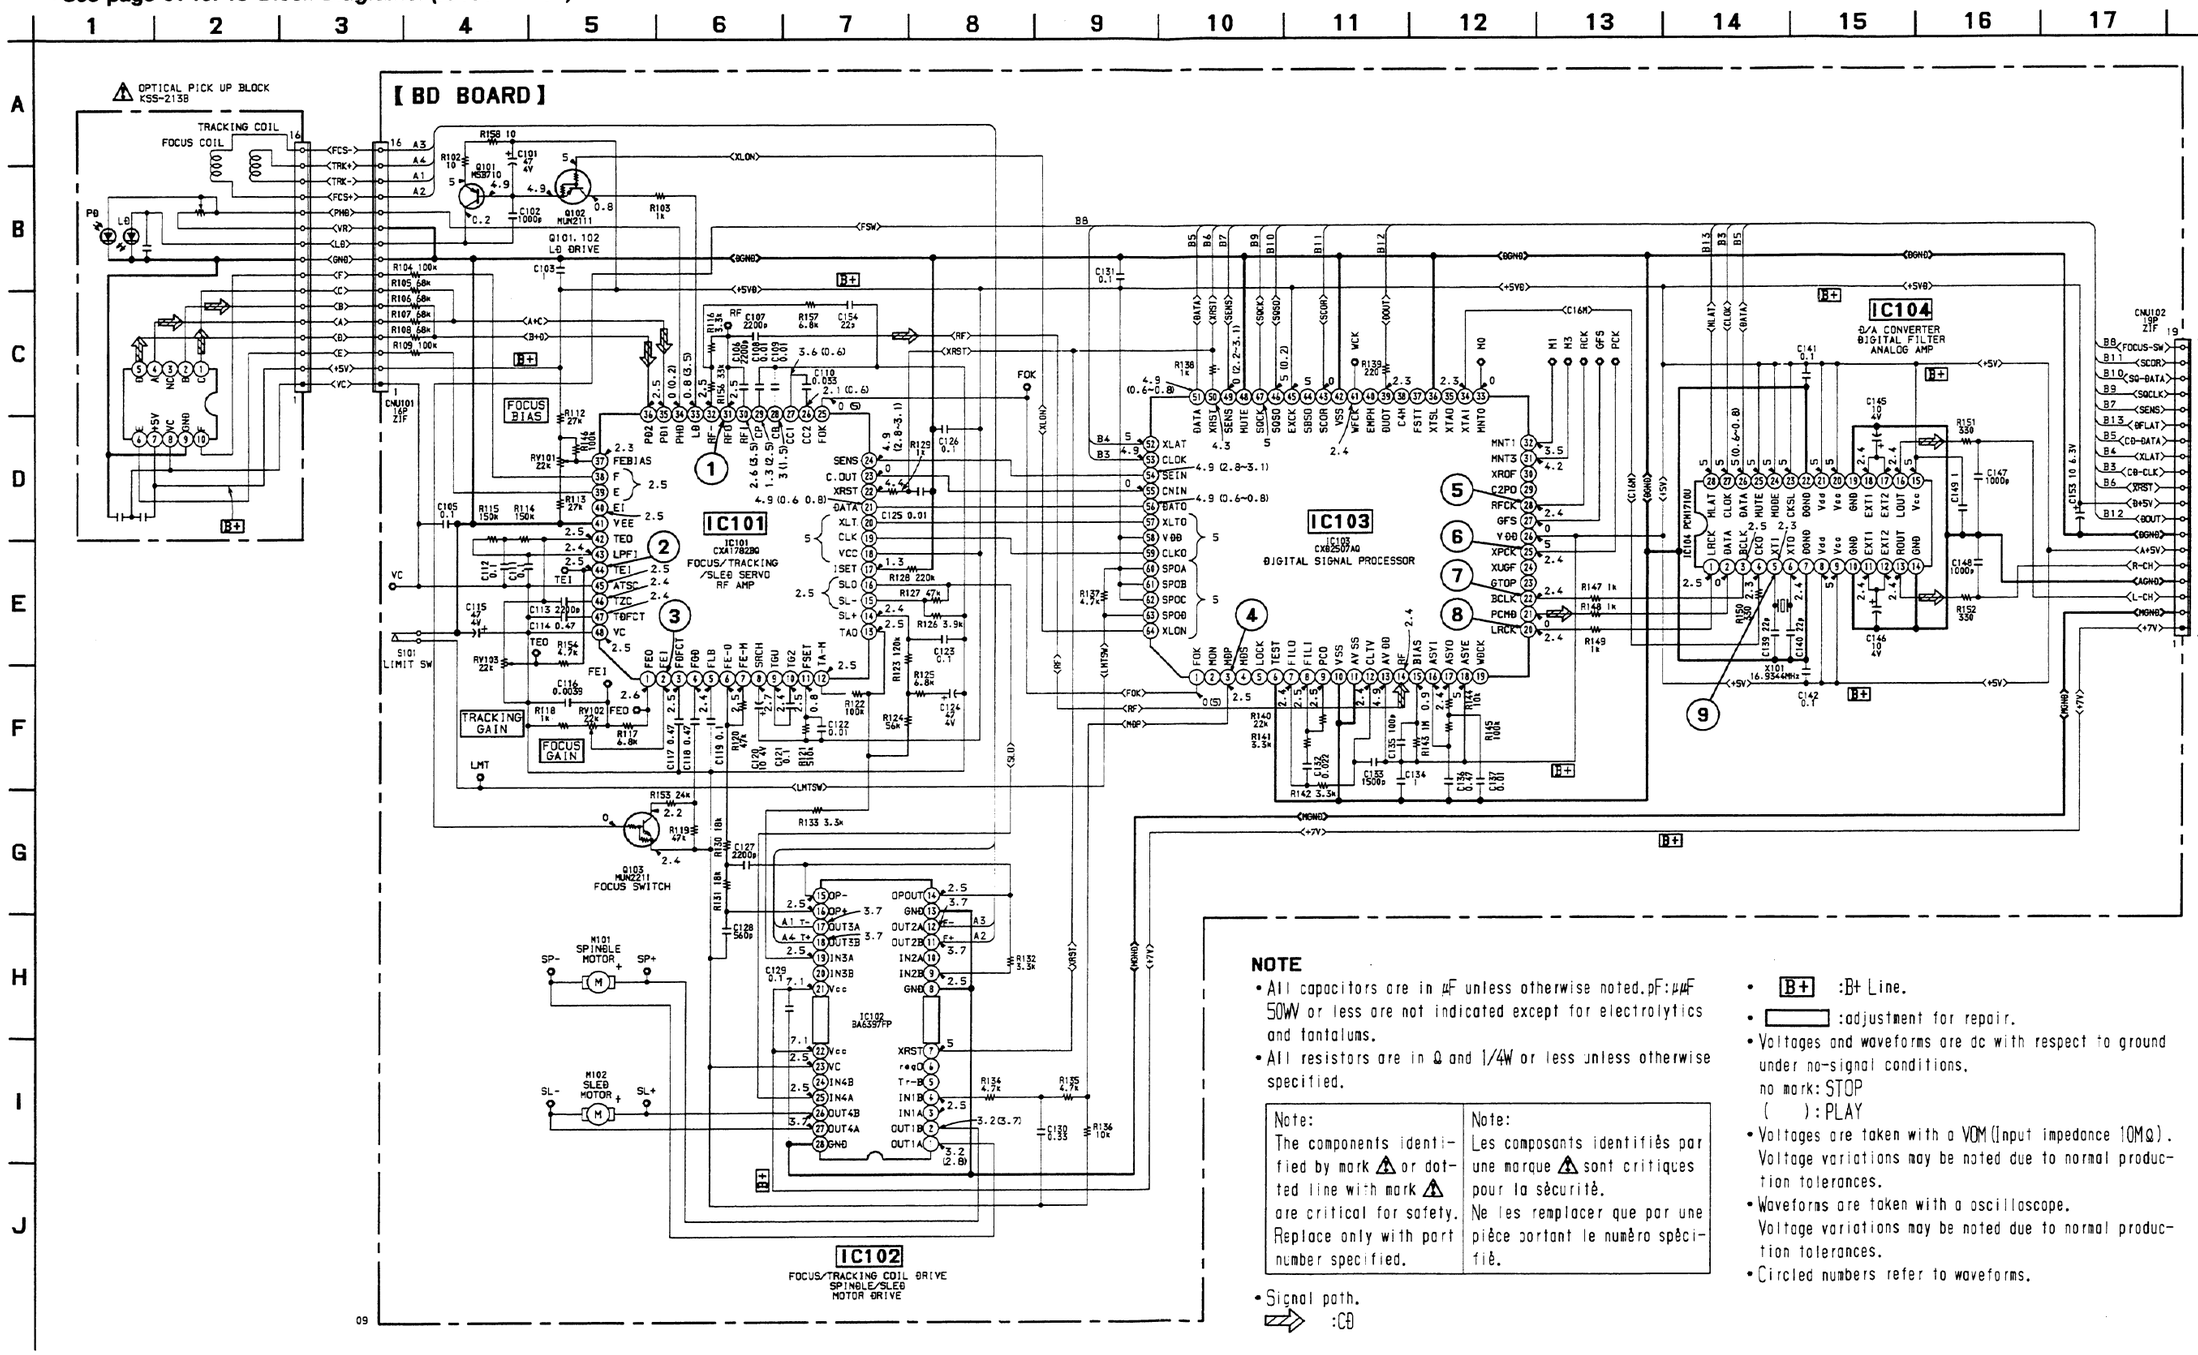

NOTE

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Note: Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Signal path. ⇨ :CD
- B+ :B+ Line.
- ▭ :adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
  no mark: STOP
  ( ): PLAY
- Voltages are taken with a VOM (Input impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.

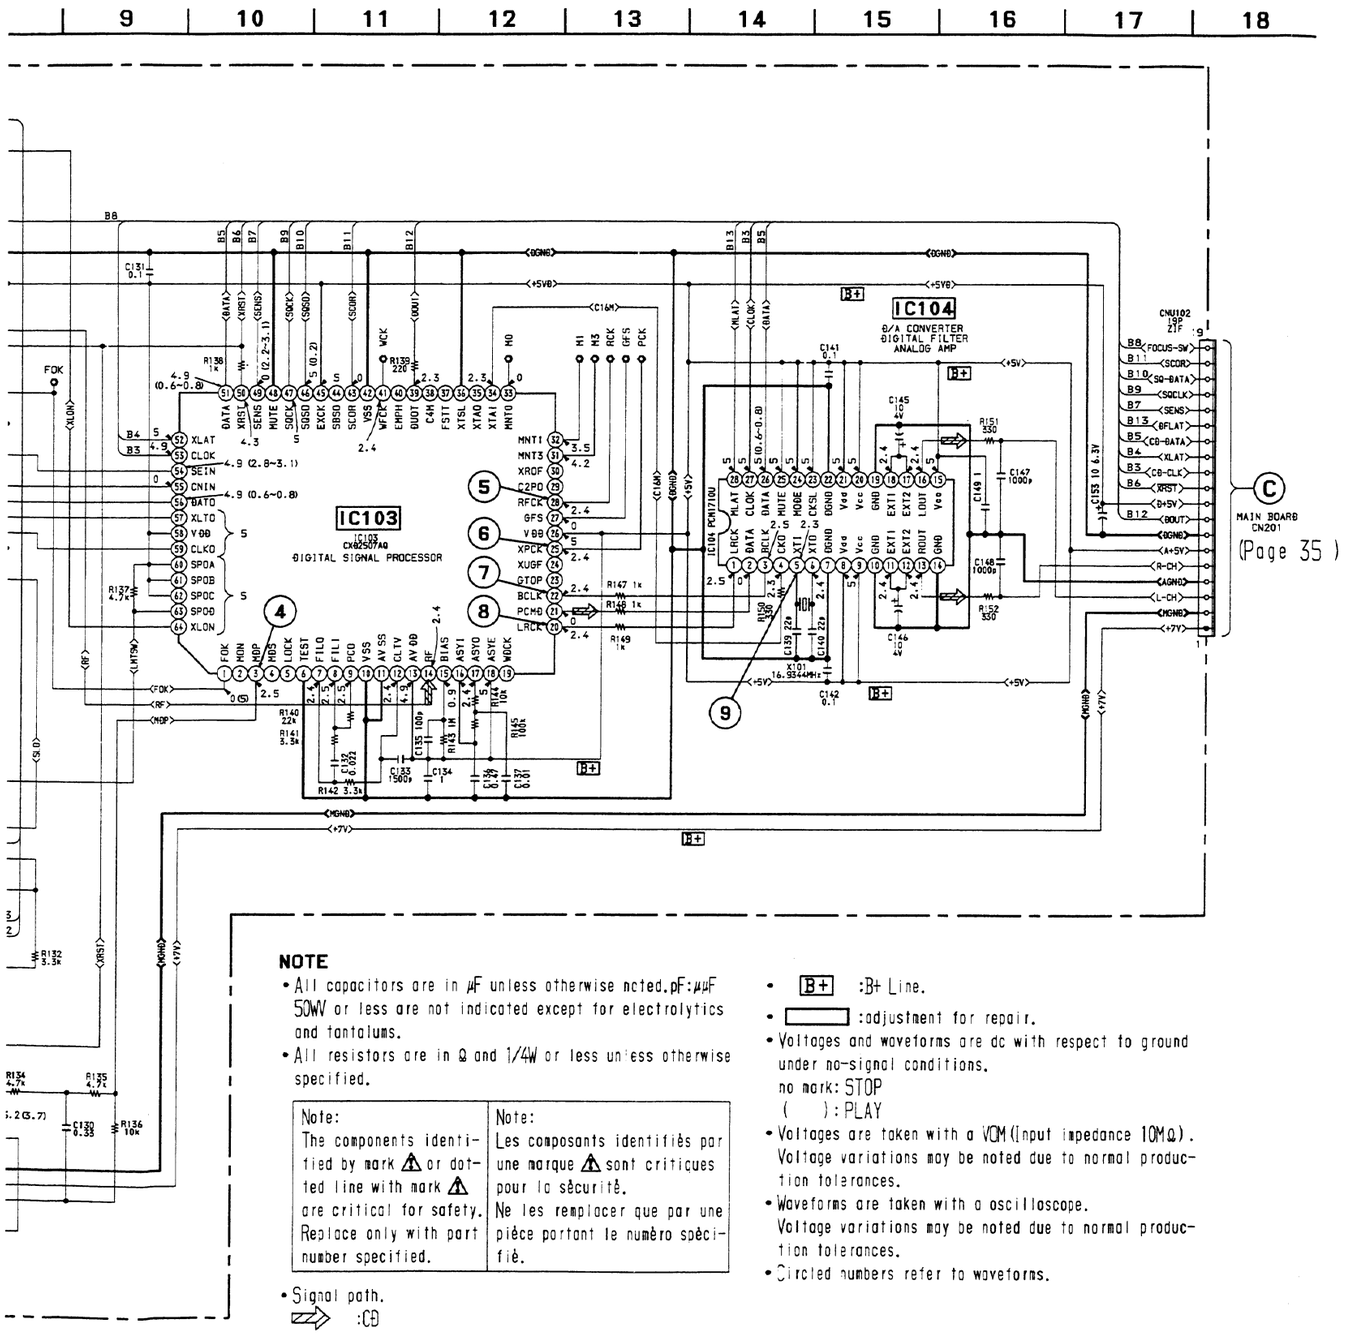

NOTE

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Signal path.
  ⇨ :CD
- B+ :B+ Line.
- ▭ :adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
  no mark: STOP
  ( ): PLAY
- Voltages are taken with a VOM (Input impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.

• **Waveforms**

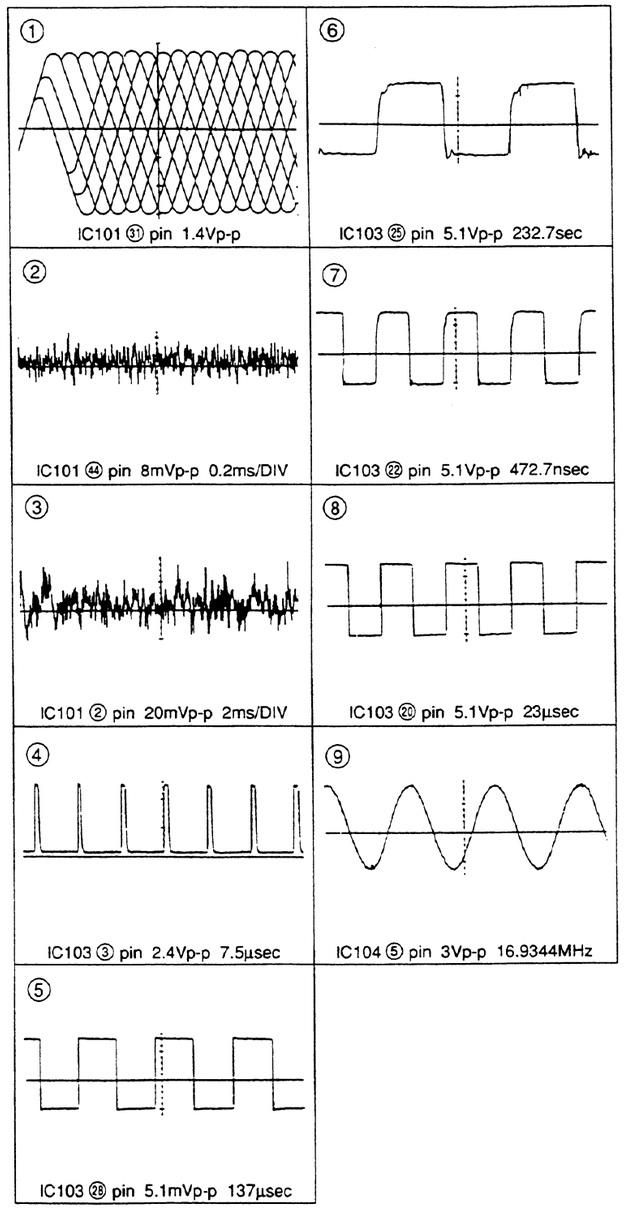

MC-Service

5-6. PRINTED WIRING BOARD — MAIN SECTION —

• See page 15 for Circuit Boards Location.

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D201	K-10	IC301	F-6
D202	J-10	IC302	E-4
D381	G-5	IC303	C-4
D382	G-5	IC304	G-3
D383	G-5	IC601	B-24
D384	H-9	IC701	I-8
D385	I-3	IC702	G-8
D386	G-5	IC801	B-15
D387	G-5	IC802	B-11
D450	E-7	IC901	C-9
D451	E-7	IC1001	G-14
D452	E-7	IC1002	H-11
D453	E-7	IC1003	E-14
D701	G-8	IC1004	E-16
D702	G-8	IC1201	L-20
D703	G-9	IC1202	H-13
D704	G-9		
D705	G-9	Q301	A-7
D706	G-9	Q351	K-5
D707	G-7	Q352	I-5
D708	G-9	Q353	I-5
D901	E-8	Q354	I-5
D939	B-10	Q380	I-4
D940	D-8	Q381	D-7
D1001	B-13	Q382	D-7
D1002	B-14	Q401	B-7
D1003	D-15	Q450	B-7
D1004	D-14	Q451	D-7
D1005	D-14	Q701	G-9
D1006	D-15	Q820	E-11
D1007	G-14	Q901	F-9
D1008	B-13	Q902	F-9
D1009	F-14	Q951	E-8
D1010	F-16	Q952	E-8
D1013	C-14	Q953	F-10
D1014	C-14	Q954	F-10
D1017	G-13	Q1001	G-13
D1023	C-16	Q1002	H-14
D1031	D-13	Q1006	C-15
D1059	F-14	Q1011	B-13
D1069	F-15	Q1201	K-19
D1201	K-20	Q1202	I-13
D1202	K-23	Q1203	I-12
D1204	H-15	Q1204	H-13
D1205	H-13	Q1205	H-11
D1251	K-22	Q1206	H-11
D1309	D-15	Q1207	I-13
D1310	D-14	Q1251	K-23

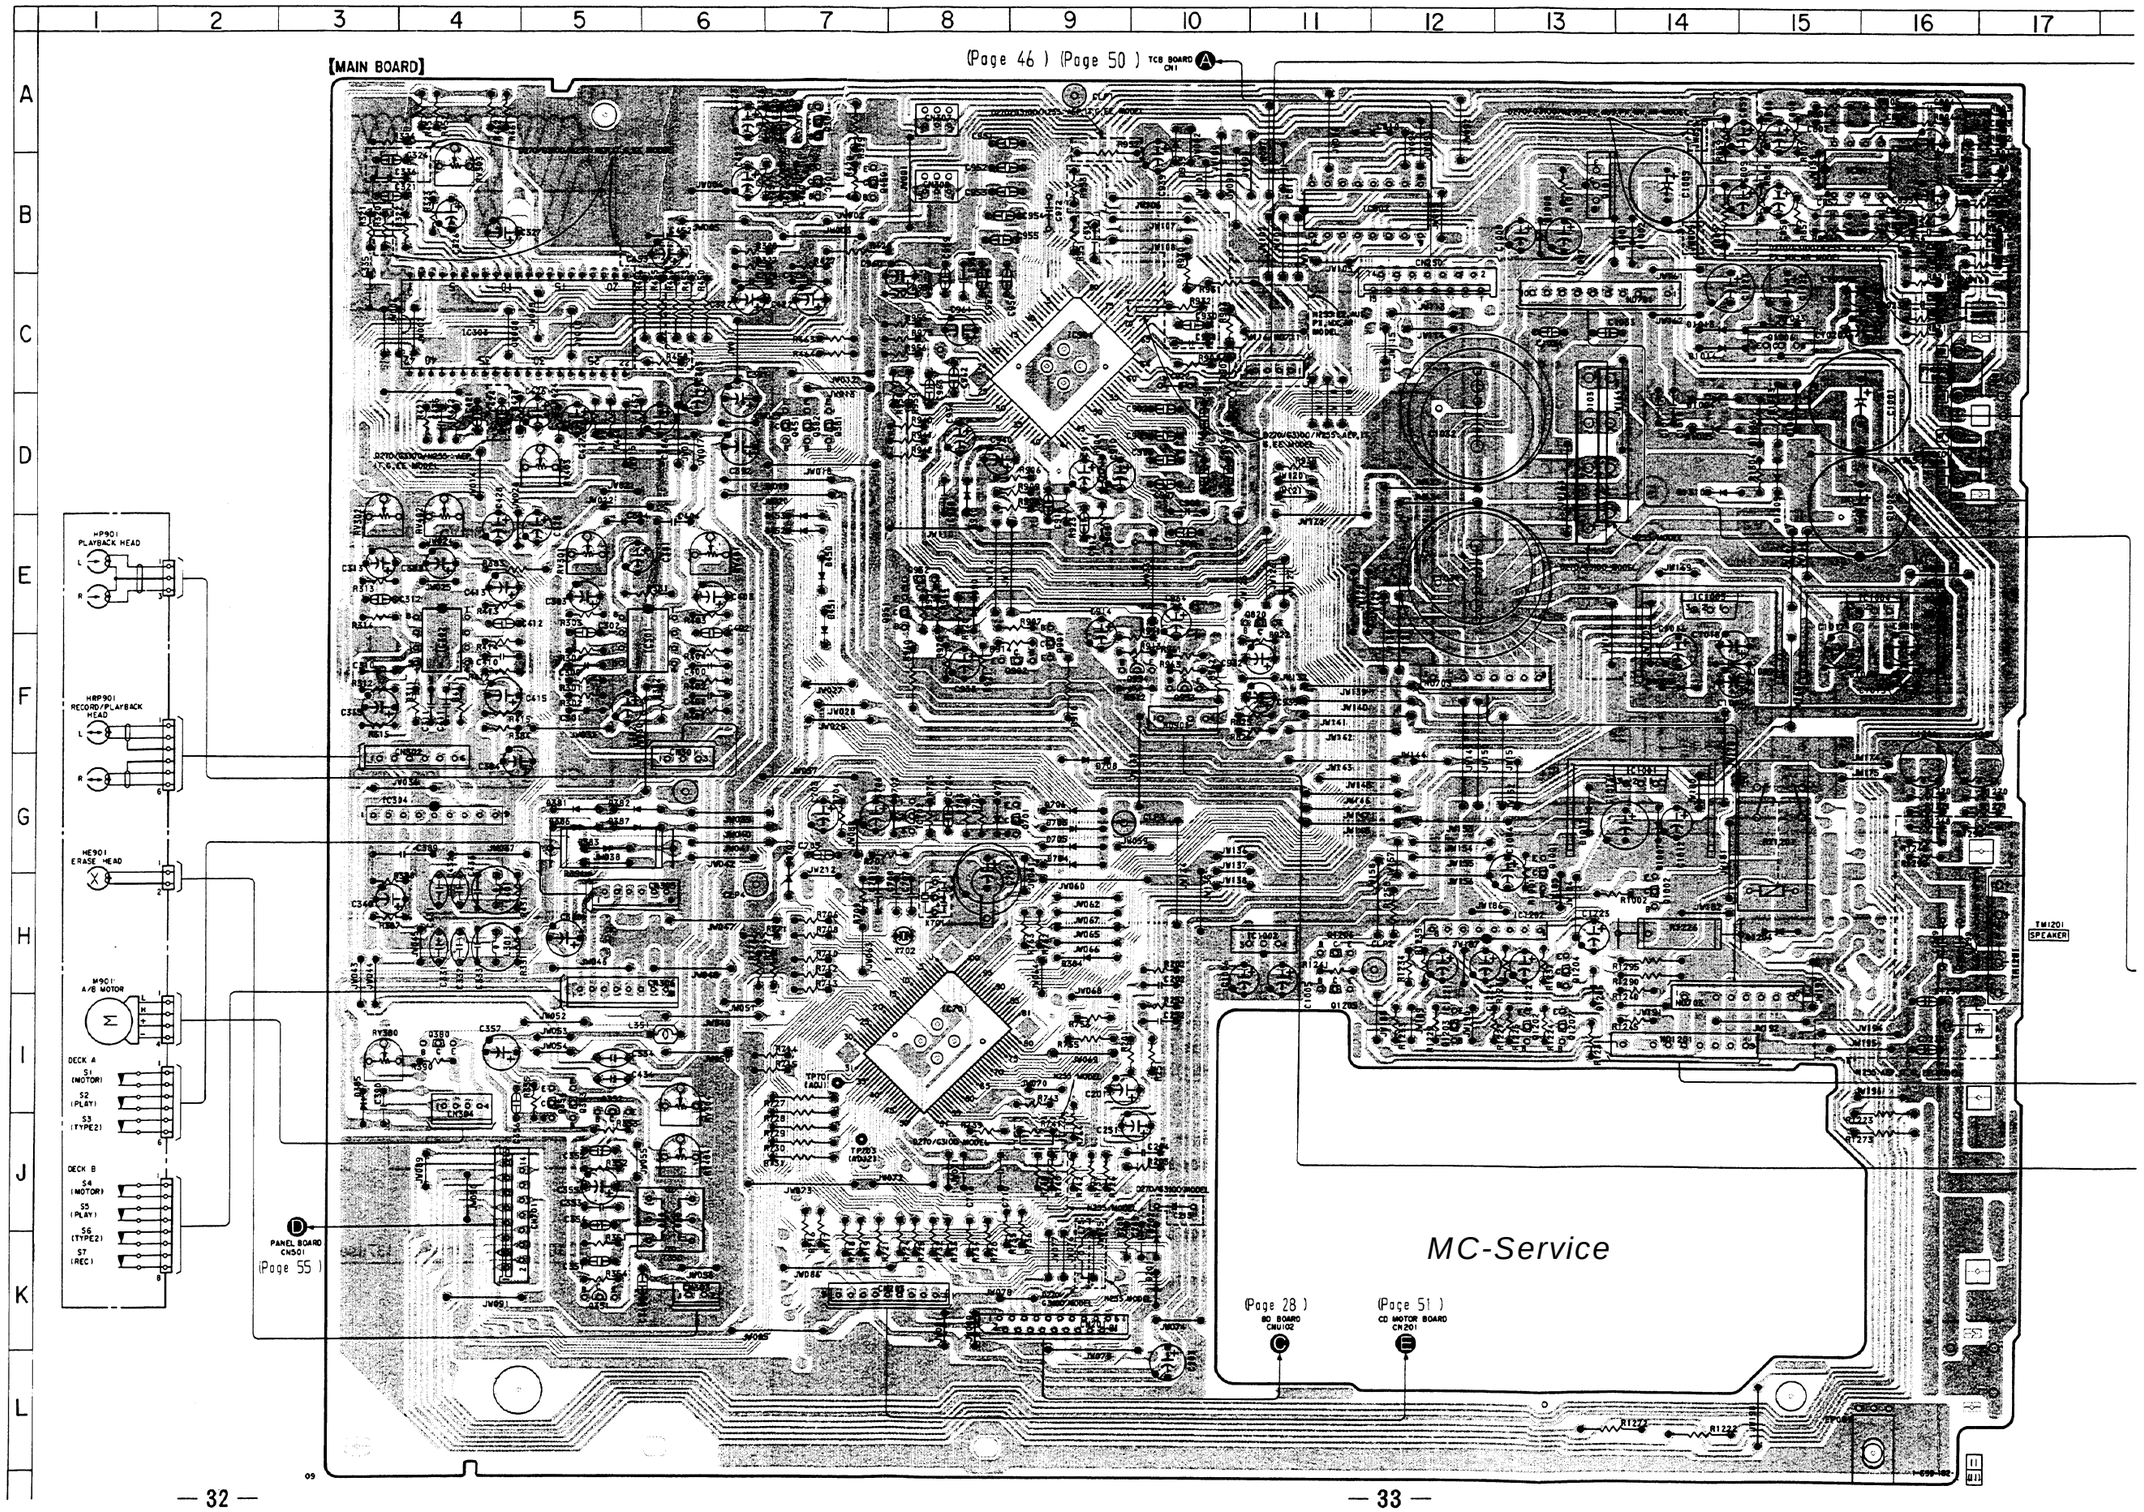

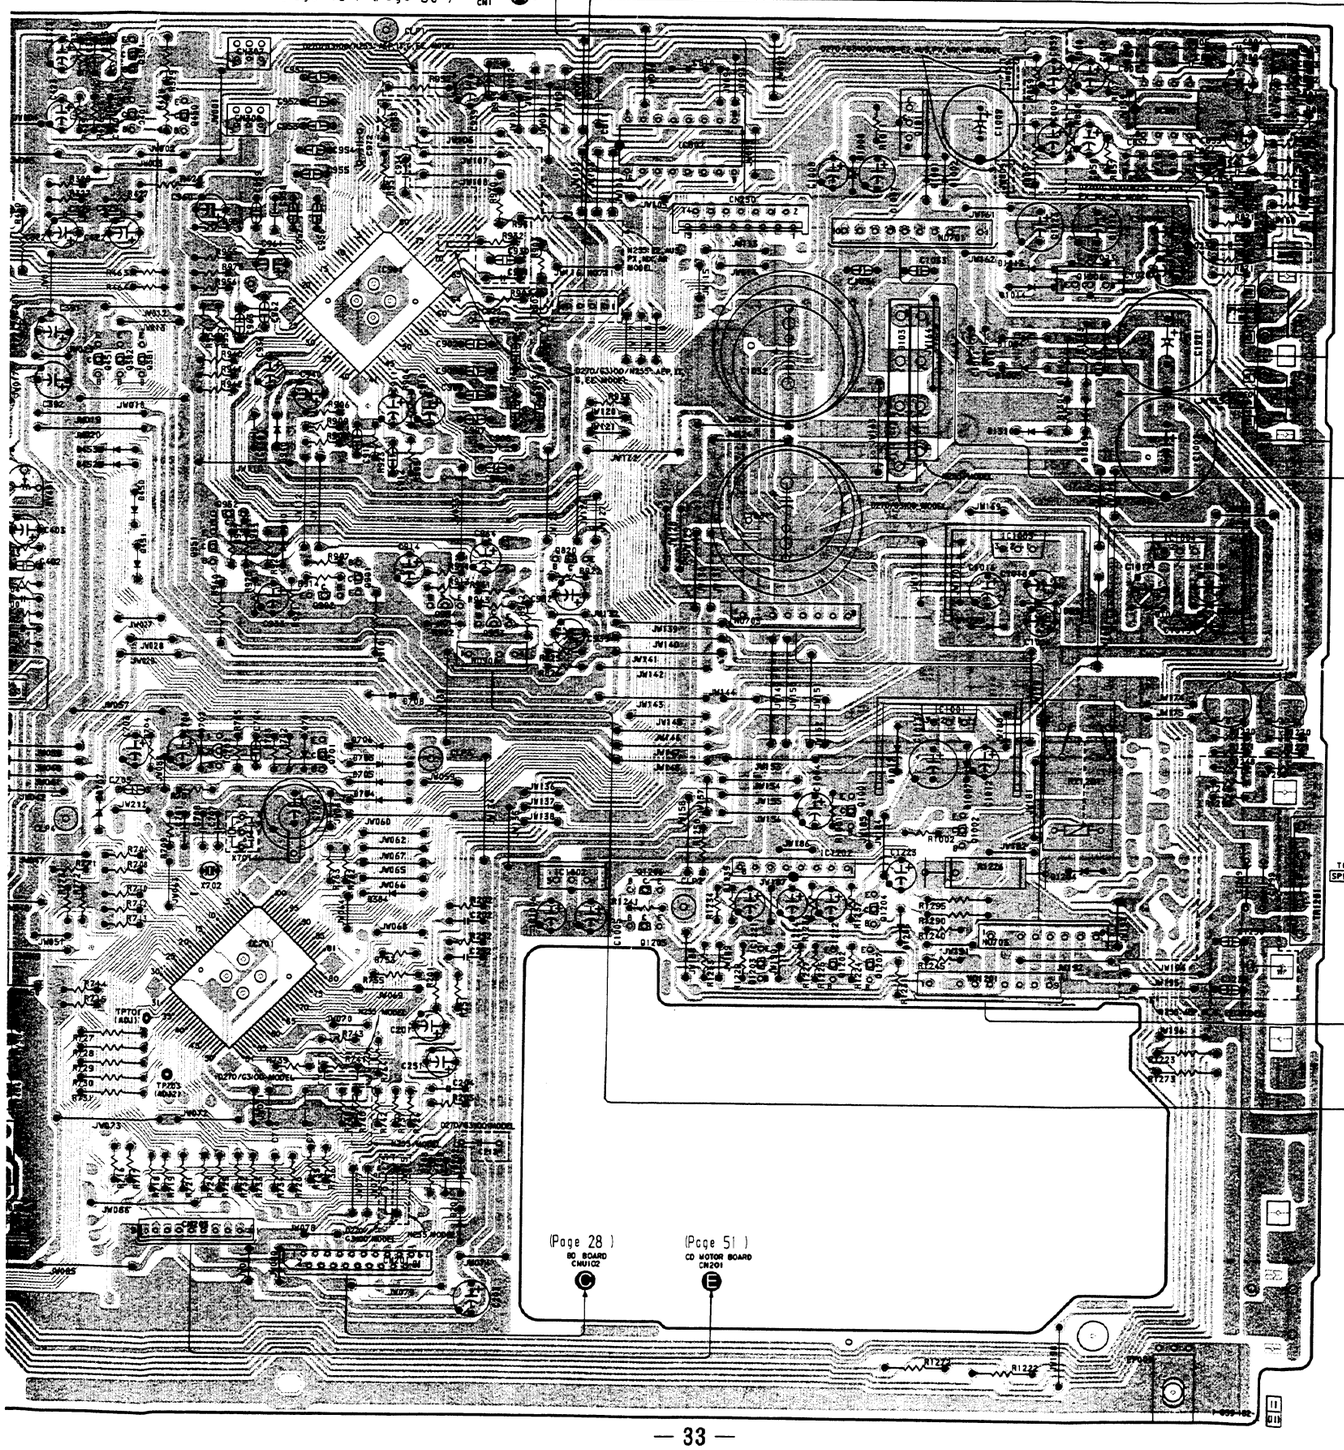

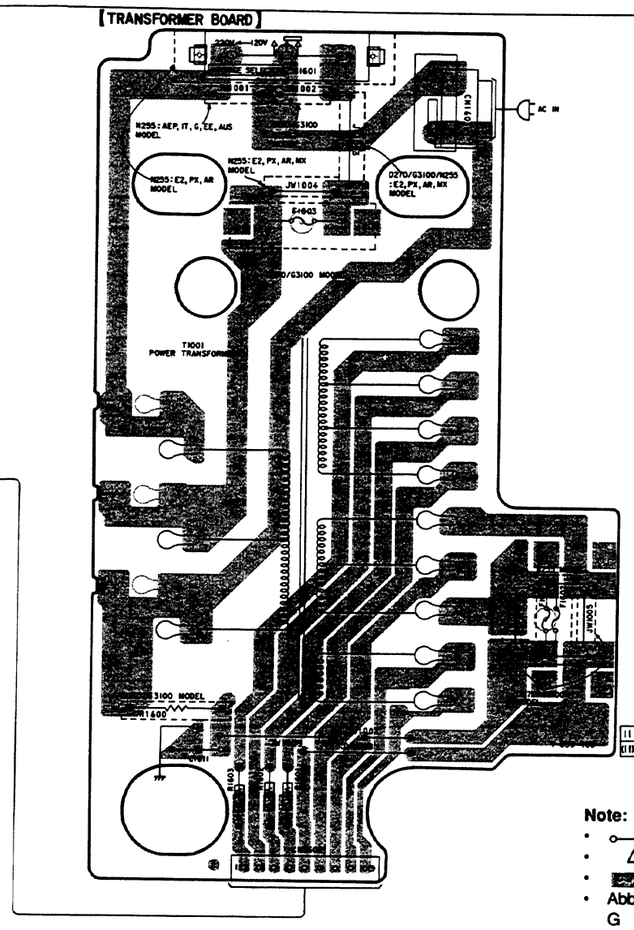

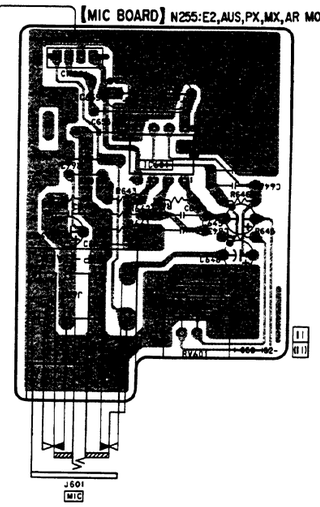

Note:

- ⟜ : parts extracted from the component side.
- △ : internal component.
- ▬ : Pattern from the side which enable seeing.
- Abbreviation
  - G : German model.
  - IT : Italian model.
  - EE : East European model.
  - MX : Mexican model.
  - AUS : Australian model.
  - AR : Argentine model.

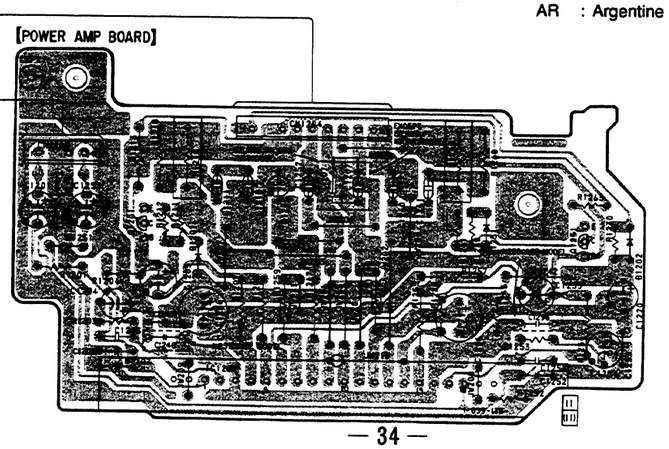

— 33 —

— 34 —

5-7. SCHEMATIC DIAGRAM — MAIN SECTION —

• See page 58 for IC Pin Function. (IC701)

【MIC BOARD】 N255:E2, AUS, PX, MX, AR MODEL

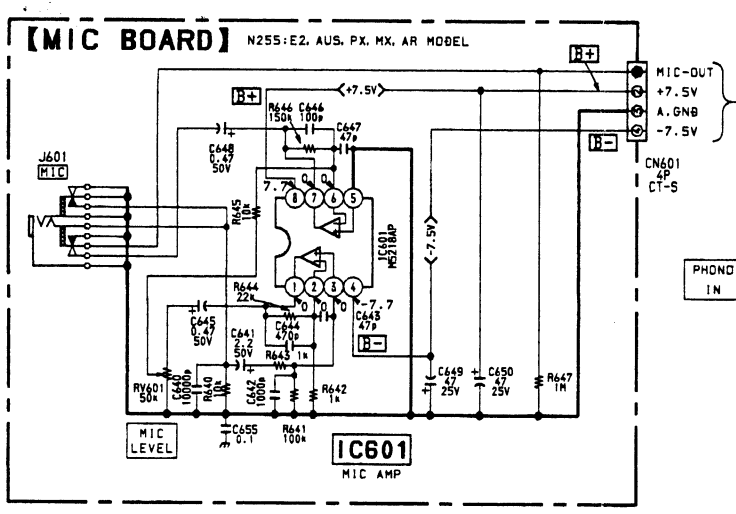

【MAIN BOARD (1/2)】

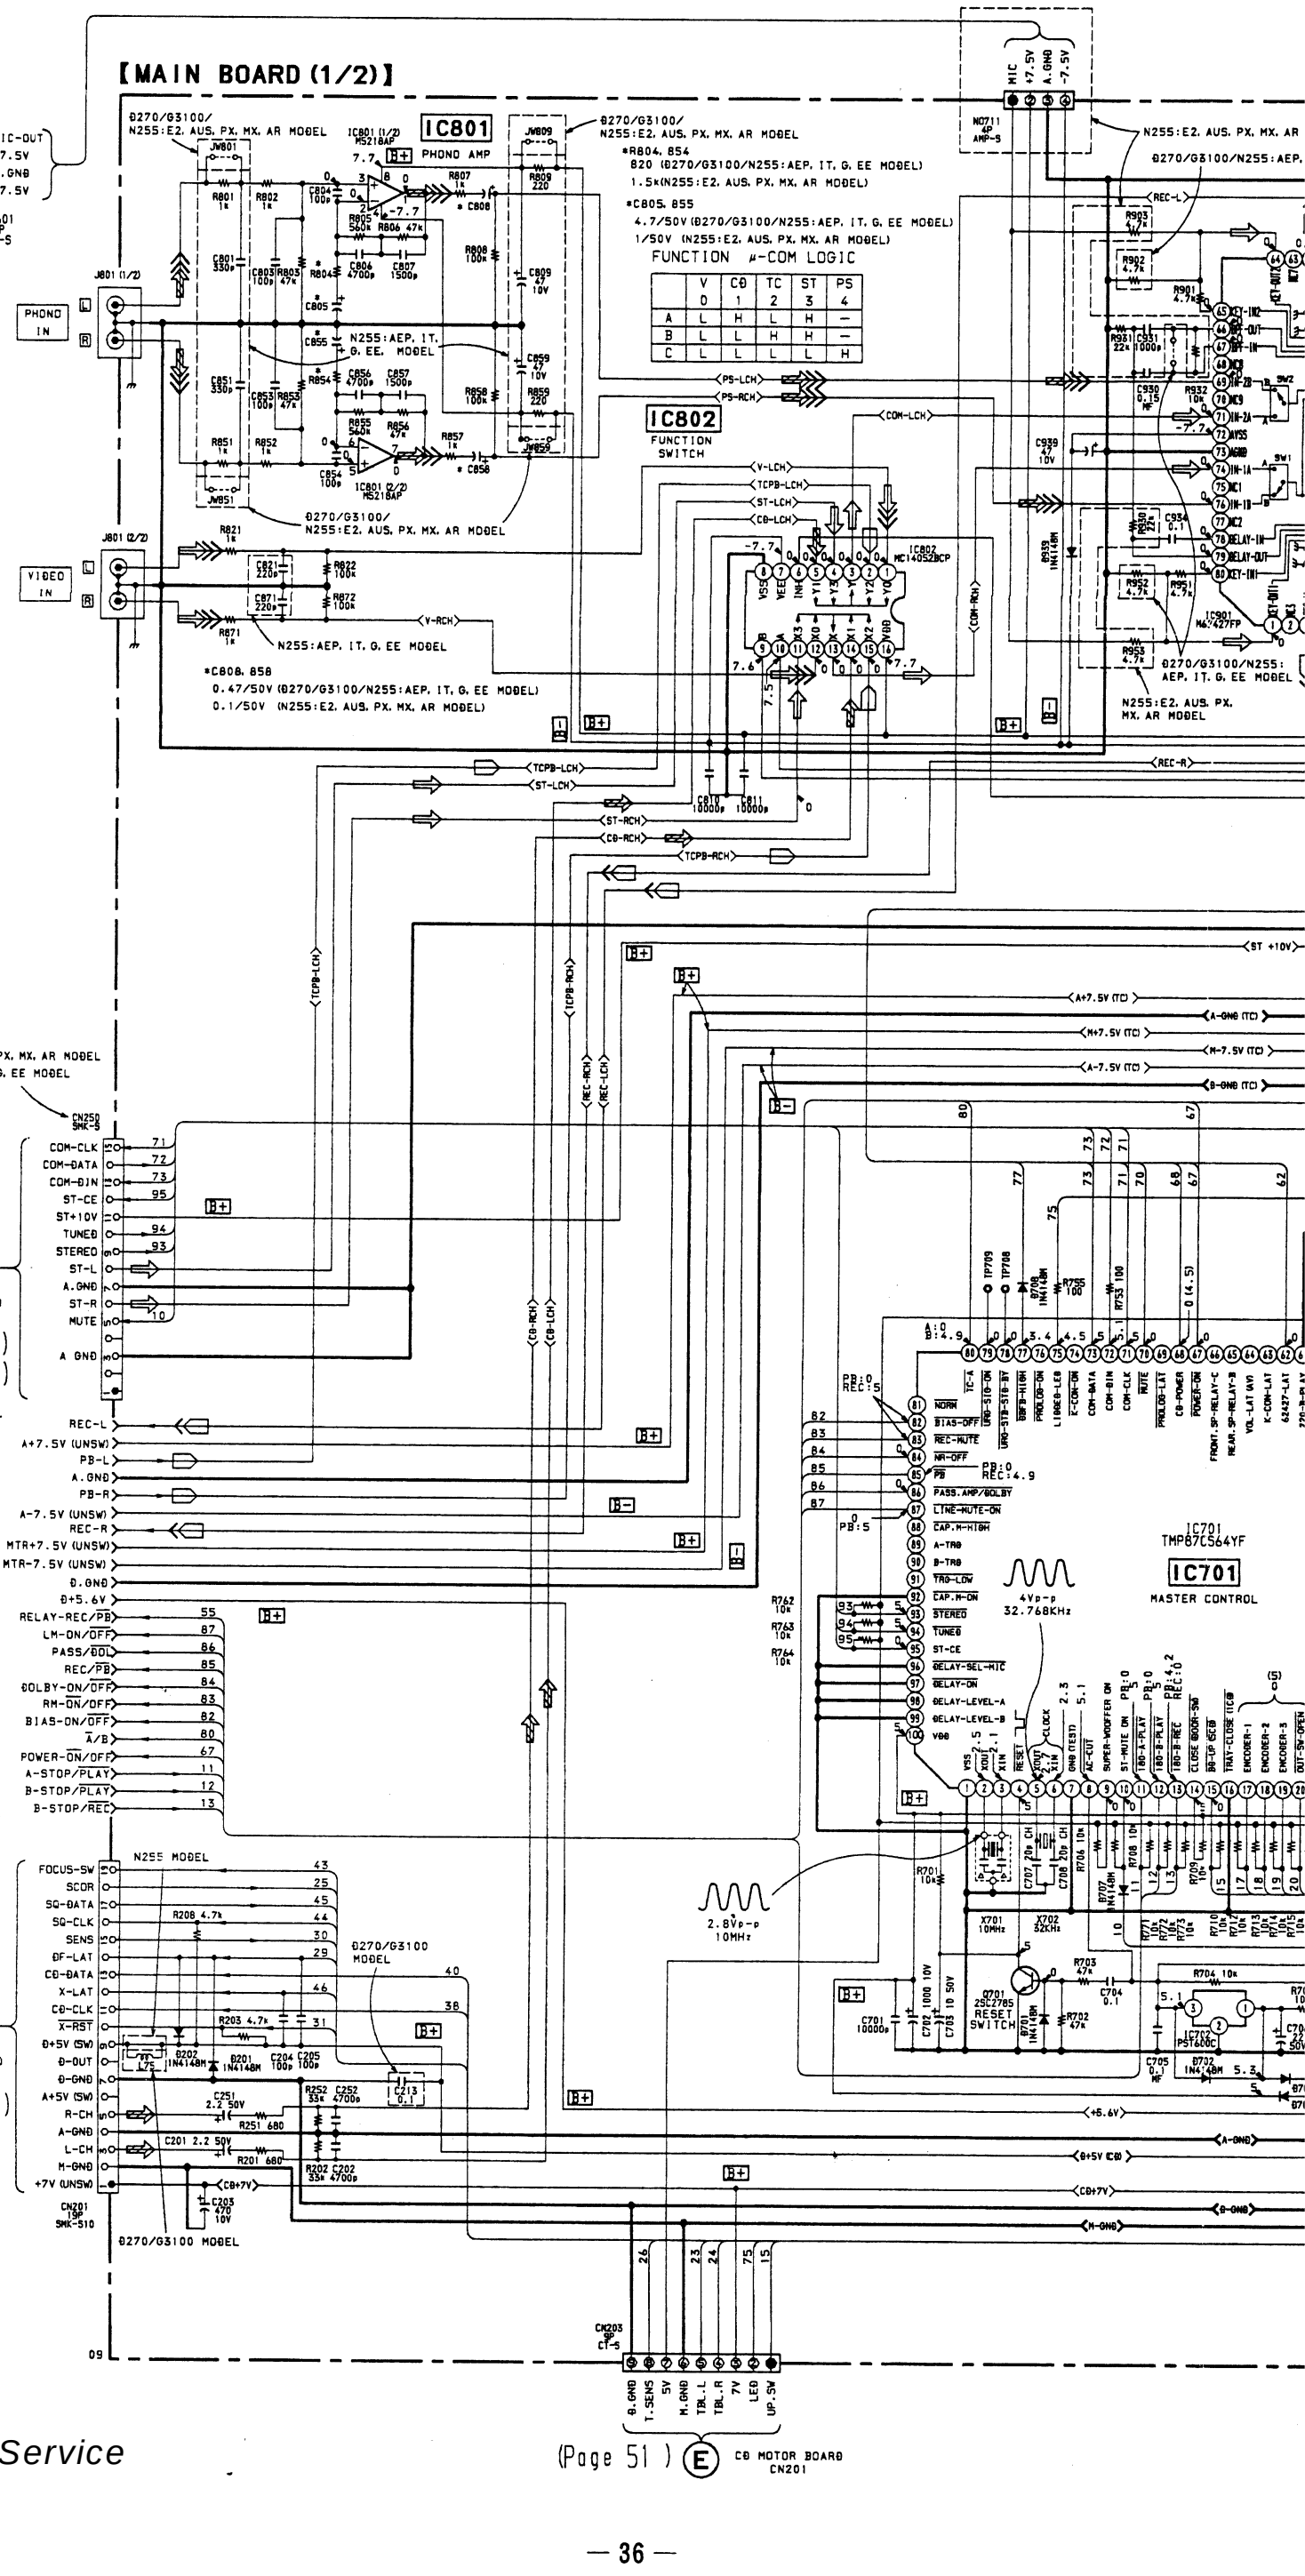

NOTE

- All capacitors are in μF unless otherwise noted. pF: μμF
  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ :internal component.
- :nonflammable resistor.
- :fusible resistor.
- :panel designation.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- B+ :B+ Line.
- B- :B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark: FM
  ( ): CD PLAY
- Voltages are taken with a VOM (Input impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Abbreviation
  CND: Canadian model.
  G : German model.
  IT : Italian model.
  EE : East European model.
  MX : Mexican model.
  AUS: Australian model.
  AR : Argentine model.
- Signal path.
  :FM
  :VIDEO
  :PB
  :REC
  :CD
  :PHONO

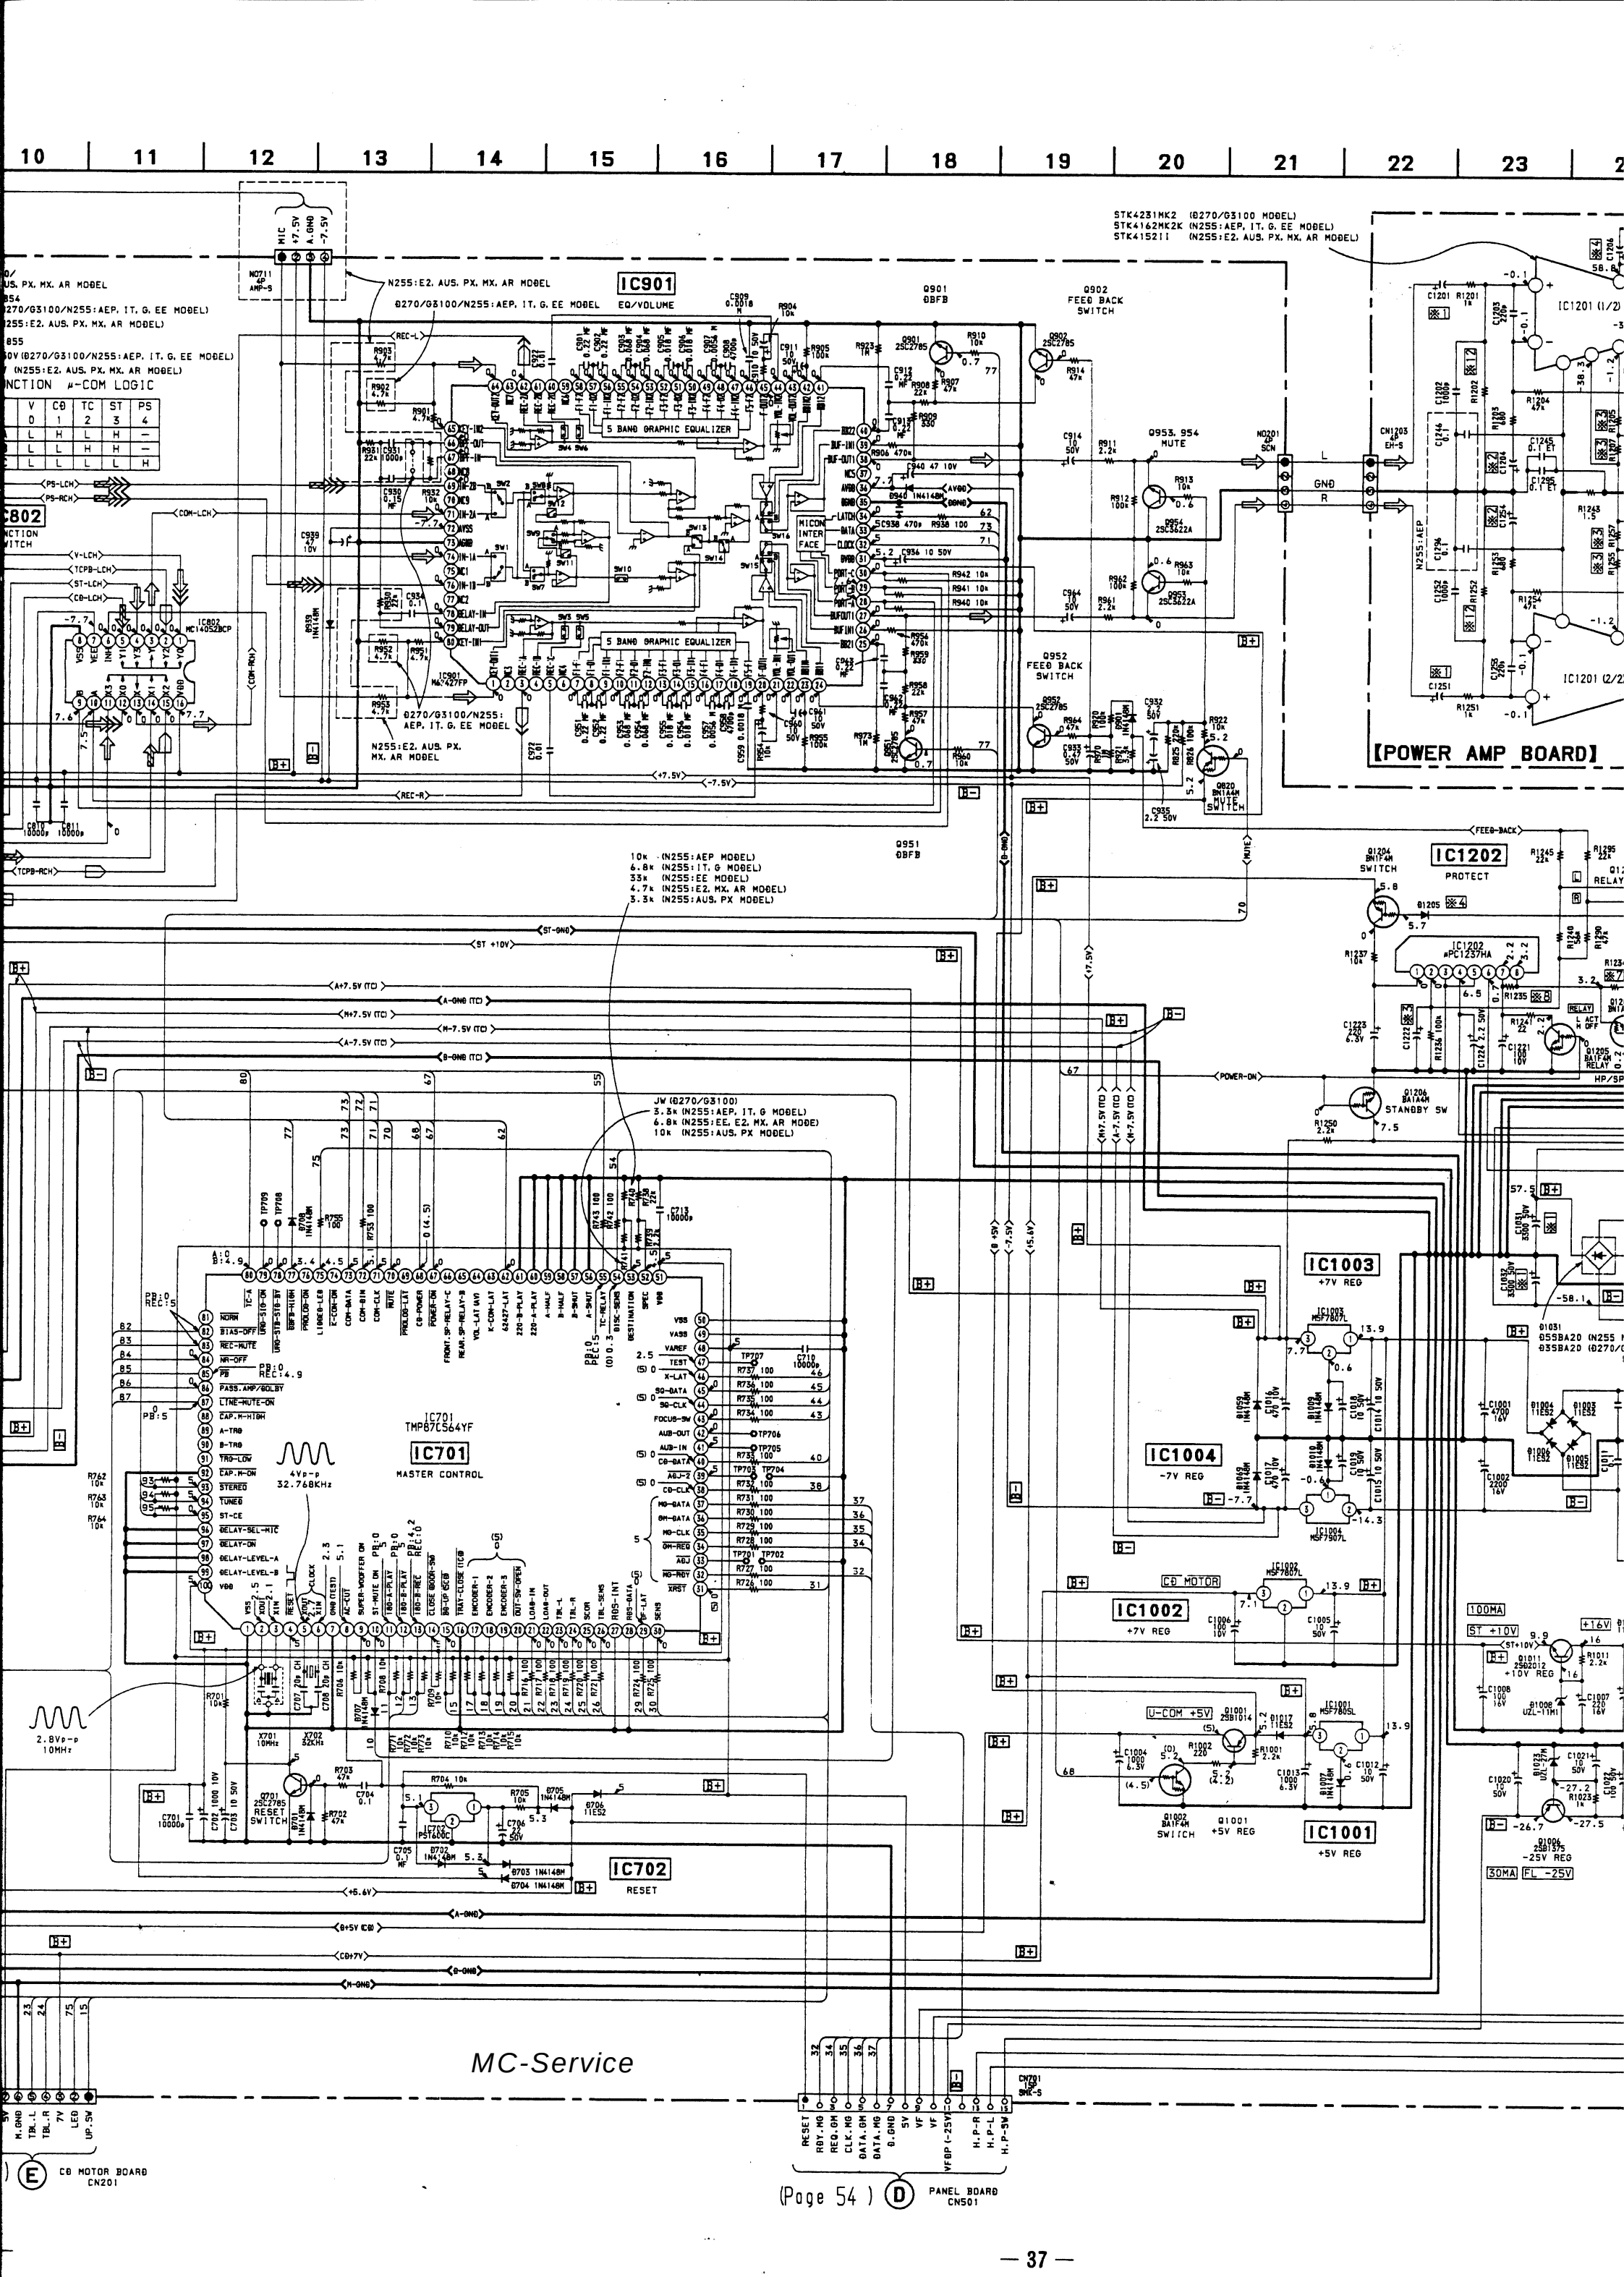
10
11
12
13
14
15
16
17
18
19
20
21
22
23
MIC
+7.5V
A.GND
-7.5V
NO711 4P AMP-S
N255:E2, AUS, PX, MX, AR MODEL
IC901
EQ/VOLUME
Q901 ΘBFB
Q902 FEED BACK SWITCH
STK4231MK2 (Θ270/G3100 MODEL)
STK4162MK2K (N255:AEP, IT, G, EE MODEL)
STK41521I (N255:E2, AUS, PX, MX, AR MODEL)
5 BAND GRAPHIC EQUALIZER
MICON INTERFACE
Q953, 954 MUTE
NO201 4P SCN
CN1203 4P EH-S
IC1201 (1/2)
IC1201 (2/2)
N255:AEP
【POWER AMP BOARD】
IC802 MC14052BCP
IC901 M62427FP
Θ270/G3100/N255: AEP, IT, G, EE MODEL
N255:E2, AUS, PX, MX, AR MODEL
Q952 FEED BACK SWITCH
Q951 ΘBFB
10k (N255:AEP MODEL)
6.8k (N255:IT, G MODEL)
33k (N255:EE MODEL)
4.7k (N255:E2, MX, AR MODEL)
3.3k (N255:AUS, PX MODEL)
JW (Θ270/G3100)
3.3k (N255:AEP, IT, G MODEL)
6.8k (N255:EE, E2, MX, AR MODEL)
10k (N255:AUS, PX MODEL)
IC1202 PROTECT
Q1204 BN1F4M SWITCH
IC1202 μPC1237HA
Q1205 BA1A4M RELAY
Q1206 BA1A4M STANΘBY SW
IC1003 +7V REG
IC1004 -7V REG
IC1002 +7V REG
IC1001 +5V REG
Q1002 BA1F4M SWITCH
Q1001 +5V REG
IC701 TMP87C564YF
MASTER CONTROL
IC702 PST600C
RESET
Q701 2SC2785 RESET SWITCH
X701 10MHz
X702 32KHz
4Vp-p 32.768KHz
2.8Vp-p 10MHz
C0 MOTOR
U-COM +5V
100MA
ST +10V
FL -25V
MC-Service
E C0 MOTOR BOARD CN201
D PANEL BOARD CN501
(Page 54)

20 21 22 23 24 25 26 27 28 29 30

STK4231MK2 (D270/G3100 MODEL)
STK4162MK2K (N255:AEP, IT, G, EE MODEL)
STK4152II (N255:E2, AUS, PX, MX, AR MODEL)

EXCEPT E2, AUS, PX, MX, AR MODEL

E2, AUS, PX, MX, AR MODEL

IC1201 (1/2)

IC1201 (2/2)

IC1201
POWER AMP

【POWER AMP BOARD】

Q953, 954 MUTE

N255:AEP

Q1201, 1251 OVER LOAD DETECT

※	N255	D270/G3100
1	4.7/50V	10/100V
2	47/10V	47/50V
3	2.2k 1/2W	4.7k 1/2W
4	100/50V	22/100V
5	1k 1/2W	1.8k 1/2W
6	15k	22k
7	1N4148M	US1090M
8	0.22 2W	0.1 2W
9	10k	56k
10	470/10V	100/10V
11	330k	390k
12	680	470

IC1202
PROTECT

Q1202, 1203 RELAY SWITCHING SCN

IC1202 μPC1237HA

Q1204 BN1F4M SWITCH

Q1205 BA1A4M RELAY

Q1207 HP/SP SELECT SWITCH

Q1206 BA1A4M STANDBY SW

1.8K (D270/G3100 MODEL)
680 (N255:AEP, G, IT, EE MODEL)
390 (N255:E2, AUS, PX, MX, AR MODEL)

N255:AEP, IT, G, EE MODEL

TM1201 4P SPEAKER

※	N255	D270/G3100
1	3300/50V	4700/71V
2	0.22	0.22/100V
3	220/10V	100/10V
4	1N4148M	US1090M
5	2SA1175	2SA988
6	220	470 1/2W
7	4.7k	9.1k
8	33k	47k

IC1003 +7V REG

IC1004 -7V REG

IC1002 +7V REG

IC1001 +5V REG

Q1001 +5V REG

Q1002 BA1F4M SWITCH

Q1011 2SD2012 +10V REG

Q1006 2SB1375 -25V REG

D1031 B55BA20 (N255 MODEL)
B35BA20 (D270/G3100 MODEL)

TA AC OFF

【TRANSFORMER BOARD】

N255:E2, PX, AR, MX MODEL

N255:E2, PX, AR MODEL

S1601 VOLTAGE SELECTOR 220V 120V

T1001 POWER TRANSFORMER

F1601 5A/125V
F1602 5A/125V
F1603 125V
5A (US MODEL)
4A (CND MODEL)

CNP1601 AC IN

N255:AEP, IT, G, EE, AUS MODEL

D270/G3100 N255:MX MODEL

D270/G310Q MODEL

N265 MODEL

D270/G3100 MODEL

1 (N255 MODEL)
0.68 (D270/G3100 MODEL)

• IC1201 Pin Layout
STK4162MK2, STK4152II

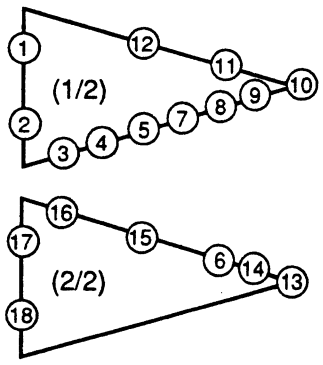

STK4231MK2

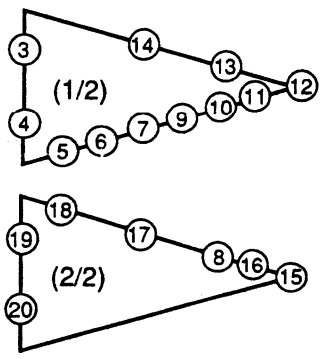

MC-Service

5-8. SCHEMATIC DIAGRAM — DECK SECTION —
• See page 32 for Printed Wiring Board. (MAIN BOARD)

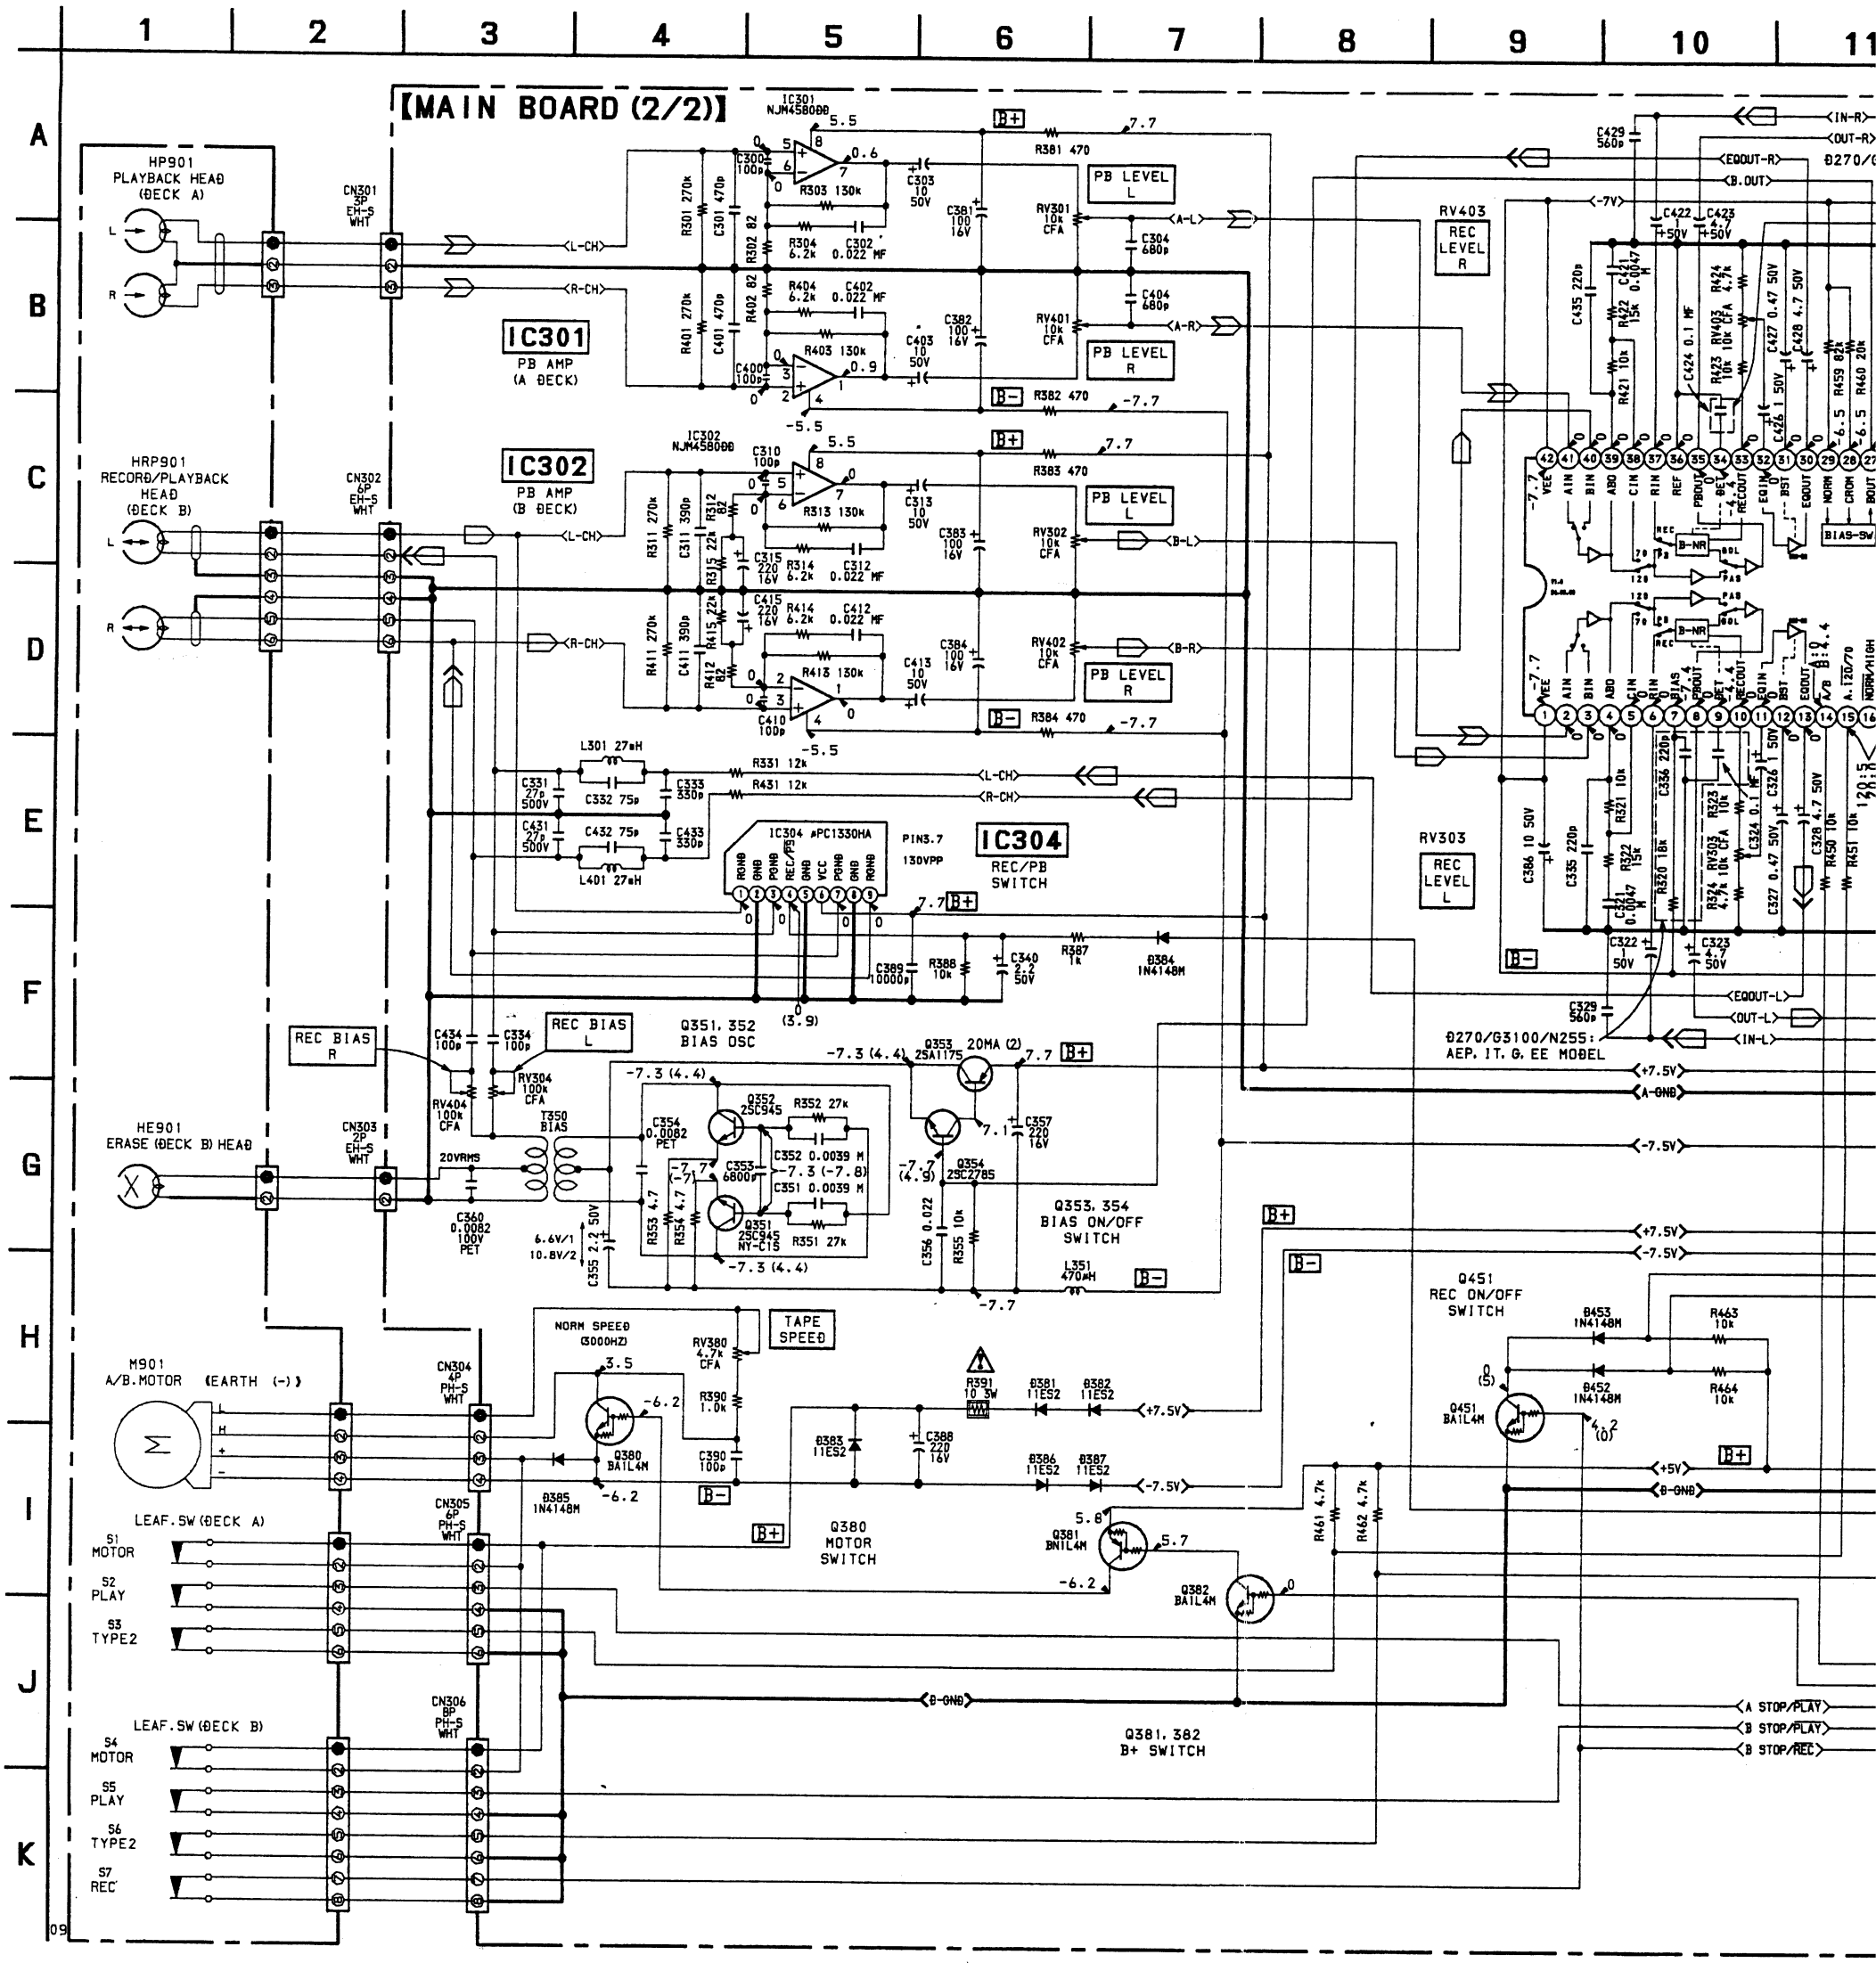

9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20

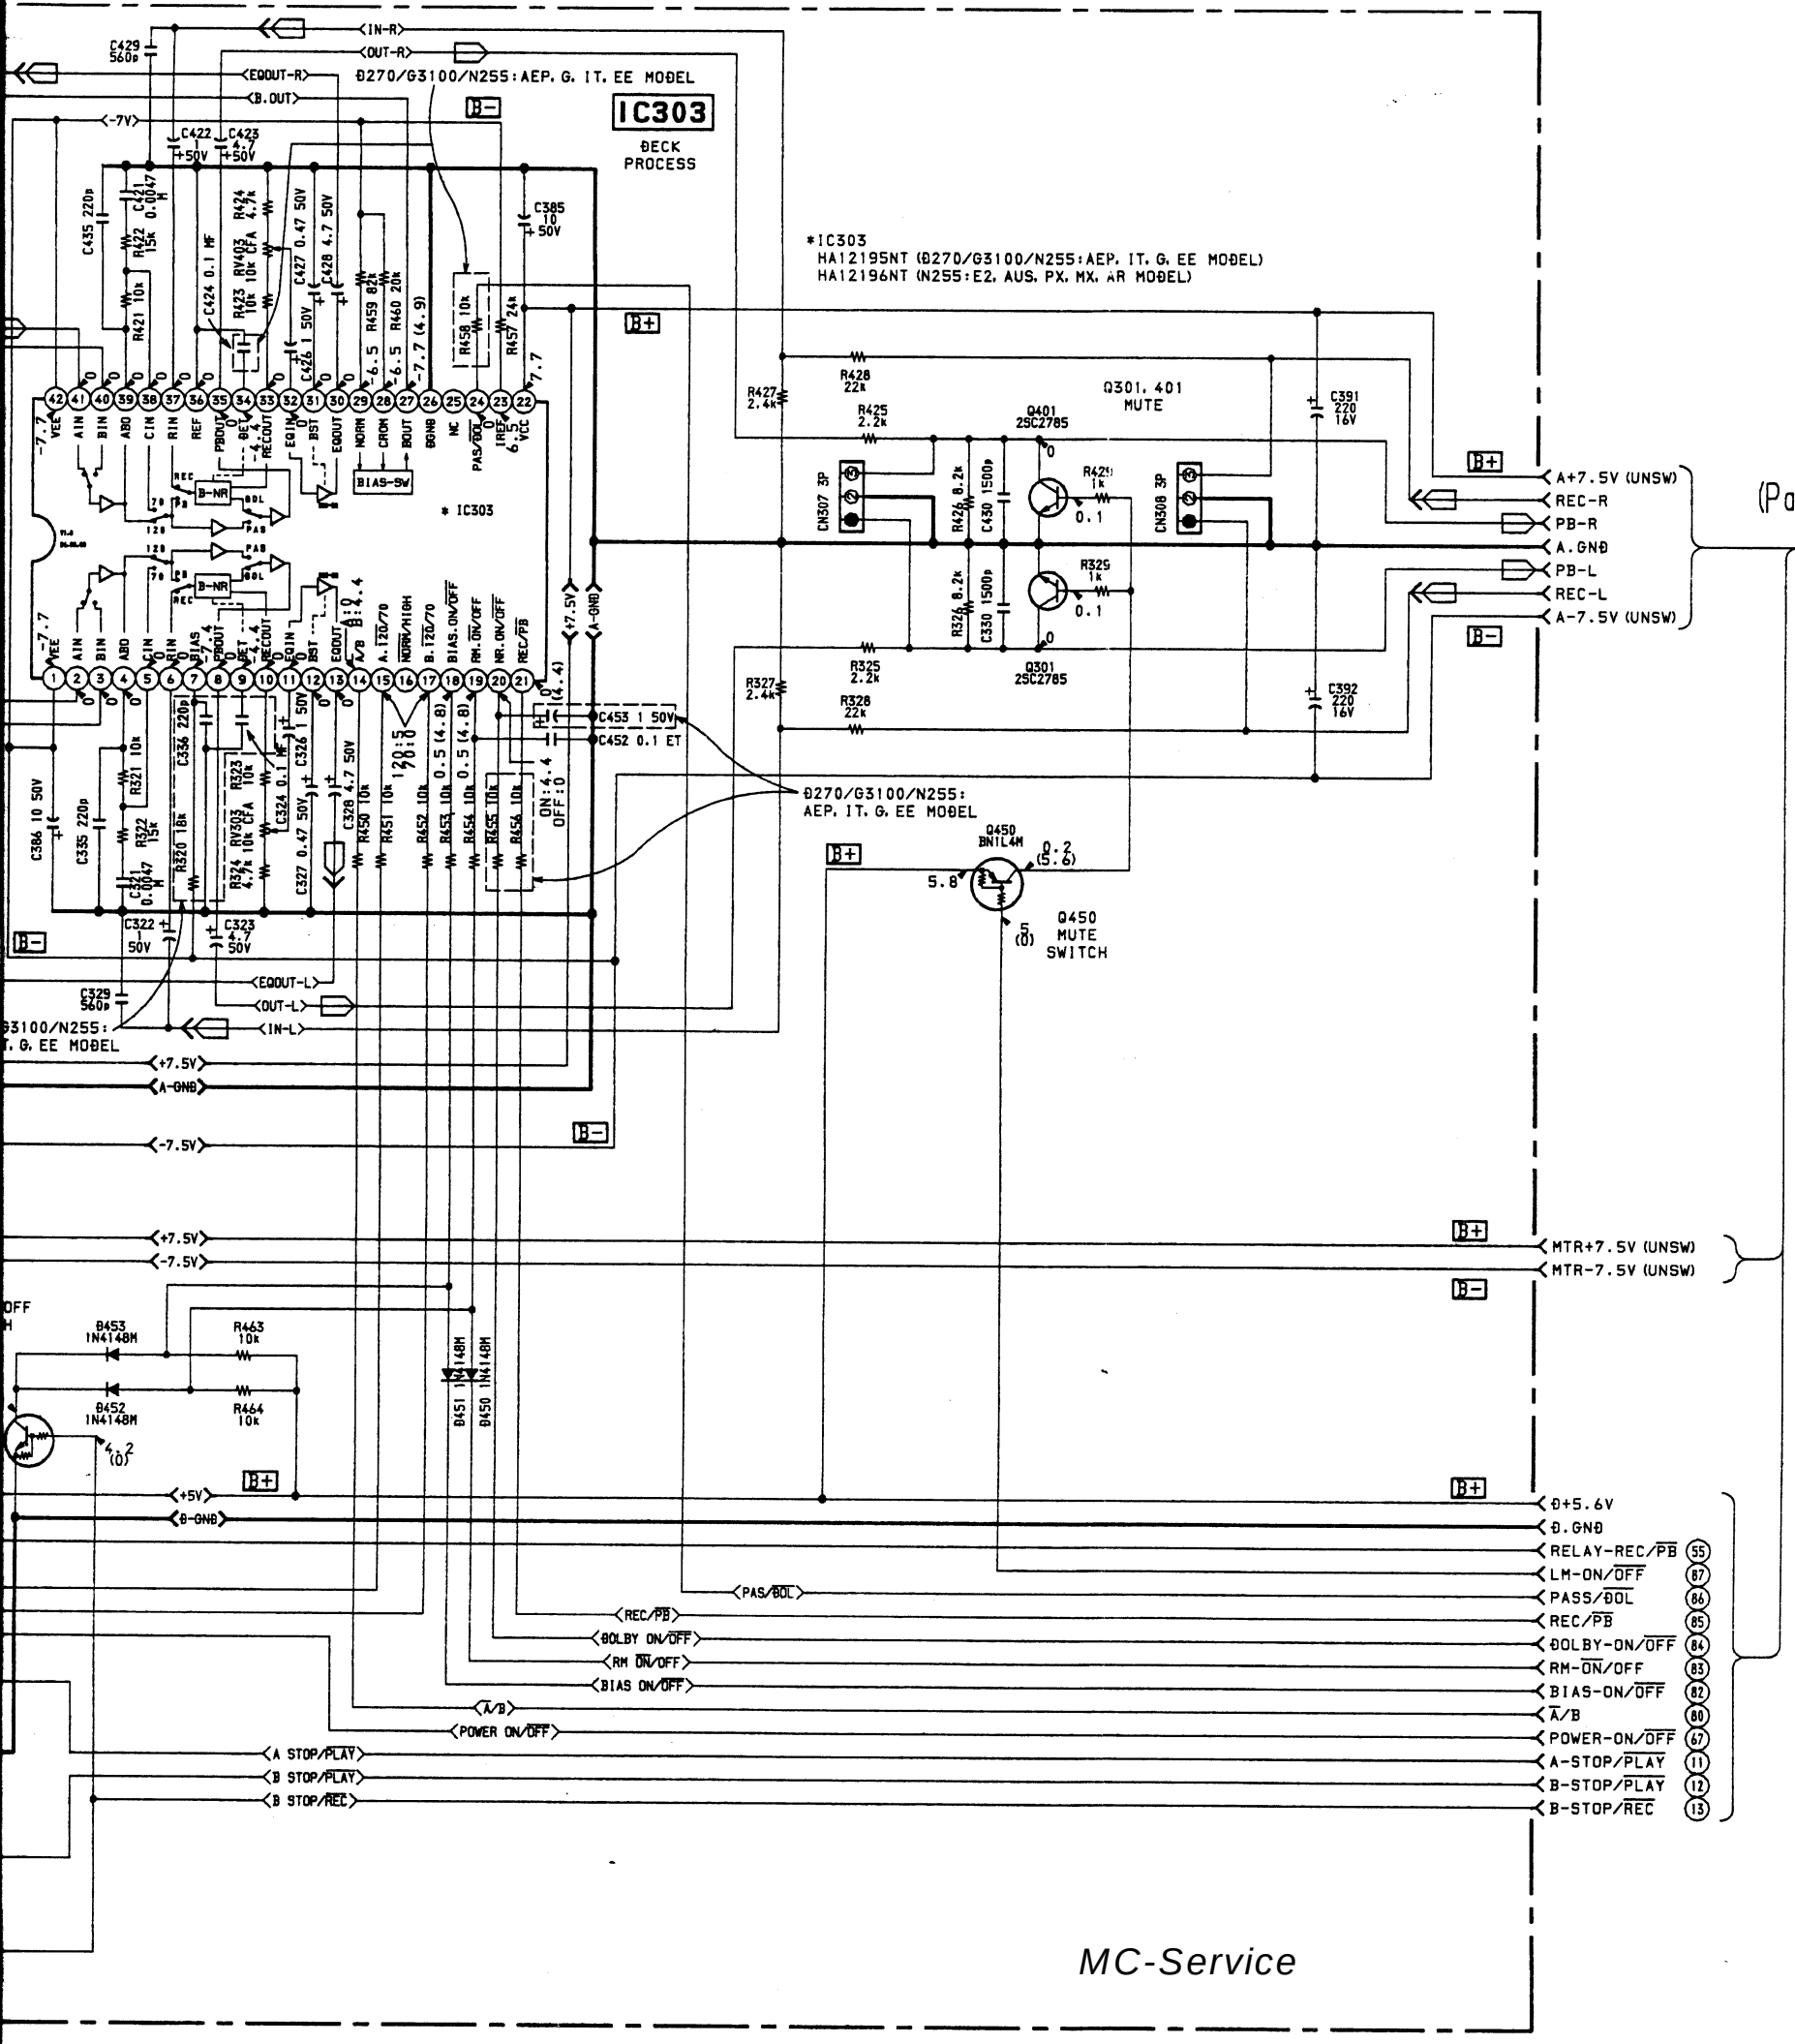

IC304 μPC1330H

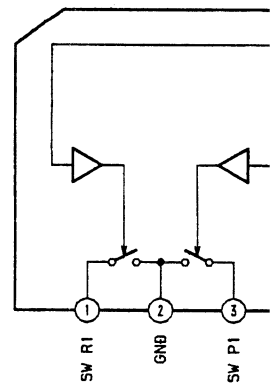

IC303 HA12195N

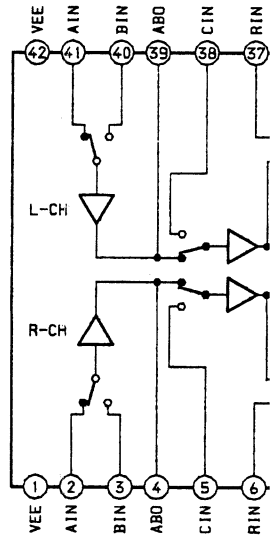

IC303 HA12196N

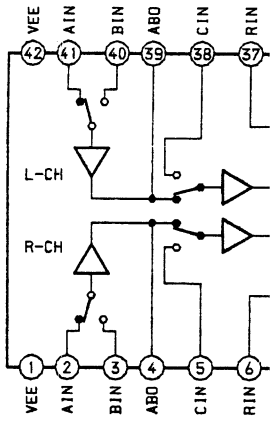

MC-Service

20	21	22	23	24	25	26	27

4 μPC1330HA

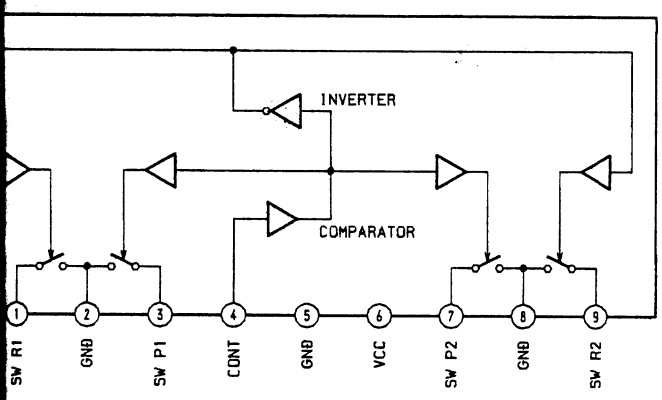

3 HA12195NT

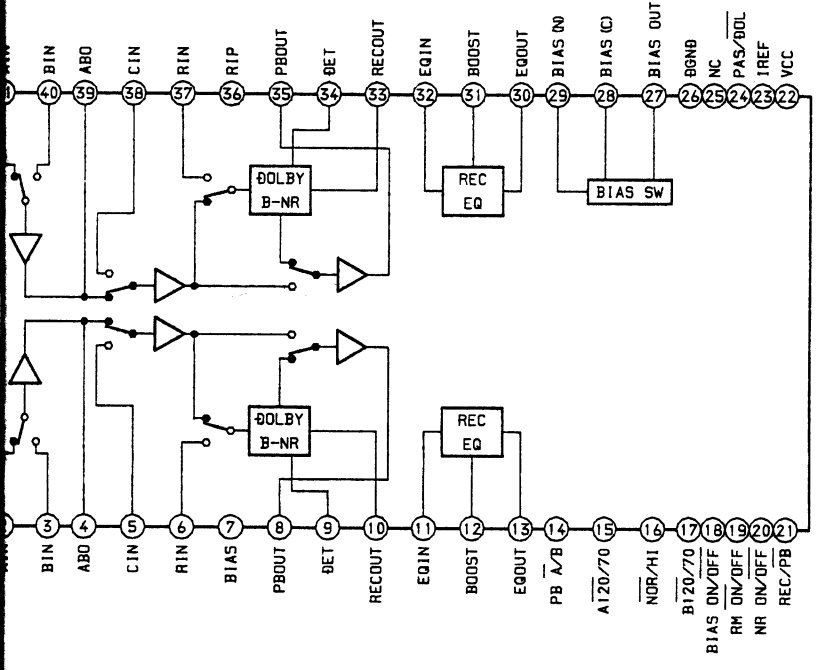

3 HA12196NT

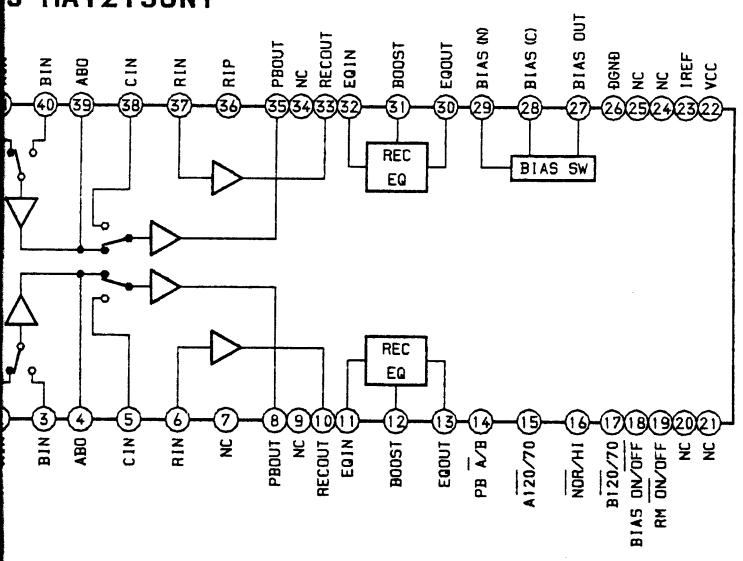

NOTE

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- ⊣W⊢ :nonflammable resistor.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- B+ :B+ Line.
- B− :B− Line.
- ▭ :adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
  no mark: PB
  ( ) : REC
- Voltages are taken with a VOM (Input impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Abbreviation
  G :German model.
  IT :Italian model.
  EE :East European model.
  MX :Mexican model.
  AUS: Australian model.
  AR :Argentine model.
- Signal path.
  ⟩ :PB (DECK A)
  ⟩ :PB (DECK B)
  ⟩⟩ :REC (DECK B)

5-9. SCHEMATIC DIAGRAM — TUNER SECTION — (US, CND, E, MX, AUS, PX, AR MODELS)

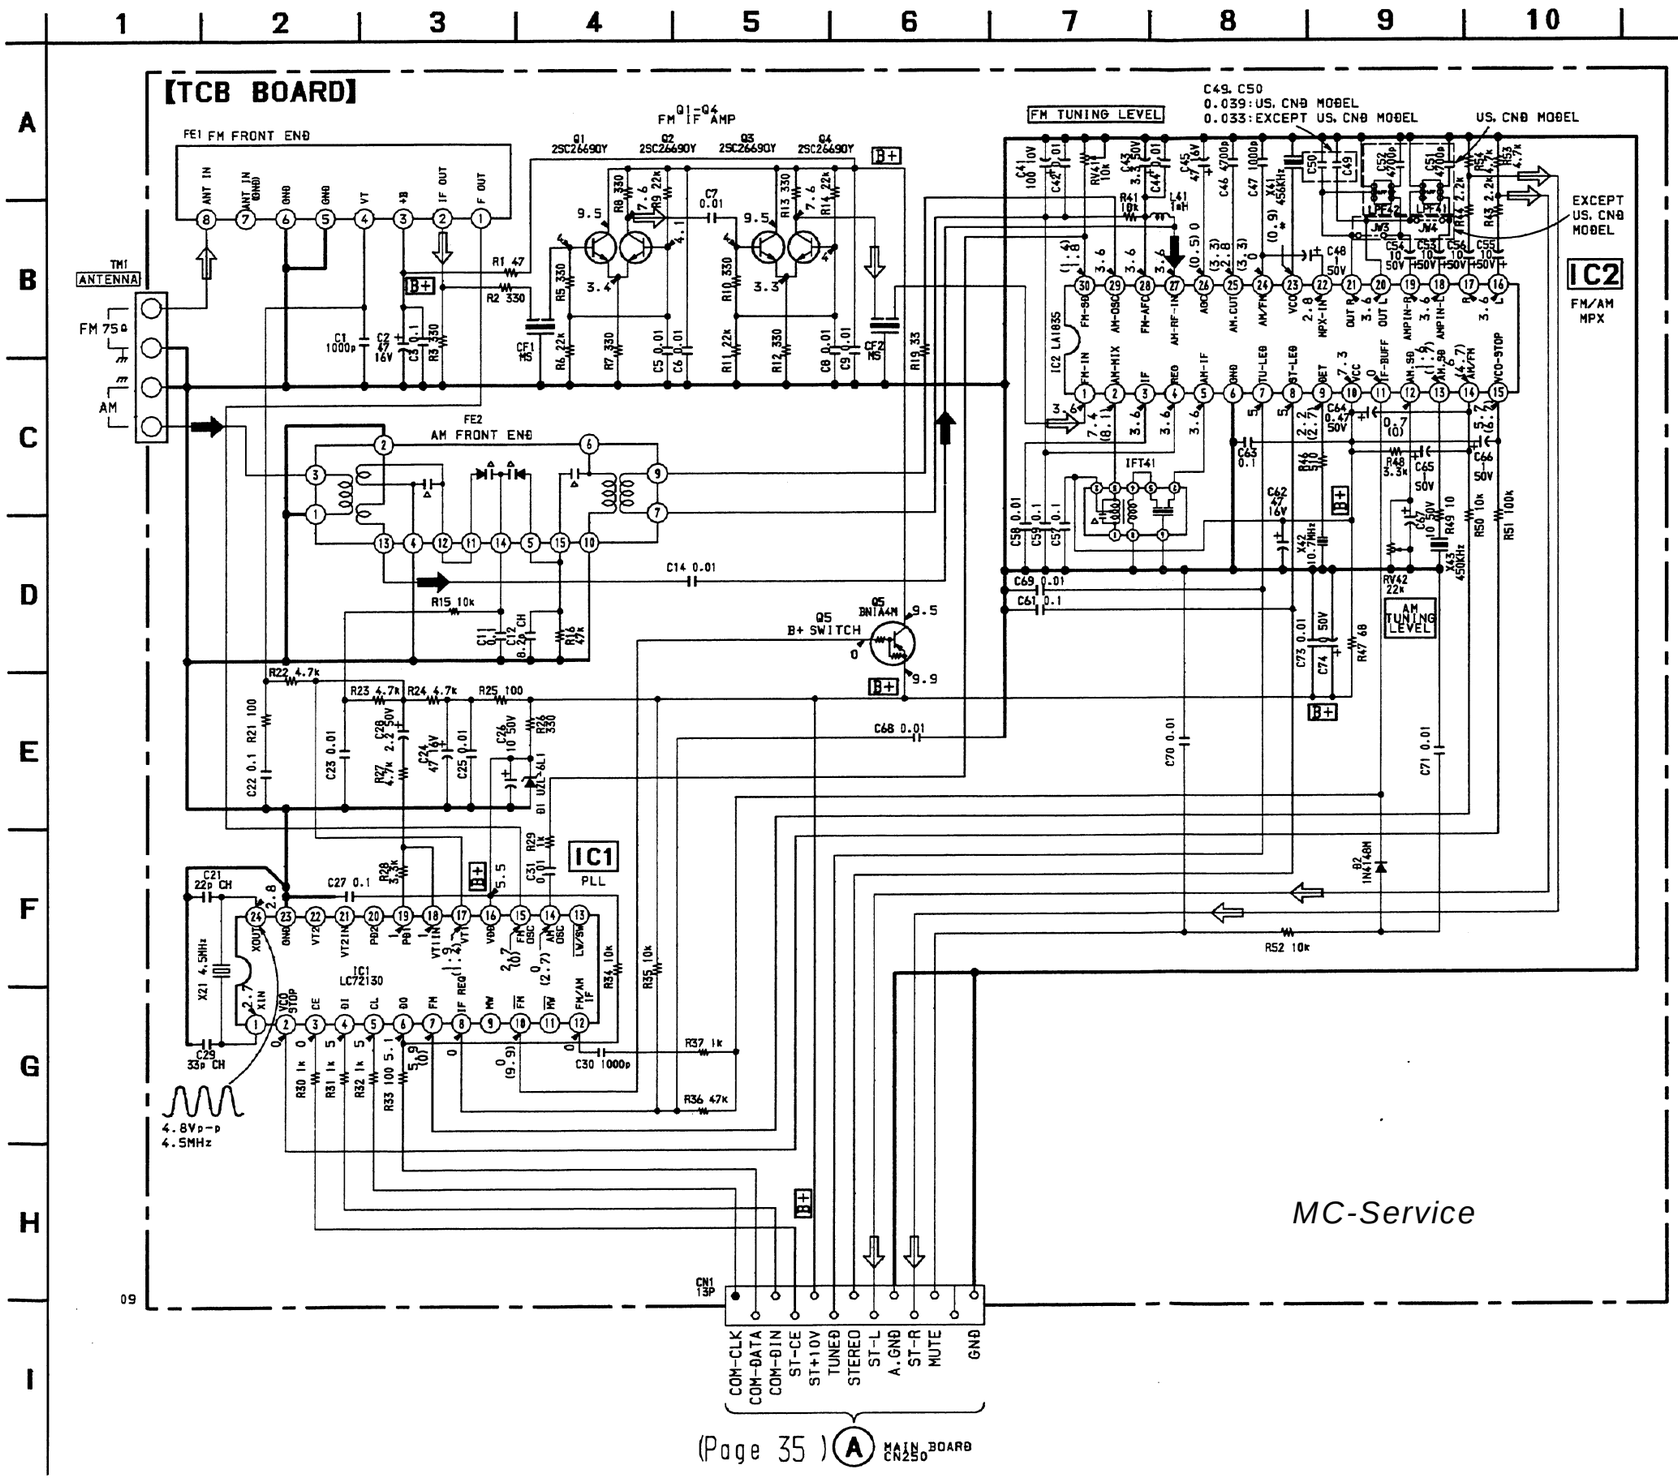

NOTE

- All capacitors are in μF unless otherwise noted. pF: μμF
  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ : internal component.
- ▭ : panel designation.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- B+ : B+ Line.
- ▭ : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark: FM
  ( ): AM
  * : can not be measured.
- Voltages are taken with a VOM (Input impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Abbreviation
  CND: Canadian model.
- Signal path.
  ⇧ : FM
  ➡ : AM

noted. pF: µµF
electrolytics

less otherwise

entifiés par
critiques

que par une
umèro spéci-

to ground

ice 10MΩ).
ial produc-

ial produc-

• **IC Block Diagrams**

IC1 LC72130

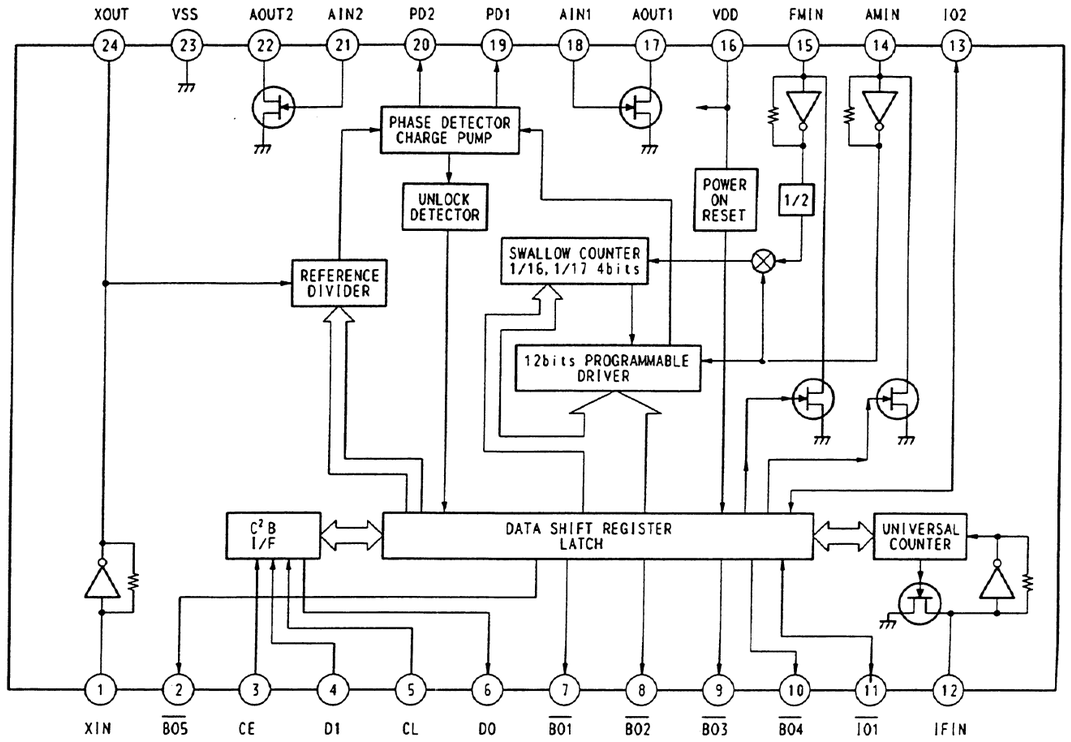

IC2 LA1835

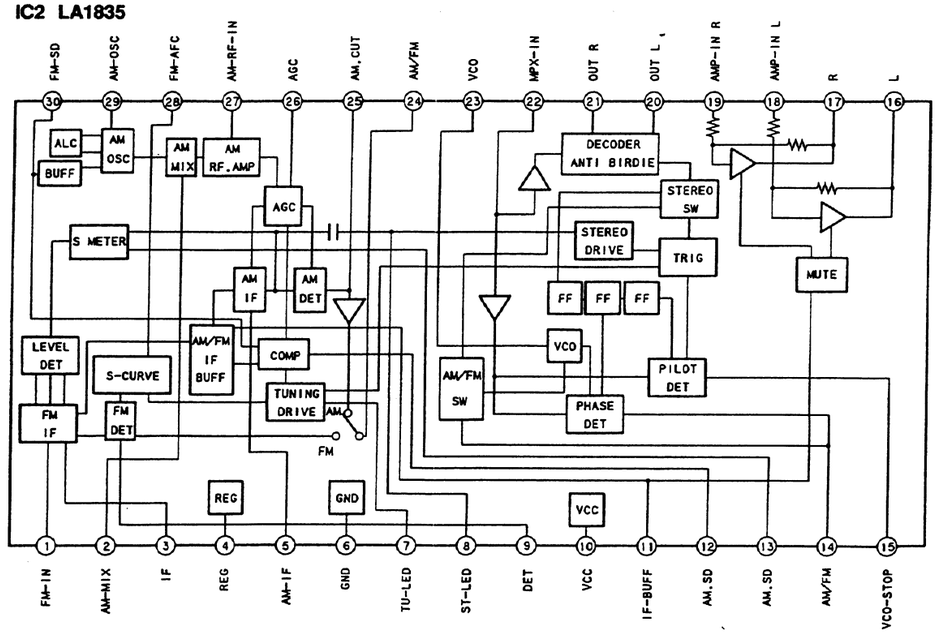

• **Semiconductor Location**

Ref. No.	Location
D1	G-2
D2	F-4
IC1	G-3
IC2	D-4
Q1	E-2
Q2	F-3
Q3	E-3
Q4	E-2
Q5	D-3

5-10. PRINTED WIRING BOARD — TUNER SECTION — (US, CND, E, MX, AUS, PX, AR MODELS)

• See page 15 for Circuit Boards Location.

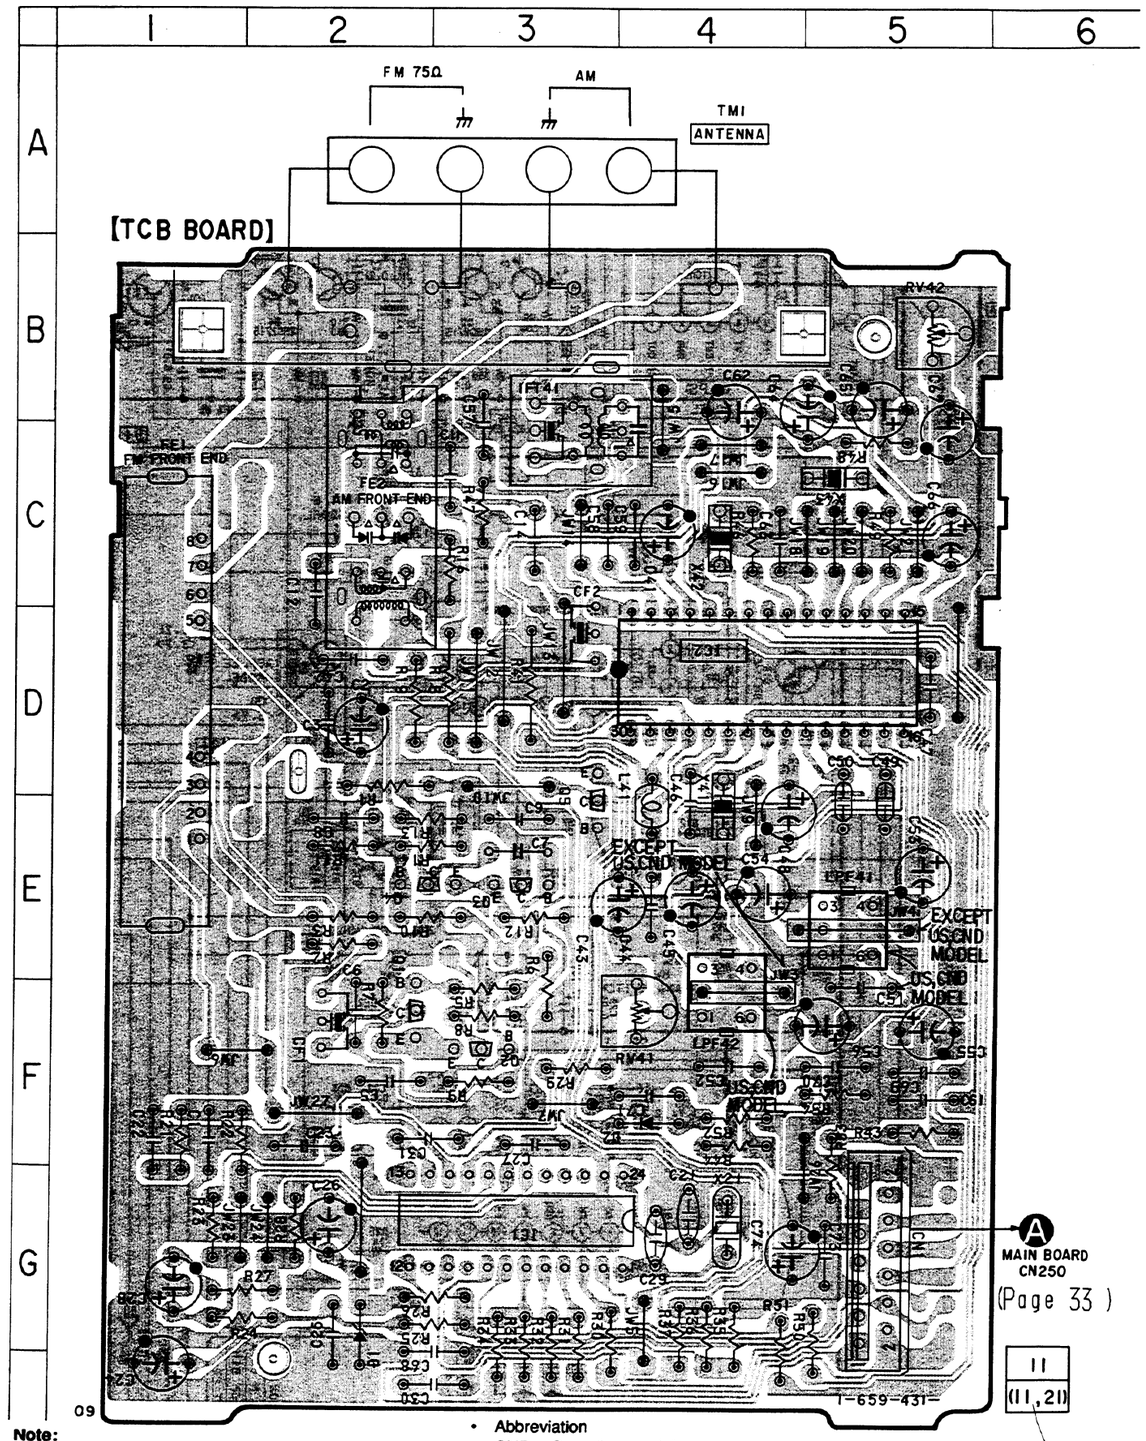

Note:

- ○—— : parts extracted from the component side.
- △ : internal component.
- ▒▒▒ : Pattern from the side which enable seeing.

• Abbreviation
CND : Canadian model.
MX : Mexican model.
AUS : Australian model.
AR : Argentine model.

5-11. SCHEMATIC DIAGRAM — TUNER SECTION — (AEP, G, IT, EE MODELS)

【TCB BOARD】

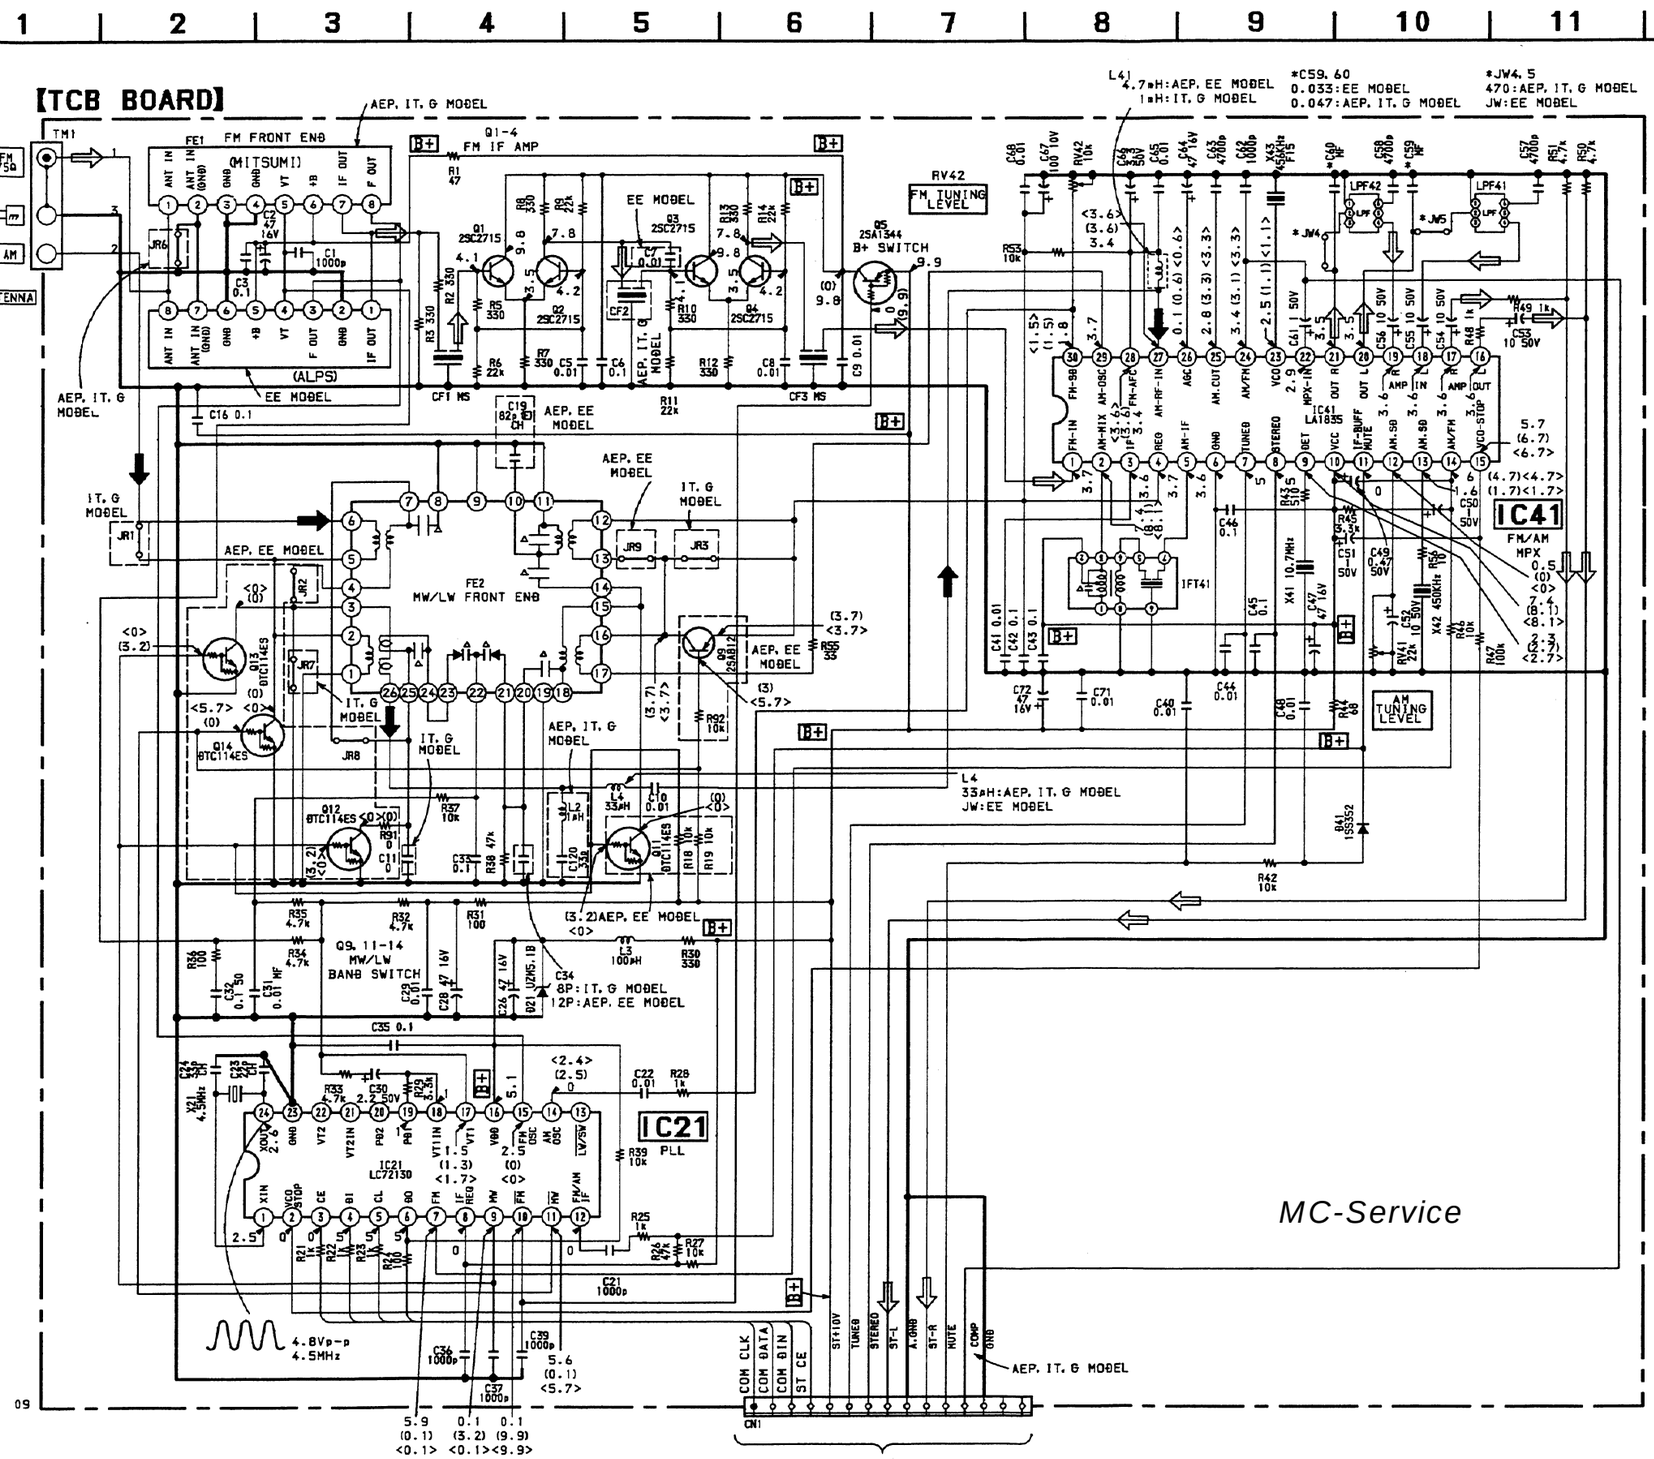
AEP, IT, G MODEL
FE1 FM FRONT END (MITSUMI)
(ALPS)
EE MODEL
Q1-4 FM IF AMP
RV42 FM TUNING LEVEL
L4 4.7mH:AEP, EE MODEL 1mH:IT, G MODEL
*C59, 60 0.033:EE MODEL 0.047:AEP, IT, G MODEL
*JW4, 5 470:AEP, IT, G MODEL JW:EE MODEL
Q5 2SA1544 B+ SWITCH
IC41 LA1835
IC41 FM/AM MPX
IC21 LC72130 PLL
FE2 MW/LW FRONT END
Q9, 11-14 MW/LW BAND SWITCH
L4 33μH:AEP, IT, G MODEL JW:EE MODEL
8P:IT, G MODEL 12P:AEP, EE MODEL
4.8Vp-p 4.5MHz
AEP, IT, G MODEL
MC-Service

(Page 35) (A) MAIN BOARD CN250

NOTE

- All capacitors are in μF unless otherwise noted. pF:μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ :internal component.
- ▭ :panel designation.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

- B+ :B+ Line.
- ▭ :adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark: FM
  ( ): MW
  < >: LW
- Voltages are taken with a VOM (Input impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Abbreviation
  G :German model.
  IT :Italian model.
  EE :East European model.
- Signal path.
  ⇨ :FM
  ➡ :AM

oted. pF: μF
lectrolytics

ess otherwise

r dotted
ety.
d.

to ground

ce 10MΩ).
al produc-

al produc-

• IC Block Diagrams

IC21 LC72130

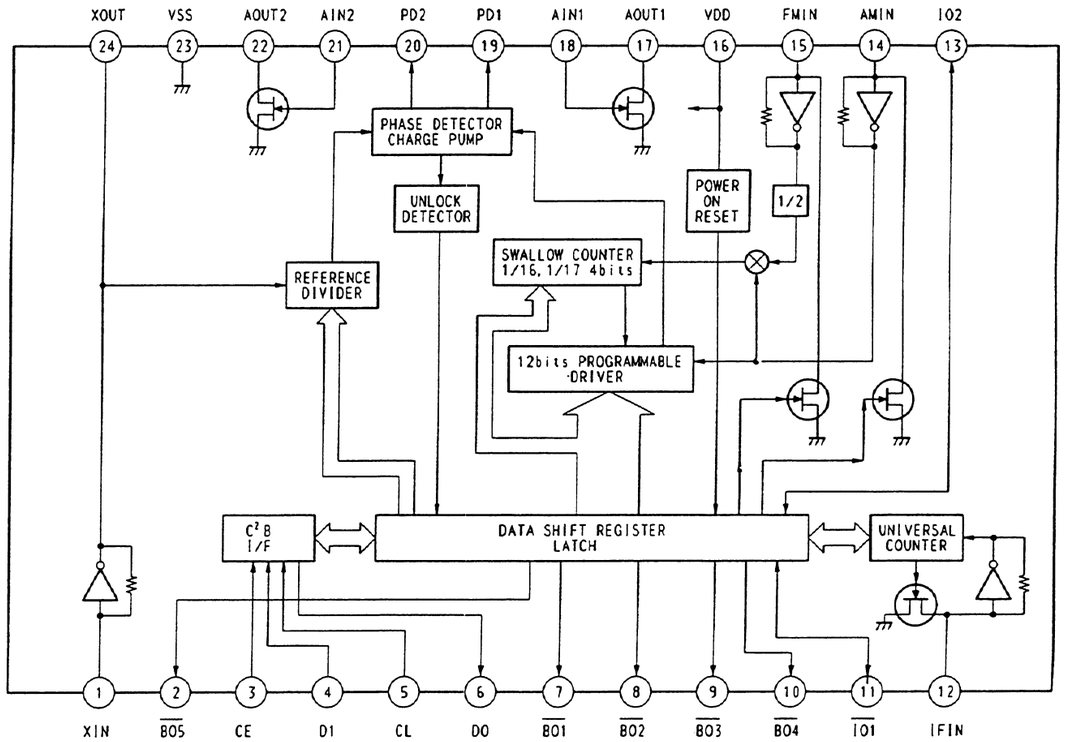

IC41 LA1835

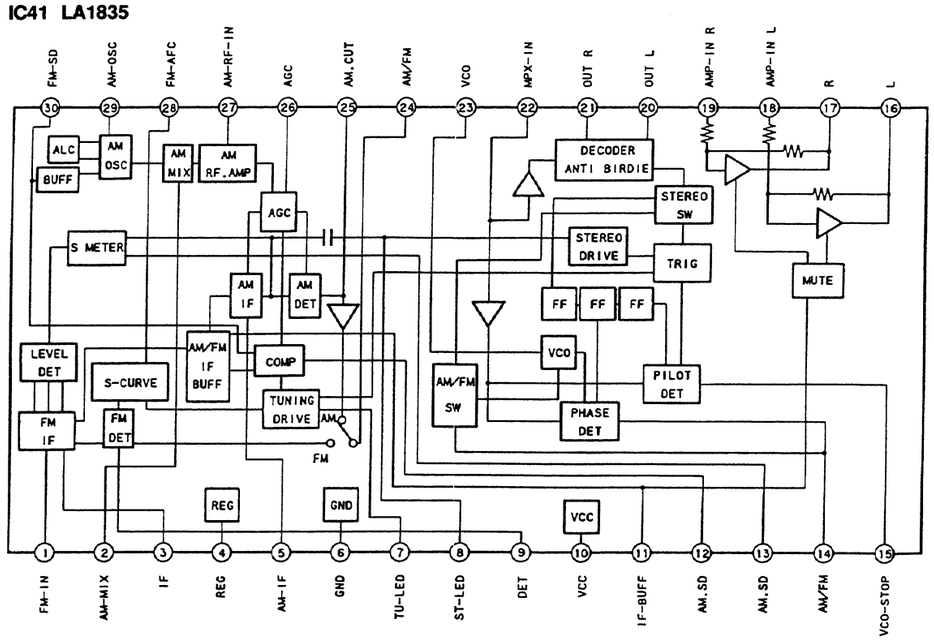

• Semiconductor Location

Ref. No.	Location
D21	G-1
D41	G-3
IC21	G-2
IC41	D-4
Q1	E-2
Q2	E-2
Q3	E-3
Q4	E-2
Q5	D-2
Q9	C-2
Q11	B-4
Q12	B-4
Q13	B-3
Q14	B-3

5-12. PRINTED WIRING BOARD — TUNER SECTION — (AEP, G, IT, EE MODELS)

• See page 15 for Circuit Boards Location.

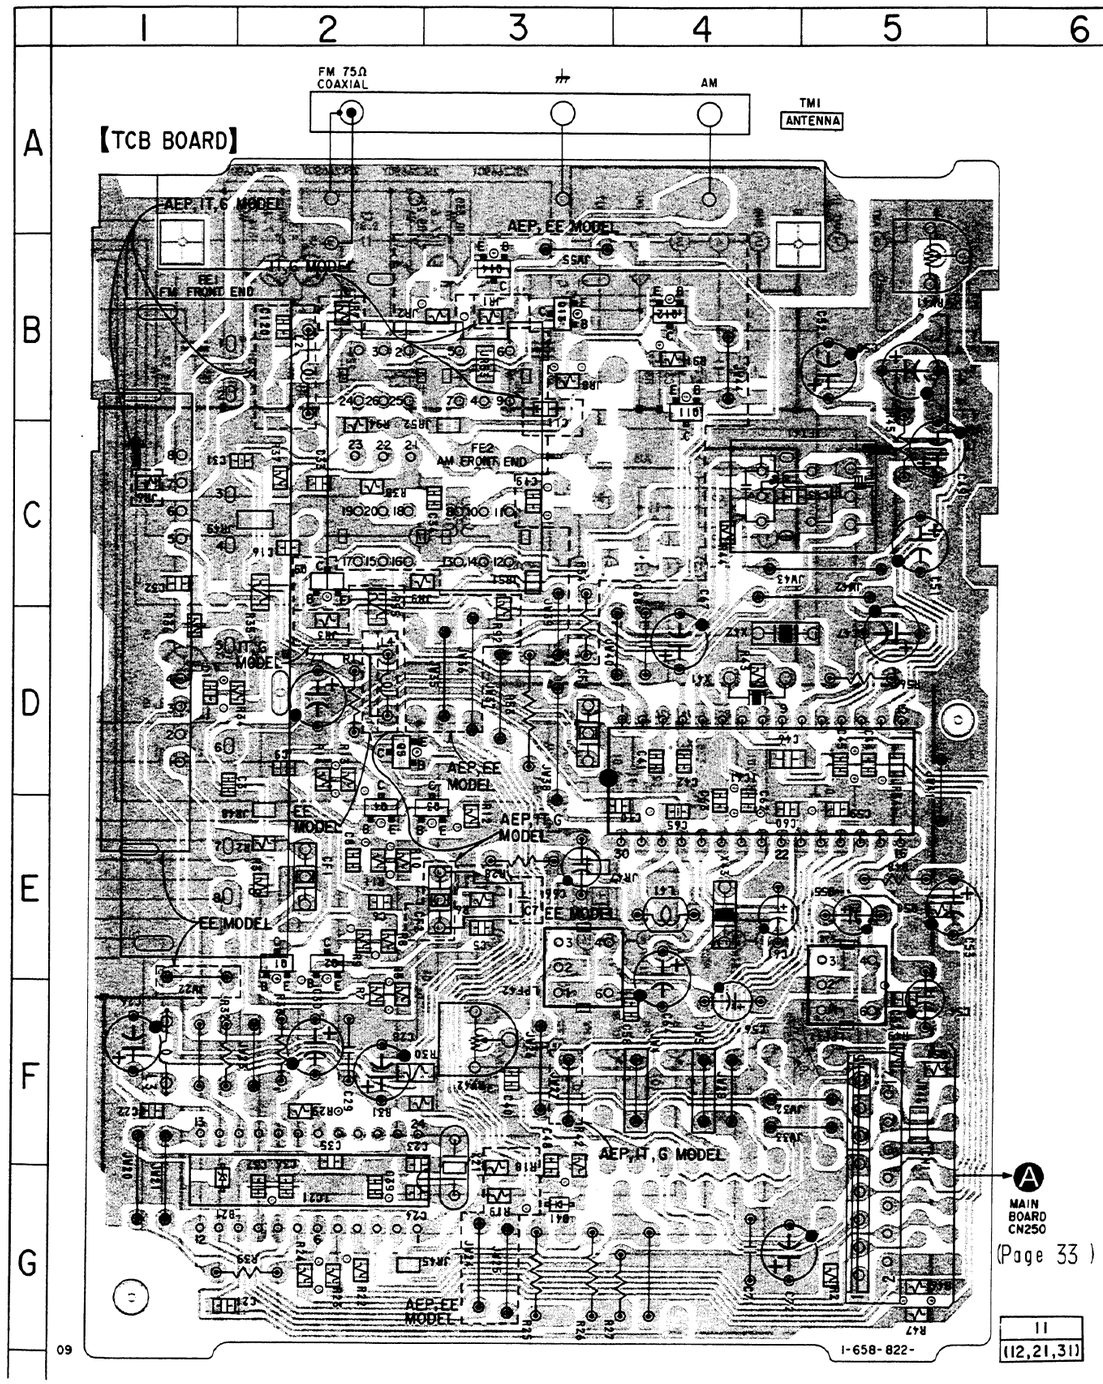

Note:

- ○—— : parts extracted from the component side.
- △ : internal component.
- ▒▒▒ : Pattern from the side which enable seeing.

- Abbreviation
  - G : German model.
  - IT : Italian model.
  - EE : East European model.

5-13. SCHEMATIC DIAGRAM — CD MOTOR SECTION —

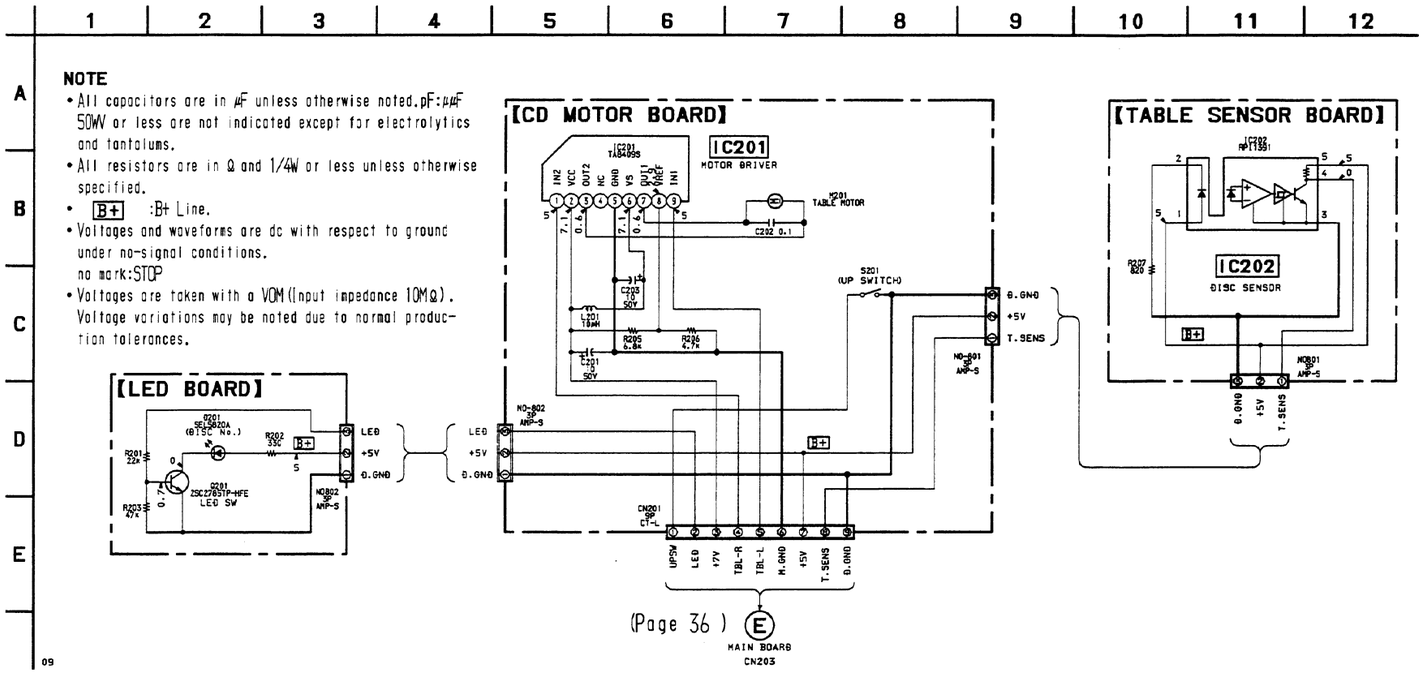
NOTE
• All capacitors are in μF unless otherwise noted. pF: μF 50WV or less are not indicated except for electrolytics and tantalums.
• All resistors are in Ω and 1/4W or less unless otherwise specified.
• B+ :B+ Line.
• Voltages and waveforms are dc with respect to ground under no-signal conditions.
no mark:STOP
• Voltages are taken with a VOM (Input impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
【LED BOARD】
【CD MOTOR BOARD】
IC201
MOTOR DRIVER
【TABLE SENSOR BOARD】
IC202
DISC SENSOR
M201 TABLE MOTOR
S201 (UP SWITCH)
LED
+5V
G.GND
T.SENS
UPSW
+7V
TBL-R
TBL-L
M.GND
(Page 36)
MAIN BOARD CN203

5-14. PRINTED WIRING BOARD — CD MOTOR SECTION —

• See page 15 for Circuit Boards Location.

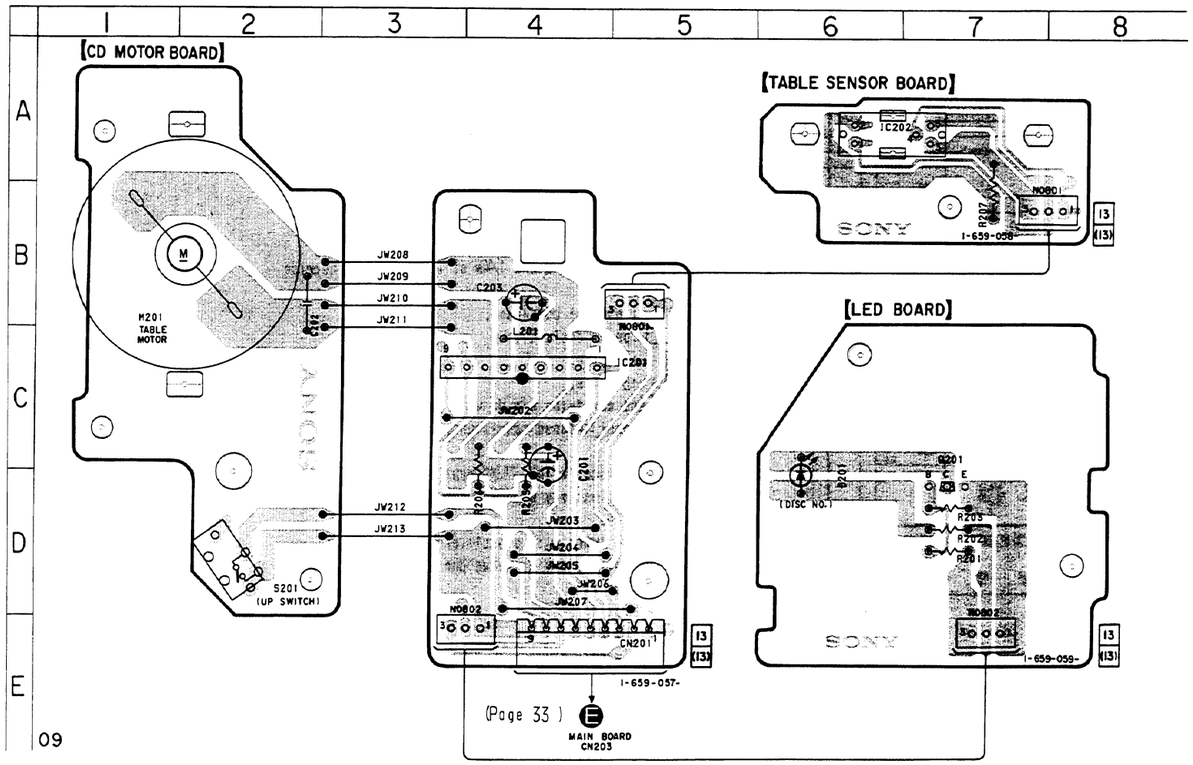

MC-Service

Note:
- ○—— : parts extracted from the component side.
- ▒▒▒ : Pattern from the side which enable seeing.

5-15. SCHEMATIC DIAGRAM — PANEL SECTION —

• See page 16 for IC Pin Function. (IC501)

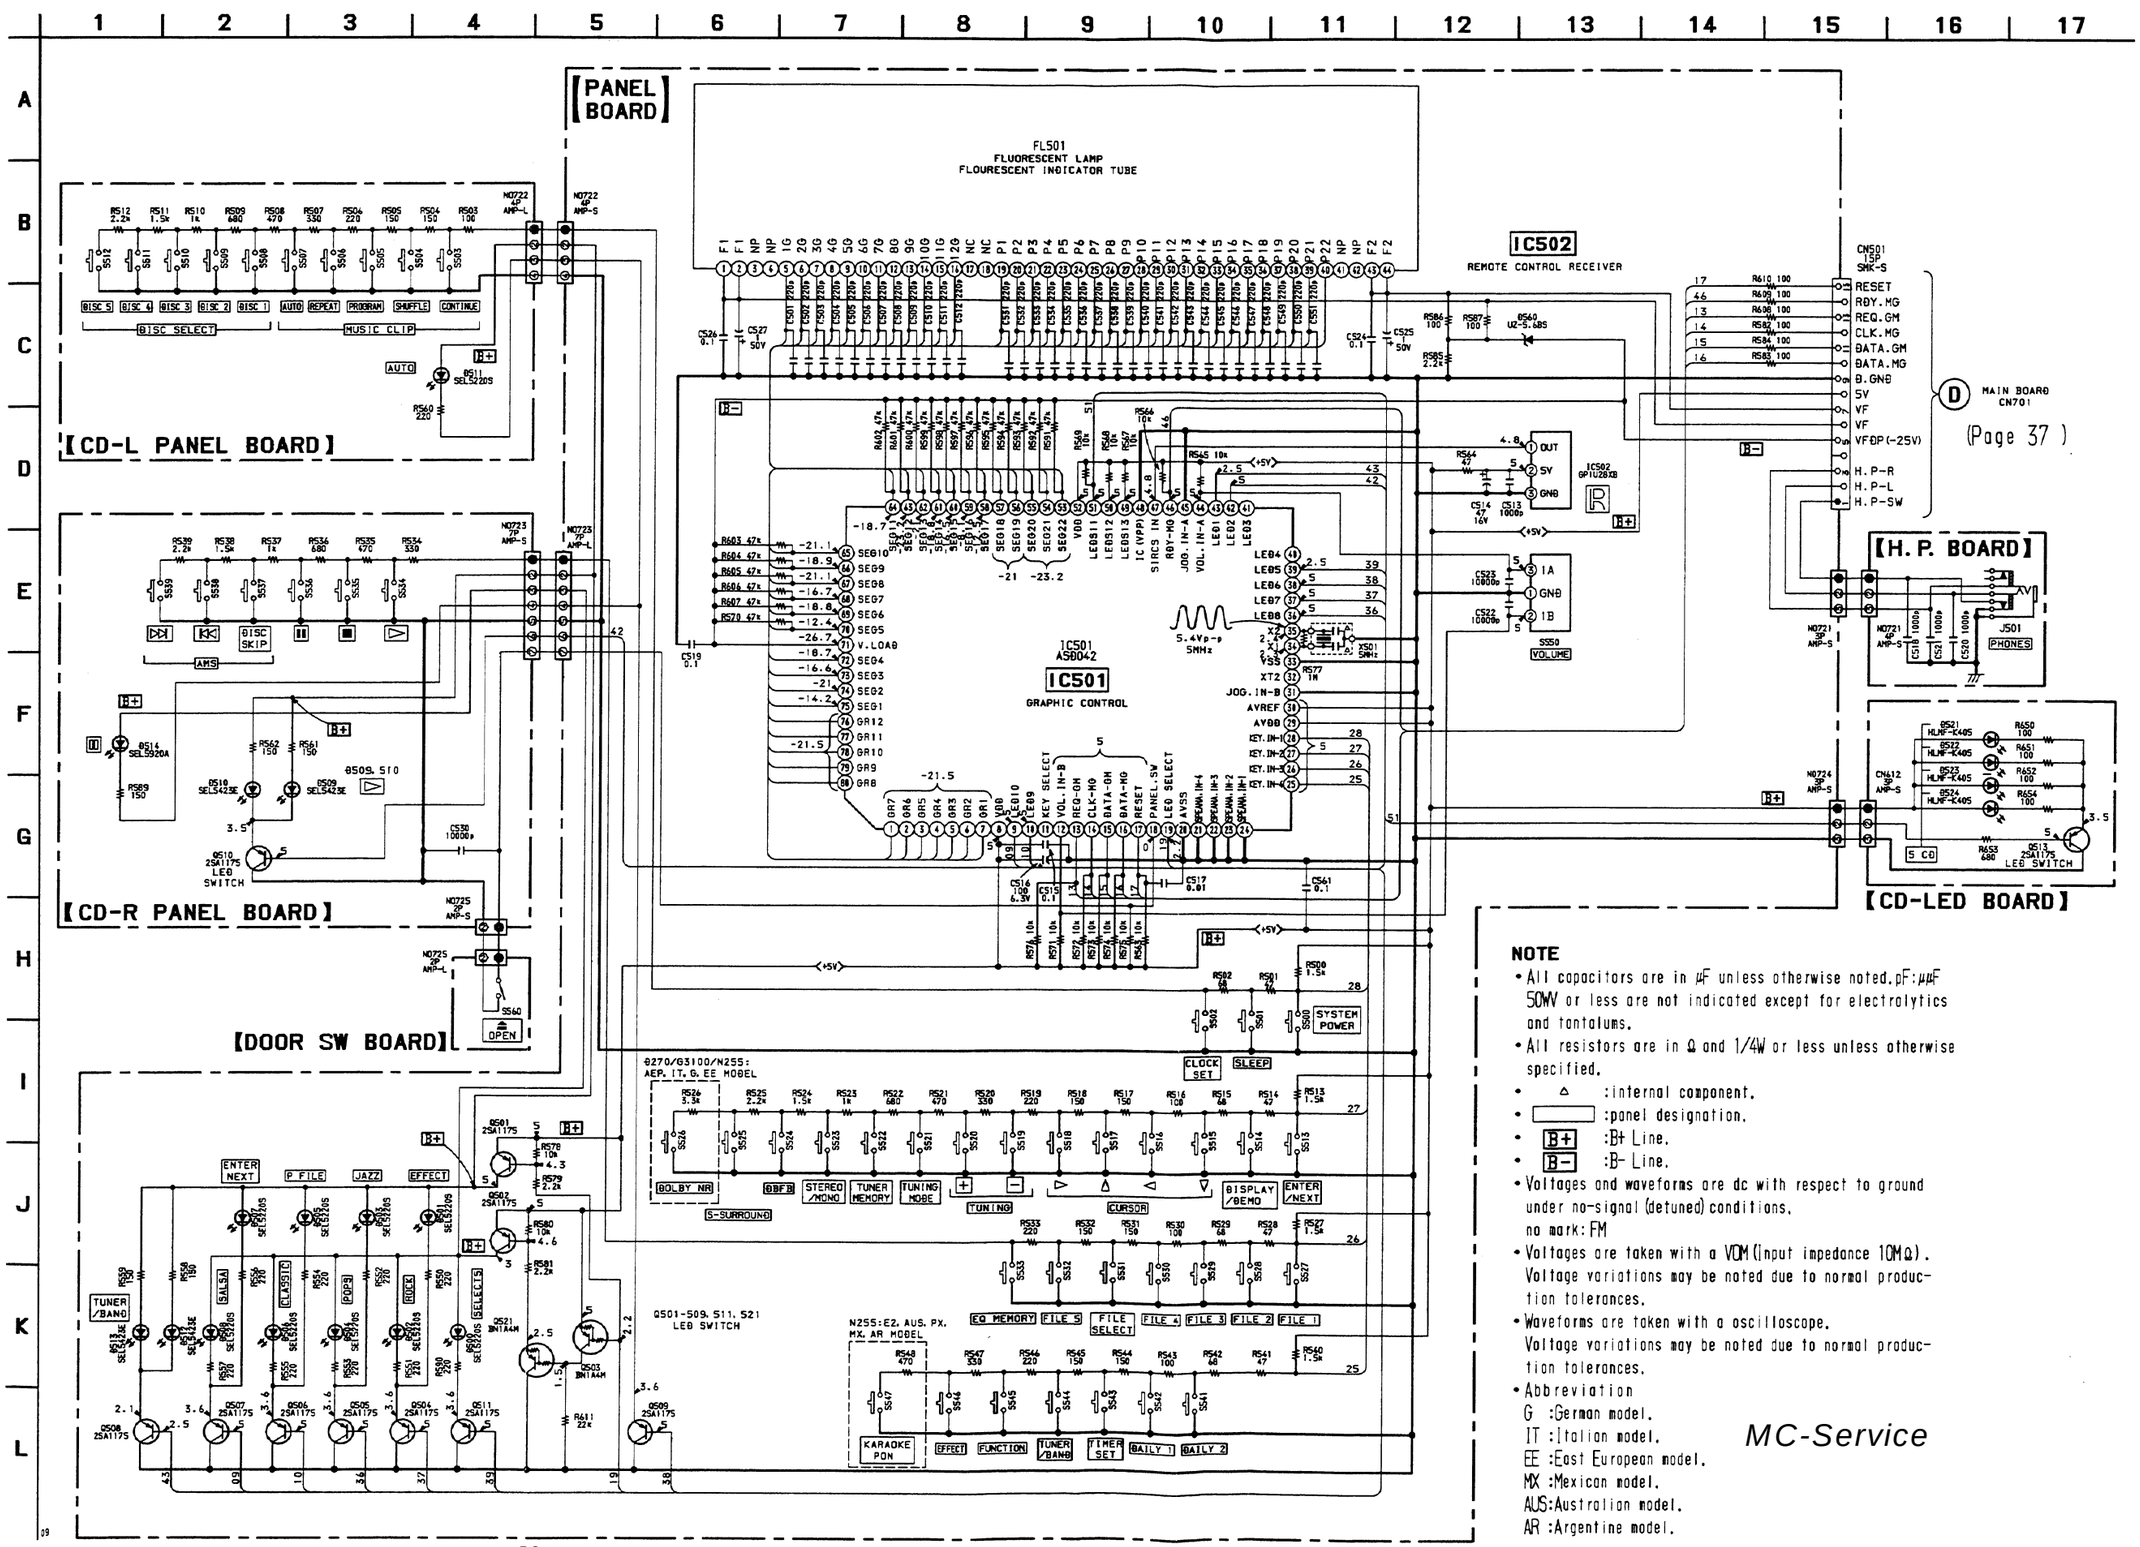

NOTE

- All capacitors are in μF unless otherwise noted. pF: μμF
  50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ : internal component.
- ▭ : panel designation.
- B+ : B+ Line.
- B- : B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark: FM
- Voltages are taken with a VOM (Input impedance 10MΩ).
  Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
  Voltage variations may be noted due to normal production tolerances.
- Abbreviation
  G : German model.
  IT : Italian model.
  EE : East European model.
  MX : Mexican model.
  AUS: Australian model.
  AR : Argentine model.

MC-Service

5-16. PRINTED WIRING BOARD — PANEL SECTION —

• See page 15 for Circuit Boards Location.

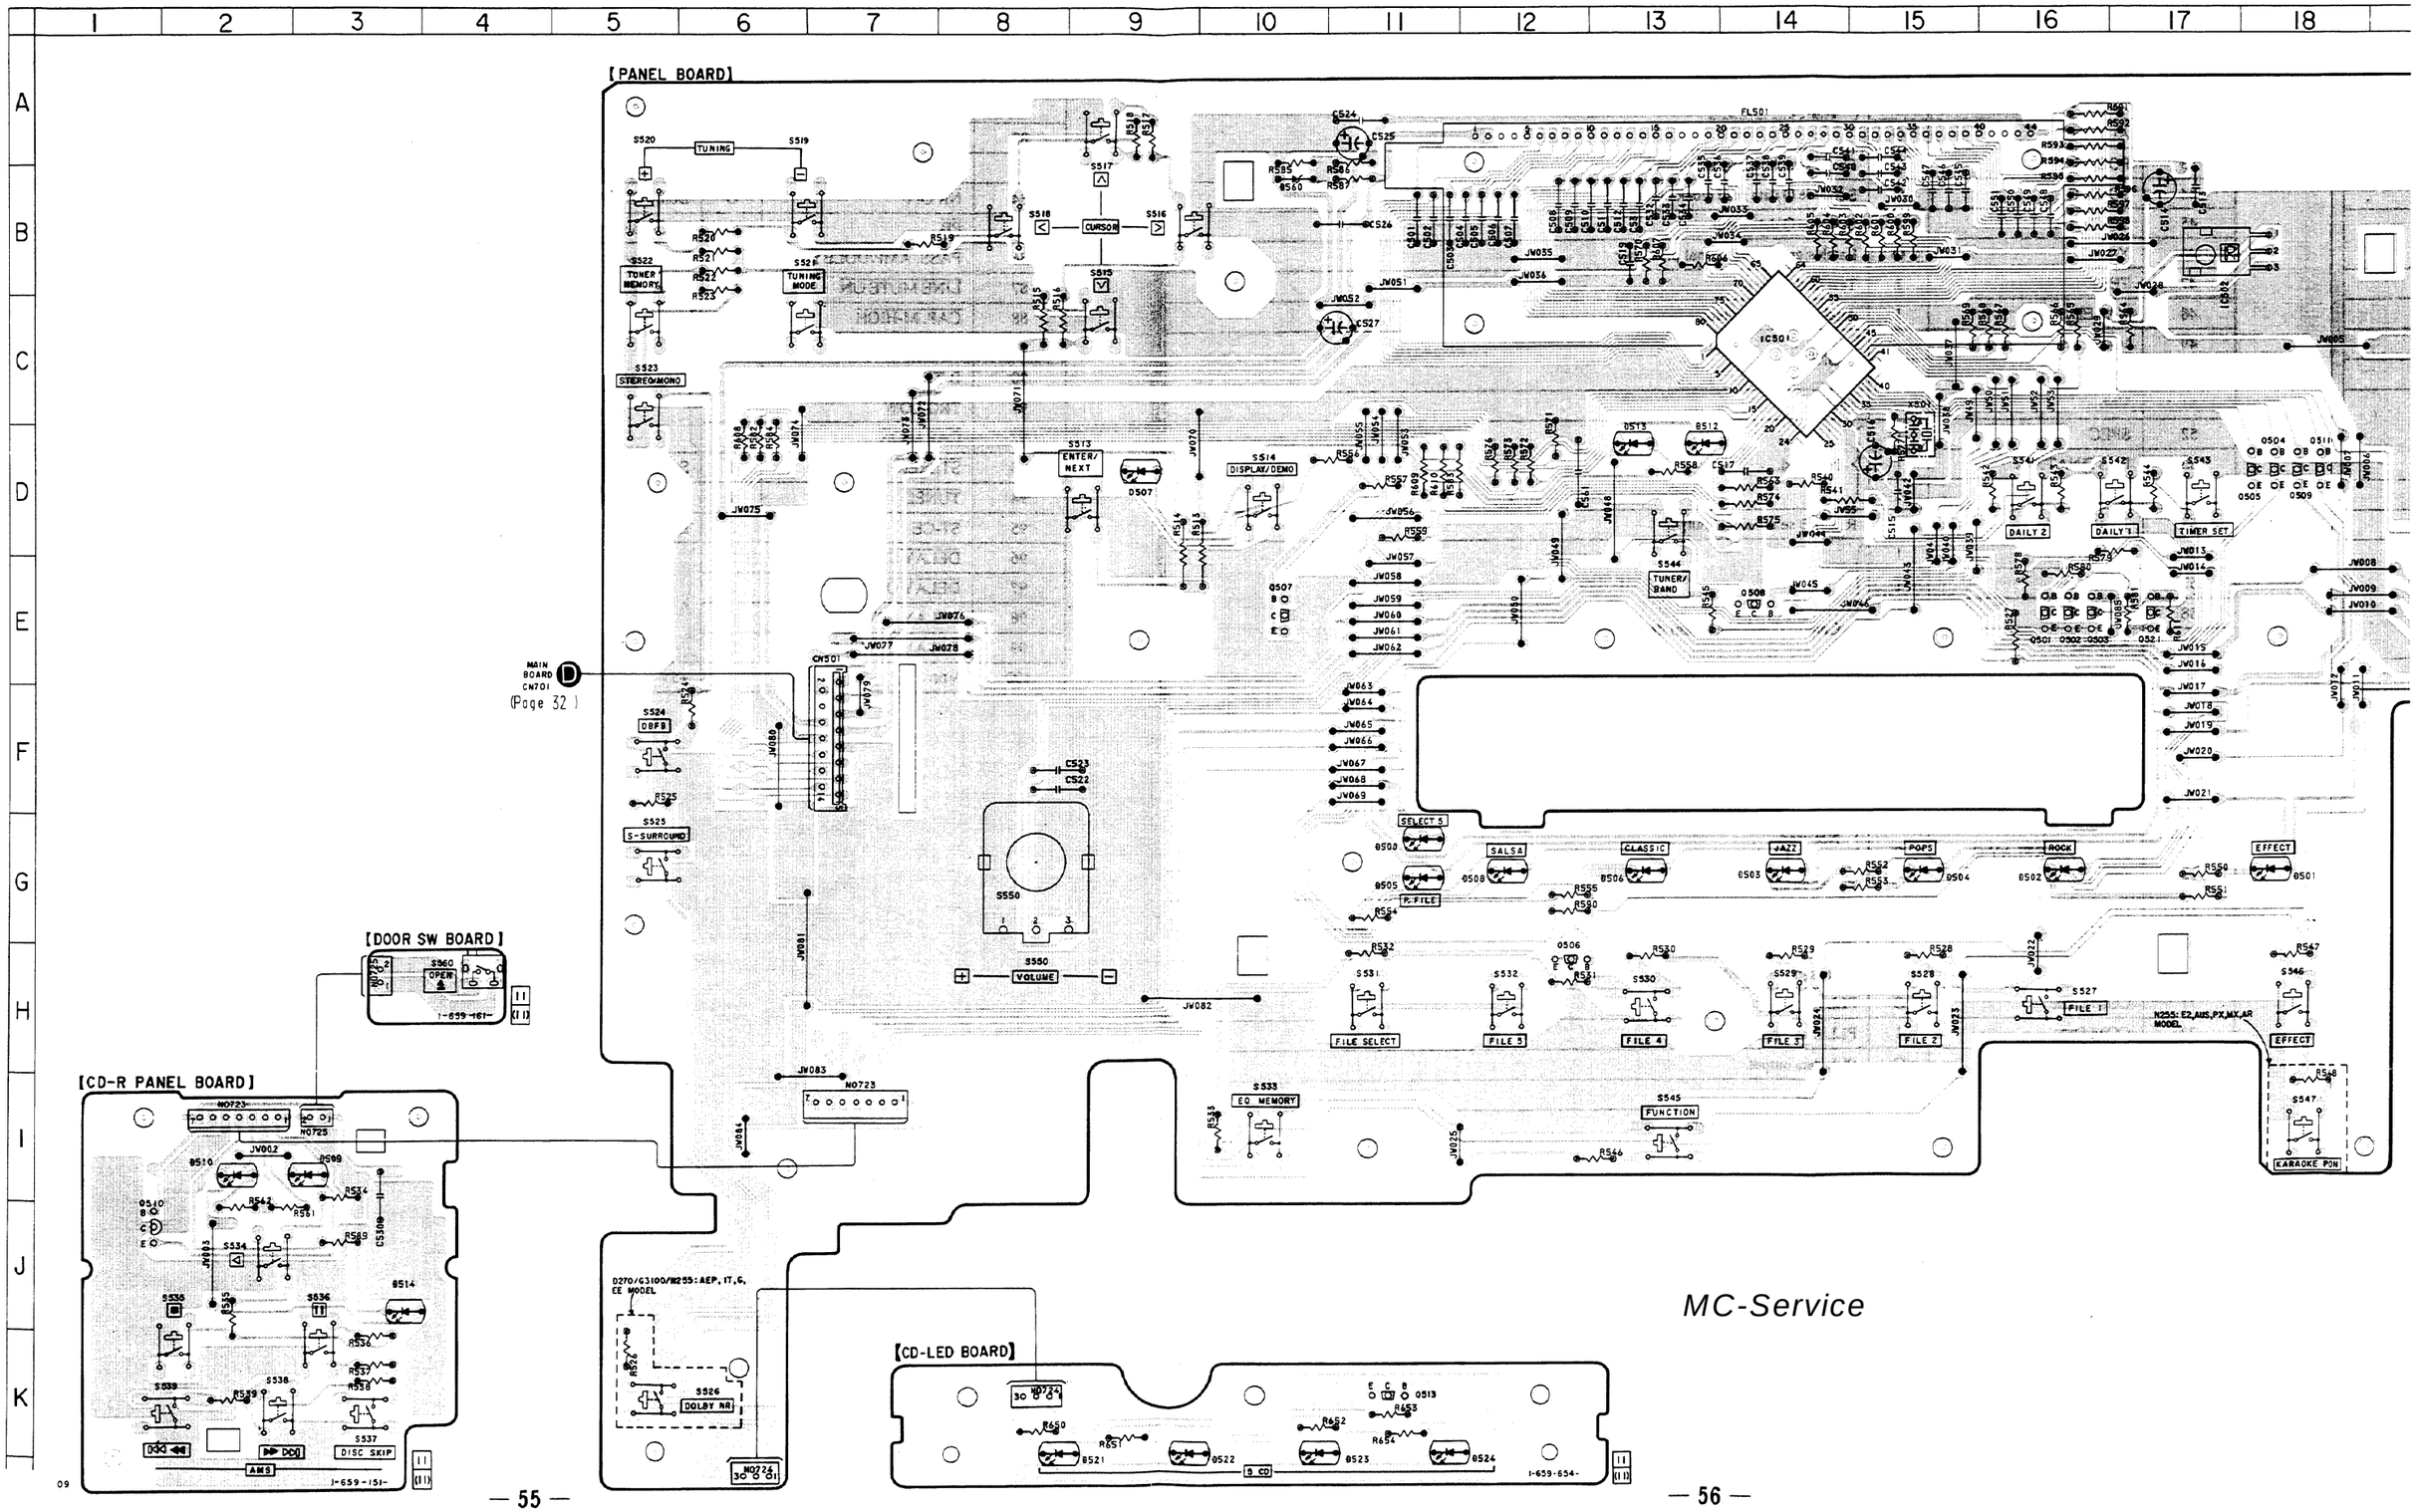

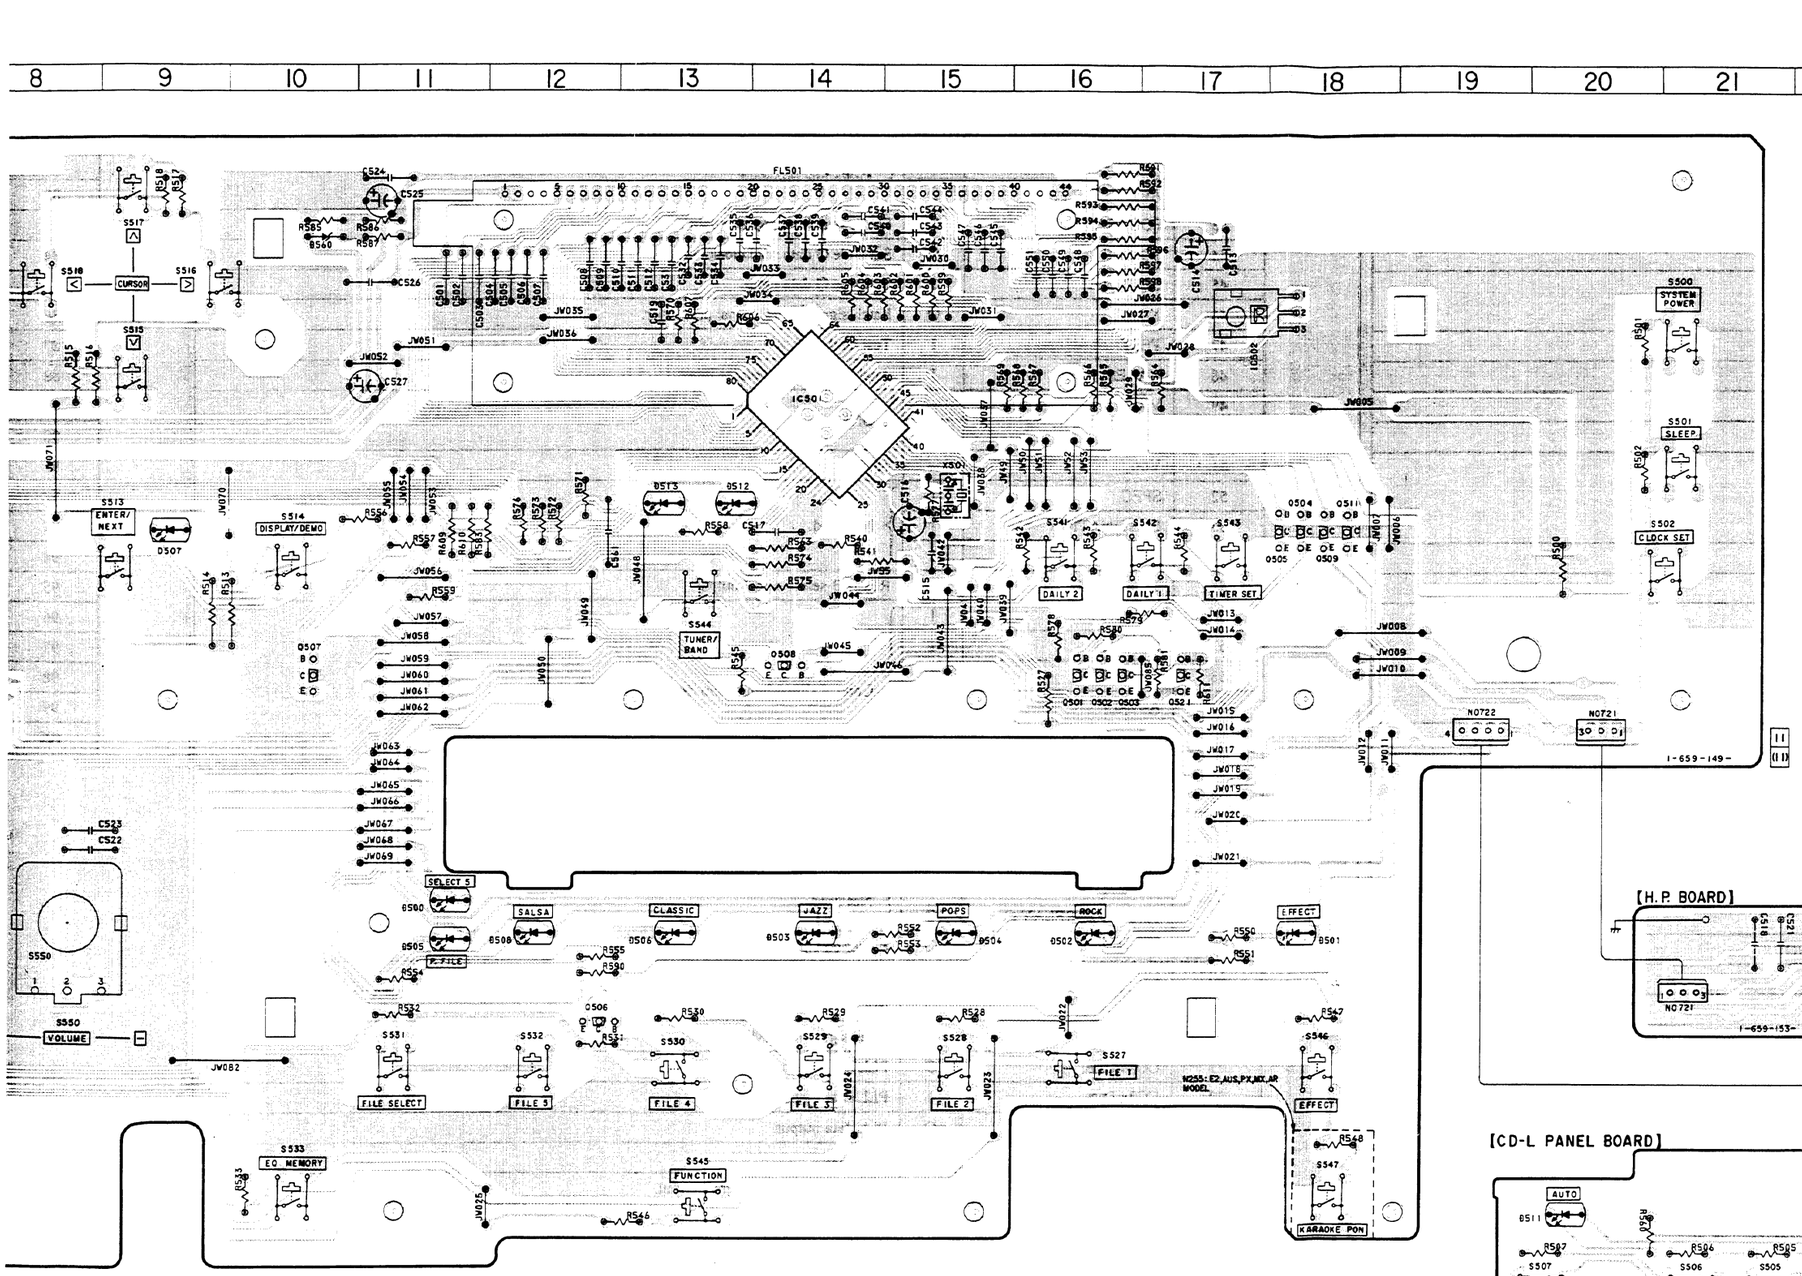

【H.P. BOARD】

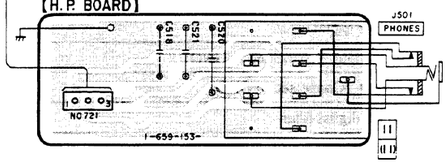

【CD-L PANEL BOARD】

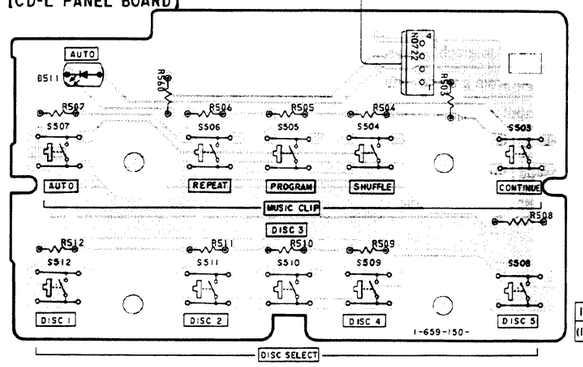

MC-Service

- **Semiconductor Location**

Ref. No.	Location
D500	G-11
D501	G-18
D502	G-16
D503	G-14
D504	G-15
D505	G-11
D506	G-13
D507	D-9
D508	G-12
D509	I-3
D510	I-2
D511	I-20
D512	D-13
D513	D-13
D514	J-3
D521	K-8
D522	K-10
D523	K-11
D524	K-12
D560	B-10
IC501	C-14
IC502	B-17
Q501	E-16
Q502	E-16
Q503	E-16
Q504	D-18
Q505	D-18
Q506	H-12
Q507	E-10
Q508	E-14
Q509	D-18
Q510	J-1
Q511	D-18
Q513	K-11
Q521	E-17

Note:

- ○—— : parts extracted from the component side.
- △ : internal component.
- ····· : Pattern from the side which enable seeing.
- Abbreviation
  - G : German model.
  - IT : Italian model.
  - EE : East European model.
  - MX : Mexican model.
  - AUS : Australian model.
  - AR : Argentine model.

5-17. IC PIN FUNCTION (IC701)

• IC701 MASTER CONTROL (TMP87CS64)

Pin No.	Pin Name	I/O	Function
1	Vss	–	GND
2	XOUT	O	X'tal (10 MHz).
3	XIN	I	
4	$\overline{\text{RESET}}$	I	Reset signal input.
5	XOUT	O	X'tal for clock (32.768 kHz)
6	XIN	I	
7	GND (test)	–	GND
8	$\overline{\text{AC CUT}}$	I	Back up signal input.
9	SUPER WOOFER ON	O	Not used. (Pull up)
10	ST-MUTE ON	O	Mute signal output for tuner.
11	$\overline{\text{180-A-PLAY}}$	I	Tape detection signal input.
12	$\overline{\text{180-B-PLAY}}$	I	
13	$\overline{\text{180-B-REC}}$	I	
14	$\overline{\text{CLOSE (DOOR SW)}}$	I	Not used.
15	$\overline{\text{BD-UP (5CD)}}$	I	Disc table up detect.
16	$\overline{\text{TRAY CLOSE (1CD)}}$	I	Not used.
17	ENCODER-1	I	Input selector control signal output. (Not used)
18	ENCODER-2	I	
19	ENCODER-3	I	
20	$\overline{\text{OUT SW OPEN}}$	I	Out switch signal input. (Not used)
21	LOAD IN	O	Loading motor control signal output. (Not used)
22	LOAD OUT	O	
23	TBL-L	O	Table motor control signal output.
24	TBL-R	O	
25	SCOR	I	Sub-code sync signal input.
26	TBL-SENS	I	CD Table sensor signal input.
27	RDS INT	I	RDS data start input. (Connected to GND)
28	RDS DATA	I	RDS data output. (Connected to GND)
29	DF LAT	O	Latch signal for digital filter.
30	SENS	I	Table sence signal input.
31	$\overline{\text{XRST}}$	O	Reset signal output for CD.
32	MG-RDY	I	RDY signal from graphic control.
33	ADJ	I	Test mode input.
34	$\overline{\text{GM-REQ}}$	I	Request signal from graphic control.
35	MG-CLK	O	Clock signal to graphic control.
36	GM-DATA	I	Data input from graphic control.
37	MG-DATA	O	Data output to graphic control.
38	CD-CLK	O	Clock output. Serial bus line.
39	$\overline{\text{ADJ-2}}$	I	Test mode input.
40	CD-DATA	O	Data output. Serial bus line.

Pin No.	Pin Name	I/O	Function
41	AUB IN	I	Audio bus in/output.
42	AUB OUT	O	
43	FOCUS SW	O	Focus switching signal output,.
44	SQ-CLK	O	Subcode Q data read clock output.
45	SQ-DATA	I	Subcode Q data input.
46	X-LAT	O	Latch signal digital signal processor.
47	TEST	I	Test land.
48	VAREF	I	Analog reference voltage input.
49	VAss	–	GND
50	Vss	–	
51	VDD	–	+5V
52	SPEC	I	Not used.
53	DESTINATION	I	
54	DISC SENS	I	
55	TC RELAY	O	REC/PB select signal output.
56	A-SHUT	I	Control signal input from deck. (Connected to GND)
57	B-SHUT	I	
58	B-HALF	I	
59	A-HALF	I	
60	220-A-PLAY	I	
61	220-B-PLAY	I	
62	62427 LAT	O	PLL latch output.
63	K-CON-LAT	O	Not used.
64	VOL LAT (AV)	O	Latch signal for electrical volume. (Not used)
65	REAR SP RELAY B	O	Not used.
66	FRONT SP RELAY C	O	
67	$\overline{\text{POWER ON}}$	O	Power on signal output.
68	CD POWER	O	CD power control signal output.
69	$\overline{\text{PROLOG LAT}}$	O	Not used.
70	$\overline{\text{MUTE}}$	O	Mute signal for AMP.
71	COM CLK	O	PLL clock output.
72	COM DIN	I	PLL data input.
73	COM DATA	O	PLL data output.
74	$\overline{\text{K CON ON}}$	O	Not used.
75	LIDDED LED	O	Disc No. LED drive signal output.
76	$\overline{\text{PROLOG ON}}$	O	Not used.
77	DBFB-HIGH	O	DBFB switching signal output.
78	$\overline{\text{URG STB STDBY}}$	I	Not used.
79	$\overline{\text{URG STB ON}}$	O	
80	$\overline{\text{TC A}}$	O	Deck A, B select output.

Pin No.
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100

• Abbreviation
FL : FLUORESCENT INDICATOR TUBE

Pin No.	Pin Name	I/O	Function
41	AUB IN	I	Audio bus in/output.
42	AUB OUT	O	
43	FOCUS SW	O	Focus switching signal output,.
44	SQ-CLK	O	Subcode Q data read clock output.
45	SQ-DATA	I	Subcode Q data input.
46	X-LAT	O	Latch signal digital signal processor.
47	TEST	I	Test land.
48	VAREF	I	Analog reference voltage input.
49	VAss	–	GND
50	Vss	–	
51	VDD	–	+5V
52	SPEC	I	Not used.
53	DESTINATION	I	
54	DISC SENS	I	
55	TC RELAY	O	REC/PB select signal output.
56	A-SHUT	I	Control signal input from deck. (Connected to GND)
57	B-SHUT	I	
58	B-HALF	I	
59	A-HALF	I	
60	220-A-PLAY	I	
61	220-B-PLAY	I	
62	62427 LAT	O	PLL latch output.
63	K-CON-LAT	O	Not used.
64	VOL LAT (AV)	O	Latch signal for electrical volume. (Not used)
65	REAR SP RELAY B	O	Not used.
66	FRONT SP RELAY C	O	
67	$\overline{\text{POWER ON}}$	O	Power on signal output.
68	CD POWER	O	CD power control signal output.
69	$\overline{\text{PROLOG LAT}}$	O	Not used.
70	$\overline{\text{MUTE}}$	O	Mute signal for AMP.
71	COM CLK	O	PLL clock output.
72	COM DIN	I	PLL data input.
73	COM DATA	O	PLL data output.
74	$\overline{\text{K CON ON}}$	O	Not used.
75	LIDDED LED	O	Disc No. LED drive signal output.
76	$\overline{\text{PROLOG ON}}$	O	Not used.
77	DBFB-HIGH	O	DBFB switching signal output.
78	$\overline{\text{URG STB STDBY}}$	I	Not used.
79	$\overline{\text{URG STB ON}}$	O	
80	$\overline{\text{TC A}}$	O	Deck A, B select output.

Pin No.	Pin Name	I/O	Function
81	$\overline{\text{NORM}}$	O	Not used.
82	$\overline{\text{BIAS OFF}}$	O	Bias oscillation output.
83	$\overline{\text{REC MUTE}}$	O	Mute output.
84	$\overline{\text{NR OFF}}$	O	Dolby ON/OFF signal output.
85	$\overline{\text{PB}}$	O	REC/PB signal output.
86	$\overline{\text{PASS. AMP/DOLBY}}$	O	Dolby switching signal output.
87	$\overline{\text{LINE MUTE ON}}$	O	Mute signal output for deck.
88	$\overline{\text{CAP. M-HIGH}}$	O	Not used.
89	A-TRG	O	
90	B-TRG	O	
91	$\overline{\text{TRG LOW}}$	O	
92	$\overline{\text{CAP M ON}}$	O	
93	$\overline{\text{STEREO}}$	I	Stereo detection signal from tuner.
94	$\overline{\text{TUNED}}$	I	Tuned detection signal from tuner.
95	ST-CE	O	Latch signal output for tuner.
96	$\overline{\text{DELAY SEL MIC}}$	O	Not used.
97	$\overline{\text{DELAY ON}}$	O	
98	DELAY LEVEL A	O	
99	DELAY LEVEL B	O	
100	VDD	–	+5V

5-18. IC BLOCK DIAGRAMS — CD SECTION —

IC101 CXA1782BQ

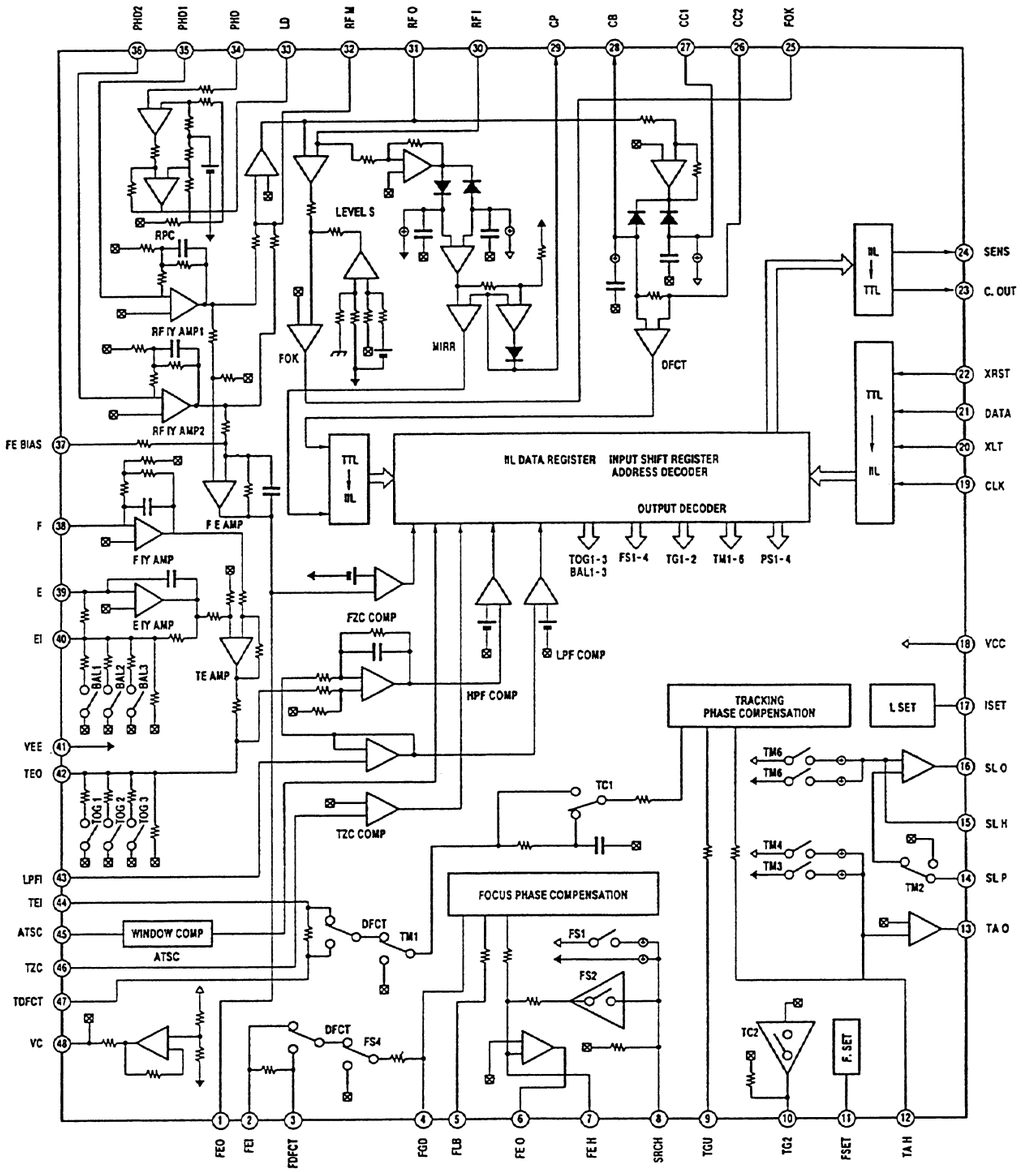

IC102 BA6397FP

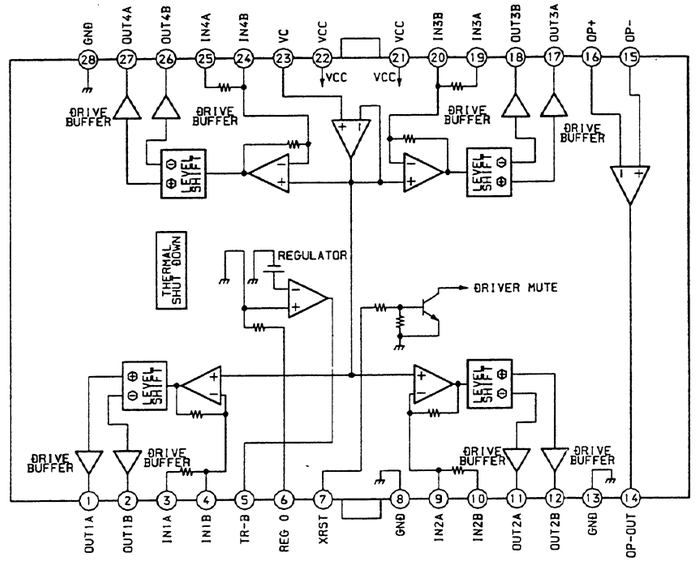

IC103 CXD2507AQ

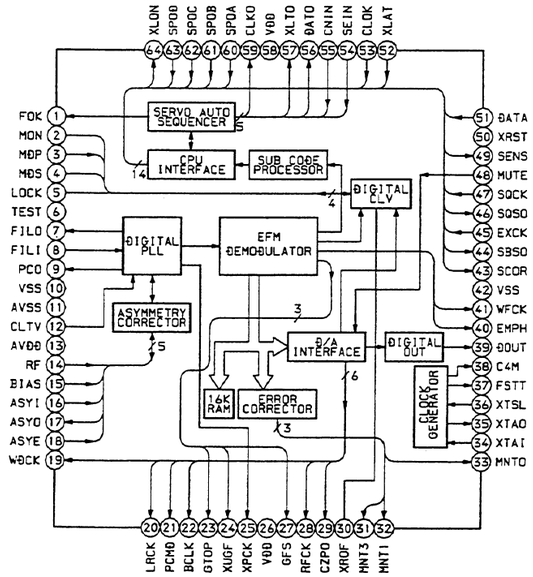

IC104 PCM1710U

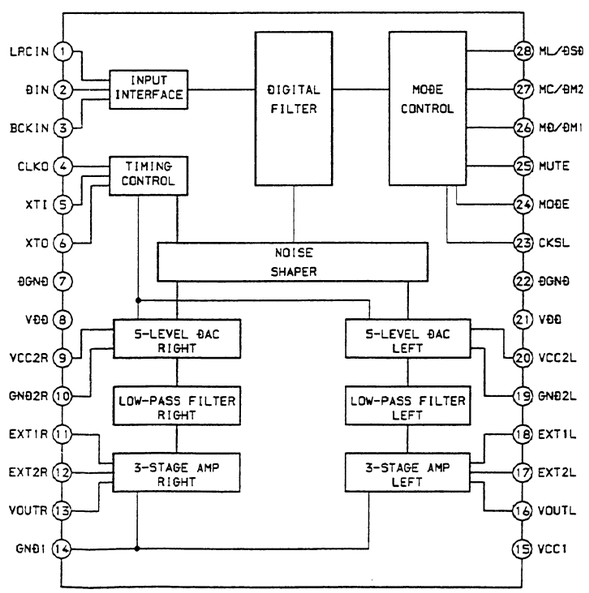

SECTION 6
EXPLODED VIEWS

NOTE:
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

- Abbreviation
  CND : Canadian model
  G : German model
  IT : Italian model
  EE : East European model
  MX : Mexican model
  AUS : Australian model
  AR : Argentine model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

6-1. CASE AND BACK PANEL SECTION

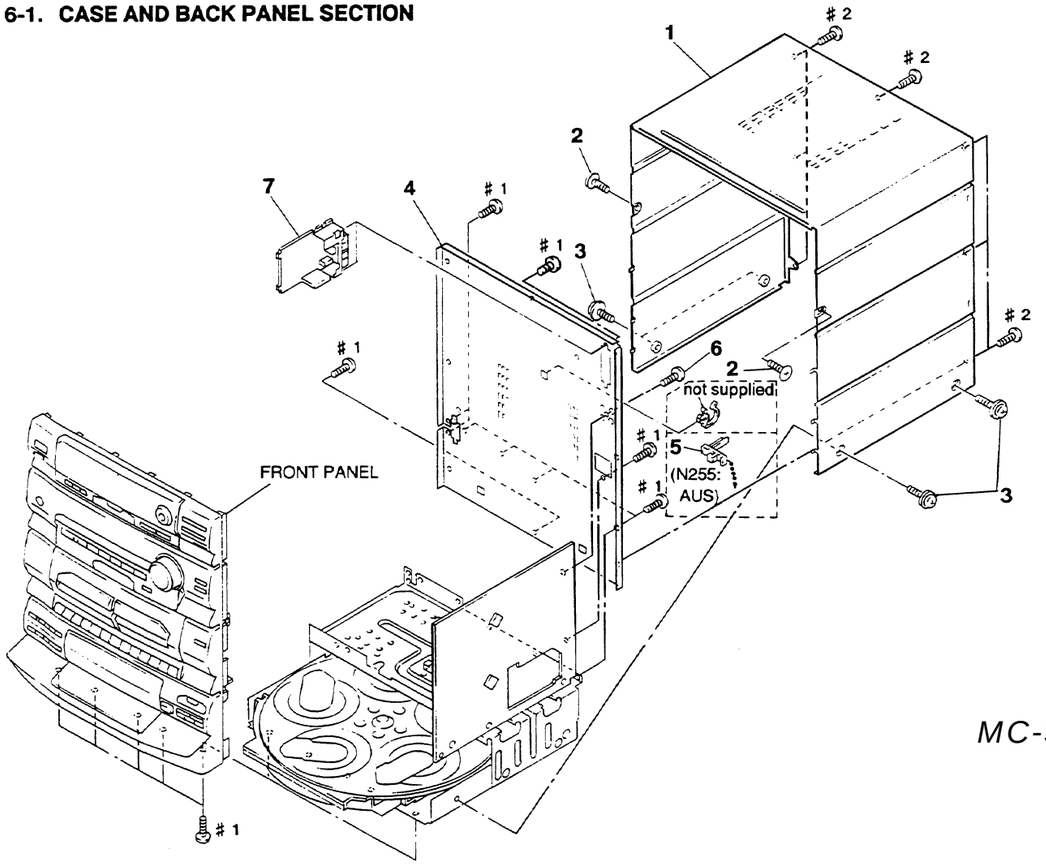

Ref. No.	Part No.	Description	Remark
* 1	4-978-177-11	CASE (D270/N255)	
* 1	4-978-177-31	CASE (G3100)	
2	3-363-099-01	SCREW (CASE 3 TP2)	
3	4-929-973-01	SCREW (CASE 3 POINT)	
* 4	4-978-187-21	PANEL, BACK (N255:AEP)	
* 4	4-978-187-31	PANEL, BACK (N255:G)	
* 4	4-978-187-41	PANEL, BACK (N255:IT)	
* 4	4-978-187-71	PANEL, BACK (N255:EE)	
* 4	4-978-188-01	PANEL, BACK (N255:E2)	
* 4	4-978-188-11	PANEL, BACK (N255:AR)	
* 4	4-978-188-21	PANEL, BACK (N255:AUS)	
* 4	4-978-188-31	PANEL, BACK (N255:PX)	
* 4	4-978-188-41	PANEL, BACK (N255:MX)	
* 4	4-979-319-01	PANEL, BACK (D270:US)	
* 4	4-979-319-11	PANEL, BACK (D270:CND)	
* 4	4-979-319-21	PANEL, BACK (G3100)	
5	4-956-370-12	BAND, PLUG FIXED (N255:AUS)	
6	4-909-982-11	SCREW, TAPPING	
* 7	A-4303-510-A	TCB BOARD, COMPLETE (D270/G3100)	
* 7	A-4303-513-A	TCB BOARD, COMPLETE (N255:E2, AUS, AR, MX, PX)	
* 7	A-4303-502-A	TCB BOARD, COMPLETE (N255:AEP)	
* 7	A-4303-503-A	TCB BOARD, COMPLETE (N255:IT, G)	
* 7	A-4303-504-A	TCB BOARD, COMPLETE (N255:EE)	

6-2. PANEL BOARD SECTION

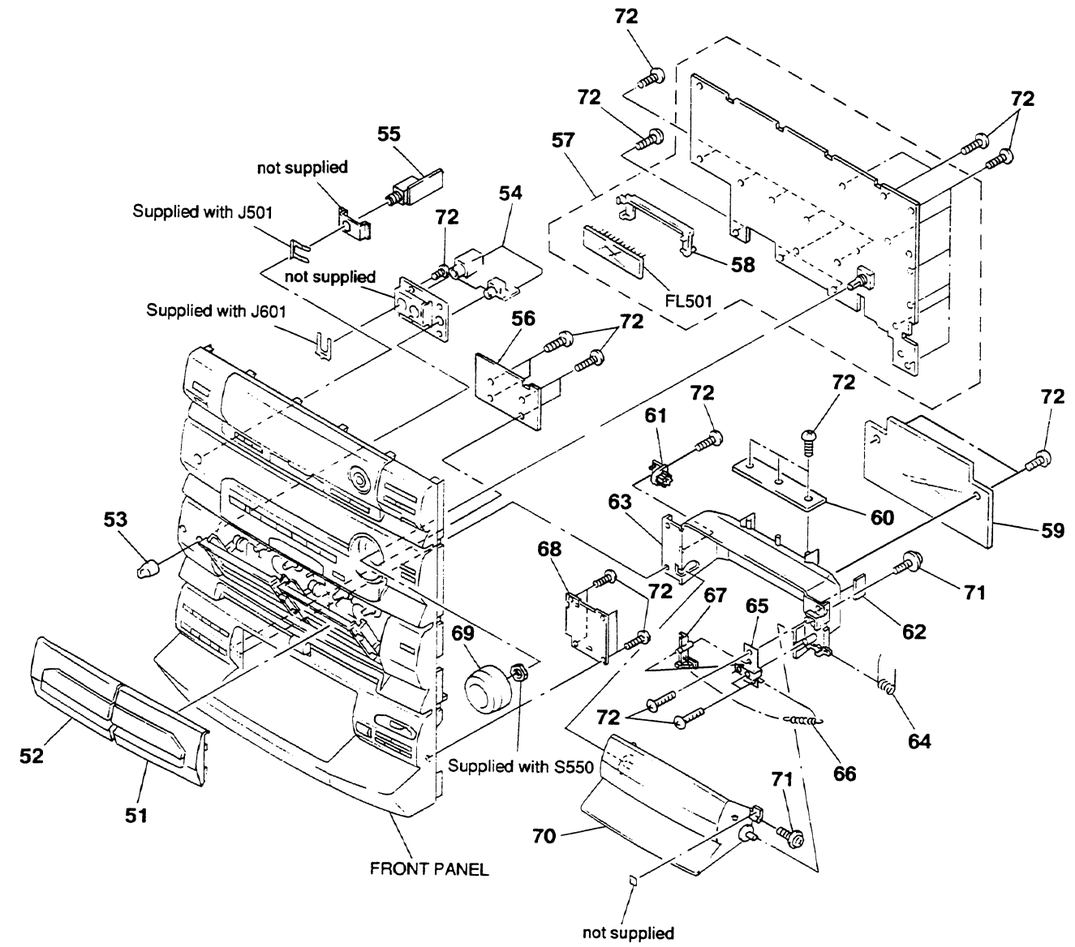

Ref. No.	Part No.	Description	Remark
51	X-4946-623-1	LID (B) ASSY, CASSETTE (D270/N255)	
51	X-4946-639-1	LID (B) ASSY, CASSETTE (G3100)	
52	X-4946-622-1	LID (A) ASSY, CASSETTE (D270/N255)	
52	X-4946-638-1	LID (A) ASSY, CASSETTE (G3100)	
53	4-973-644-01	KNOB (MIC) (N255:E2, AUS, PX, MX, AR)	
* 54	A-4378-921-A	MIC BOARD, COMPLETE (N255:E2, AUS, PX, MX, AR)	
* 55	1-659-153-11	H.P. BOARD	
* 56	1-659-150-11	CD-L PANEL BOARD	
* 57	A-4378-889-A	PANEL BOARD, COMPLETE (D270/G3100/N255:AEP, G, IT, EE)	
* 57	A-4378-919-A	PANEL BOARD, COMPLETE (N255:E2, AUS, PX, MX, AR)	
* 58	4-978-168-01	HOLDER, FL TUBE	
59	4-980-060-01	INDICATOR (COVER)	
* 60	1-659-154-11	CD-LED BOARD	
61	3-354-963-21	DAMPER	
* 62	1-659-161-11	DOOR SW BOARD	
63	4-978-140-11	COVER (CD)	
64	4-978-171-01	SPRING, TORSION	
* 65	4-978-169-01	BRACKET (OPEN)	
66	4-978-170-01	SPRING, TENSION	
67	4-978-141-01	LEVER, LOCK	
* 68	1-659-151-11	CD-R PANEL BOARD	
69	4-978-142-01	KNOB (V)	
70	4-978-139-01	LID, DISC	
71	4-957-577-01	SCREW PTP WH (2.6X8)	
72	4-951-620-01	SCREW (2.6X8), +BVTP	
FL501	1-517-489-11	INDICATOR TUBE, FLUORESCENT	

MC-Service

6-3. FRONT PANEL SECTION

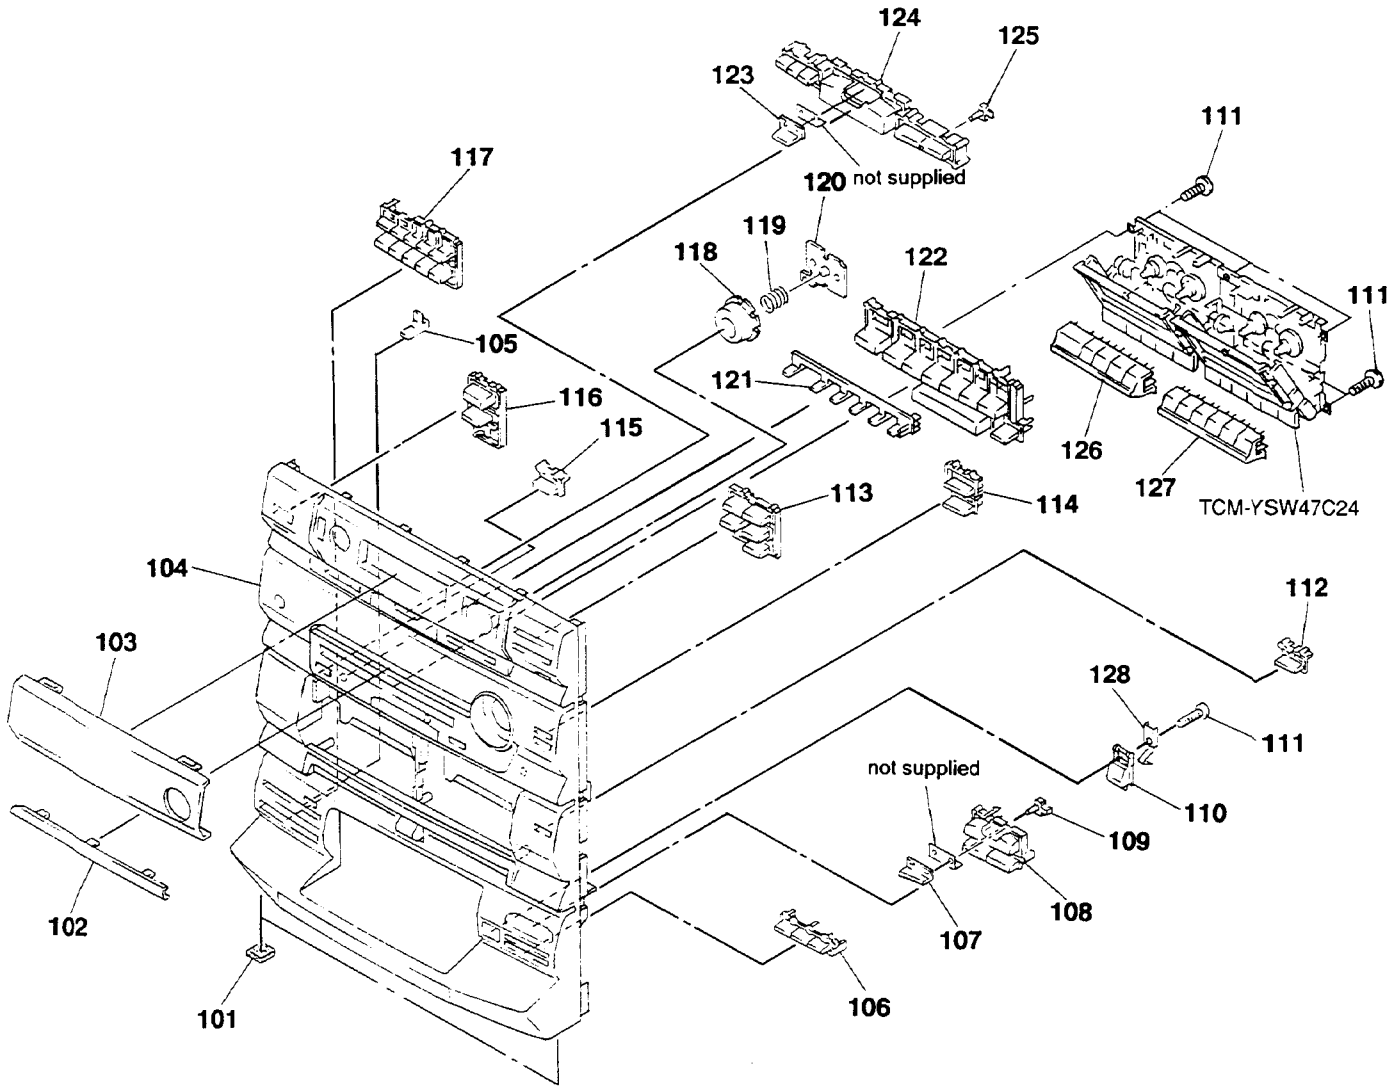

Ref.No.	Part No.	Description	Remark
101	4-948-236-01	CUSHION (107)	
102	4-978-134-01	DISPLAY (TA)	
103	4-978-131-01	DISPLAY (ST)	
104	4-978-113-11	PANEL, FRONT (N255:AEP, G, IT, EE)	
104	4-978-113-21	PANEL, FRONT (N255:E2, AUS, PX, MX, AR)	
104	4-978-113-41	PANEL, FRONT (D270)	
104	4-978-113-51	PANEL, FRONT (G3100)	
105	4-978-138-01	INDICATOR (AUTO-L)	
106	4-978-129-01	BUTTON (DISC SKIP)	
107	4-978-137-01	INDICATOR (PLAY)	
108	4-978-128-01	BUTTON (PLAY)	
109	4-978-161-01	INDICATOR (PAUSE)	
110	4-978-130-01	BUTTON (OPEN)	
111	4-951-620-01	SCREW (2.6X8), +BVTP	
112	4-978-124-01	BUTTON (DOLBY) (D270/G3100/N255:AEP, G, IT, EE)	

Ref.No.	Part No.	Description	Remark
113	4-978-120-01	BUTTON (TUNING)	
114	4-978-122-01	BUTTON (DBFB)	
115	4-978-151-01	BUTTON (PON) (N255:E2, AUS, PX, MX, AE)	
116	4-978-118-01	BUTTON (POWER)	
117	4-978-127-01	BUTTON (DISC 5)	
118	4-978-119-01	BUTTON (CURSOR)	
119	4-978-683-01	SPRING, COMPRESSION	
120	4-978-682-01	COVER (CURSOR)	
121	4-978-681-01	INDICATOR (SE5)	
122	4-978-123-01	BUTTON (FU)	
123	4-978-135-01	INDICATOR (BAND)	
124	4-978-121-01	BUTTON (BAND)	
125	4-978-136-01	INDICATOR (ENTER)	
126	4-978-125-01	BUTTON (MD-A)	
127	4-978-126-01	BUTTON (MD-B)	
128	4-980-061-01	SPRING (OPEN)	

6-4. CHASSIS SECTION

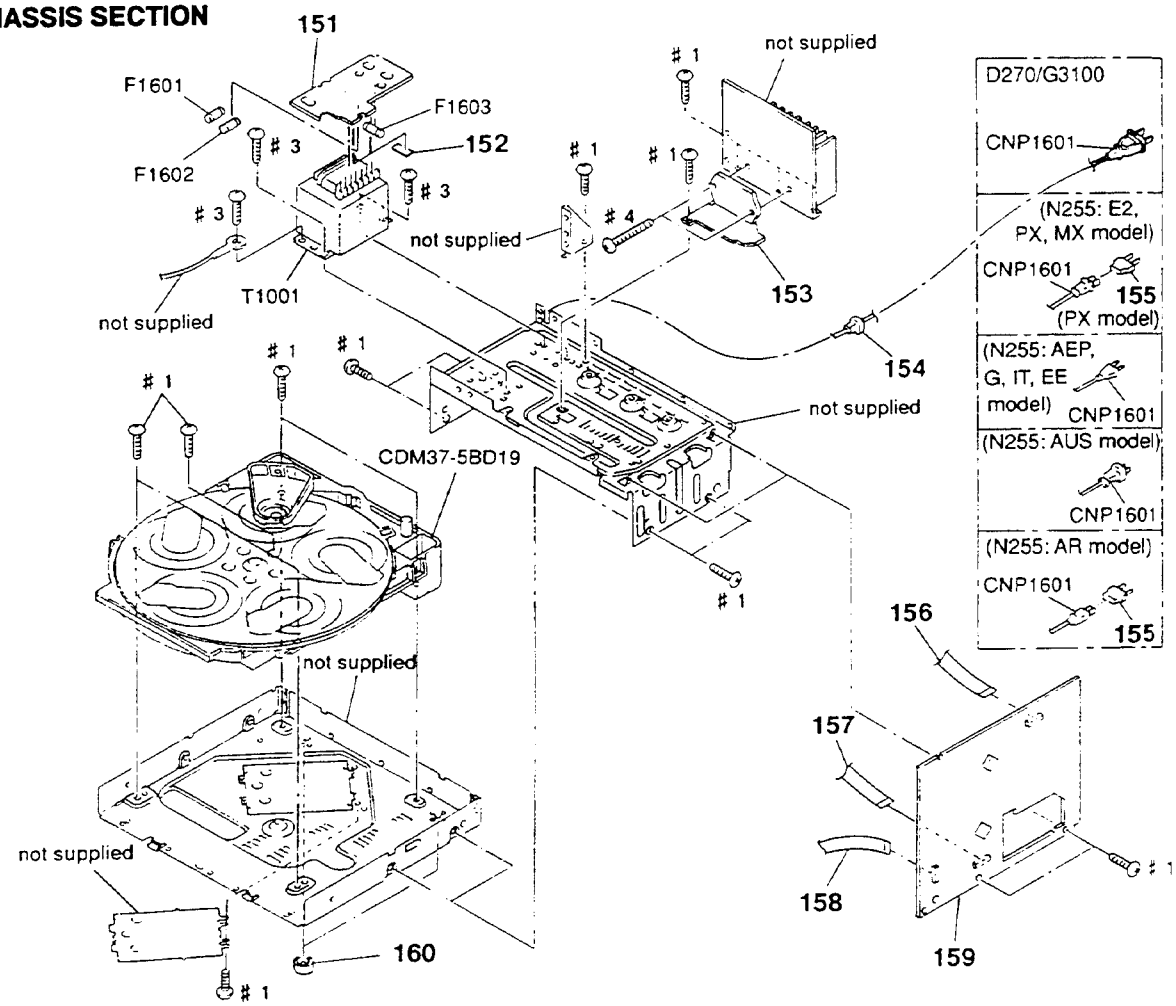

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
* 151	1-659-155-11	TRANSFORMER BOARD	
* 152	3-701-946-26	LABEL (4A/125V), FUSE (D270:CND)	
152	3-701-947-18	LABEL (T5A), FUSE (N255)	
* 153	A-4378-913-A	POWER AMP BOARD, COMPLETE (D270/G3100)	
* 153	A-4378-918-A	POWER AMP BOARD, COMPLETE (N255:AEP, G, IT, EE)	
* 153	A-4378-928-A	POWER AMP BOARD, COMPLETE (N255:E2, AUS, PX, MX, AR)	
* 154	3-703-244-00	BUSHING (2104), CORD (D270/G3100/N255:AEP, AUS, G, IT, EE, AR)	
154	4-966-266-01	BUSHING (S)(FBS002), CORD(N255:E2, PX, MX)	
⚠155	1-569-007-11	ADAPTER, CONVERSION 2P (N255:PX)	
⚠155	1-569-008-11	ADAPTER, CONVERSION 2P (N255:AR)	
156	1-769-977-11	WIRE (FLAT TYPE)(13 CORE) (D270/G3100/N255:E2, AUS, PX, MX, AR)	
156	1-773-009-11	WIRE (FLAT TYPE)(15 CORE) (N255:AEP, G, IT, EE)	
157	1-776-238-11	WIRE (FLAT TYPE)(19 CORE)	
158	1-773-024-11	WIRE (FLAT TYPE)(15 CORE)	
* 159	A-4378-904-A	MAIN BOARD, COMPLETE (D270/G3100)	
* 159	A-4378-915-A	MAIN BOARD, COMPLETE (N255:AEP)	
* 159	A-4378-922-A	MAIN BOARD, COMPLETE (N255:E2, MX, AR)	
* 159	A-4389-680-A	MAIN BOARD, COMPLETE (N255:G, IT)	
* 159	A-4389-688-A	MAIN BOARD, COMPLETE (N255:EE)	
* 159	A-4389-691-A	MAIN BOARD, COMPLETE (N255:AUS, PX)	
160	X-4941-228-1	FOOT ASSY	
⚠CNP16011-555-750-00		CORD, POWER (N255:AR)	
⚠CNP16011-558-943-51		CORD, POWER (N255:E2, PX, MX)	
⚠CNP16011-575-042-21		CORD, POWER (D270/G3100)	
⚠CNP16011-575-651-21		CORD, POWER (N255:AEP, G, IT, EE)	
⚠CNP16011-696-966-11		CORD, POWER (N255:AUS)	
⚠F1601	1-532-299-00	FUSE (5A/125V)(N255)	
⚠F1602	1-532-299-00	FUSE (5A/125V)(N255)	
⚠F1603	1-533-419-11	FUSE (4A/125V)(D270:CND)	
⚠F1603	1-533-420-11	FUSE, GLASS CYLINDRICAL (DIA. 5) (5A/125V)(D270:US/G3100)	
⚠T1001	1-429-307-11	TRANSFORMER, POWER(N255:AEP, G, IT, EE)	
⚠T1001	1-429-308-11	TRANSFORMER, POWER(N255:E2, AUS, PX, MX, AR)	
⚠T1001	1-429-341-11	TRANSFORMER, POWER (D270:US/G3100)	
⚠T1001	1-429-428-11	TRANSFORMER, POWER (D270:CND)	

MC-Service

6-5. TC MECHANISM SECTION 1 (TCM-YSW47C24)

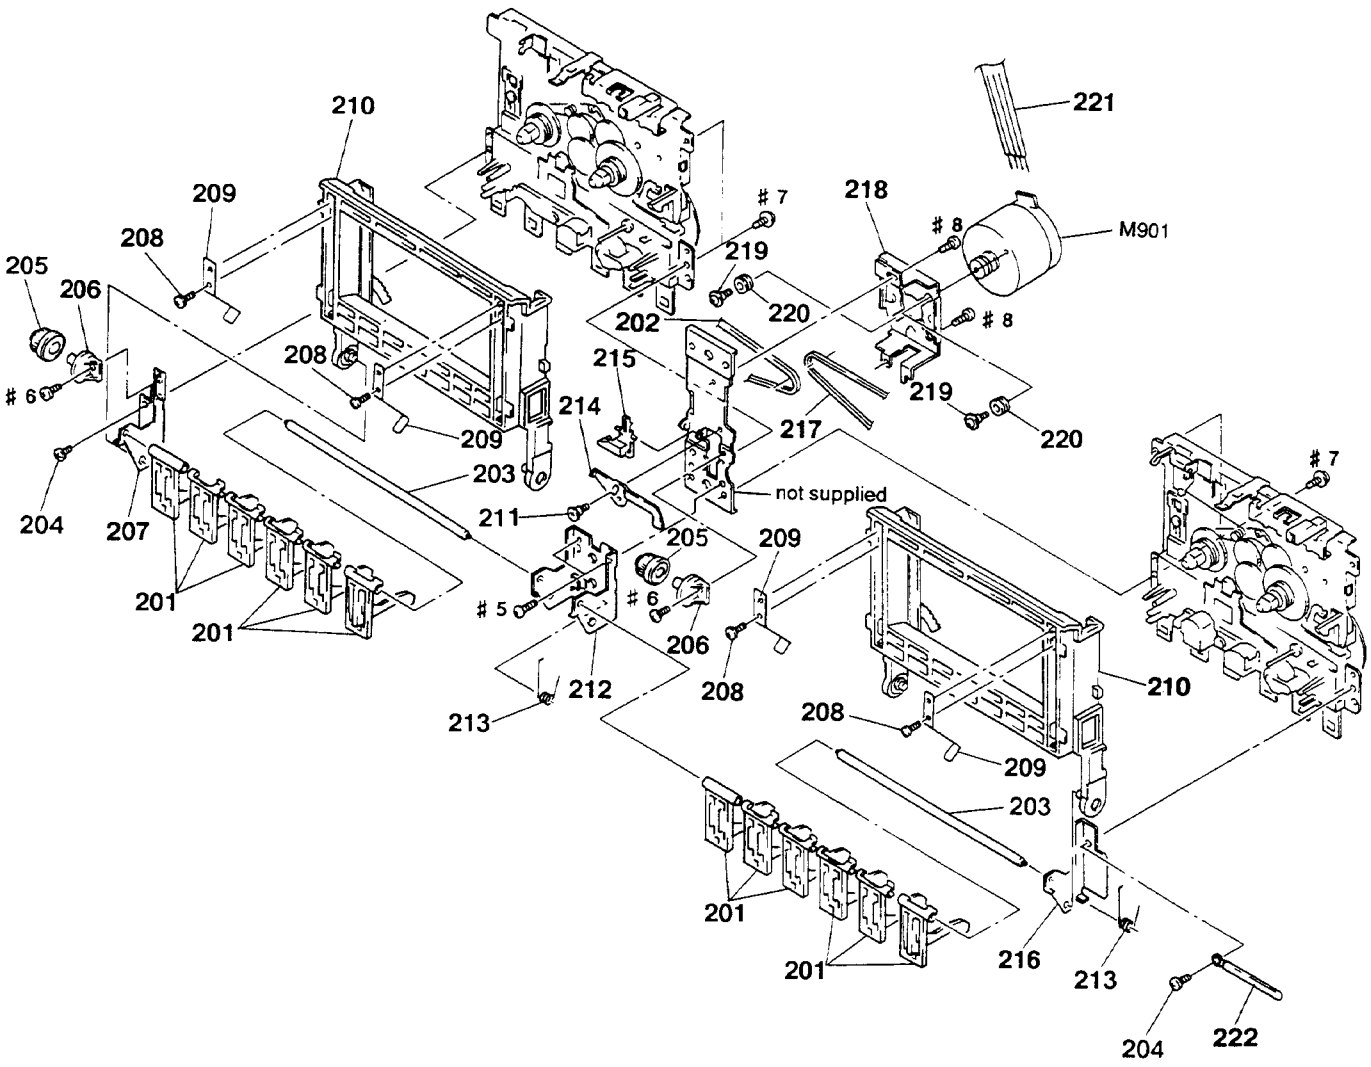

Ref.No.	Part No.	Description	Remark
201	3-931-802-01	BUTTON, LEVER	
202	3-918-734-01	BELT	
* 203	3-931-794-01	BUTTON, SHAFT	
204	3-918-741-01	SCREW	
205	3-931-807-01	DAMPER, GEAR	
206	3-931-806-01	GEAR, HOLDER	
* 207	3-931-793-01	BUTTON (L), HOLDER	
208	3-931-790-01	SCREW	
* 209	3-931-804-01	PLATE, KEEP	
210	3-931-803-01	CASE, CASSETTE	
211	3-931-791-01	SCREW	
212	3-931-809-01	BUTTON (S), HOLDER	

Ref.No.	Part No.	Description	Remark
213	3-931-805-01	SPRING	
* 214	3-369-927-01	ARM, CONNECT	
215	3-369-928-01	ARM, RELEASE	
* 216	3-931-792-01	BUTTON (R), HOLDER	
217	3-369-931-01	BELT	
* 218	3-918-742-01	HOLDER, MOTOR	
219	3-343-896-01	SCREW, MOTOR	
220	3-343-897-01	WASHER, RUBBER	
221	1-698-705-11	MOTOR, WIRE	
222	3-931-808-01	LUG, PLATE	
M901	X-3372-231-1	MOTOR ASSY (CAPSTAN/REEL)	

6-6. TC MECHANISM SECTION 2 (TCM-YSW47C24)

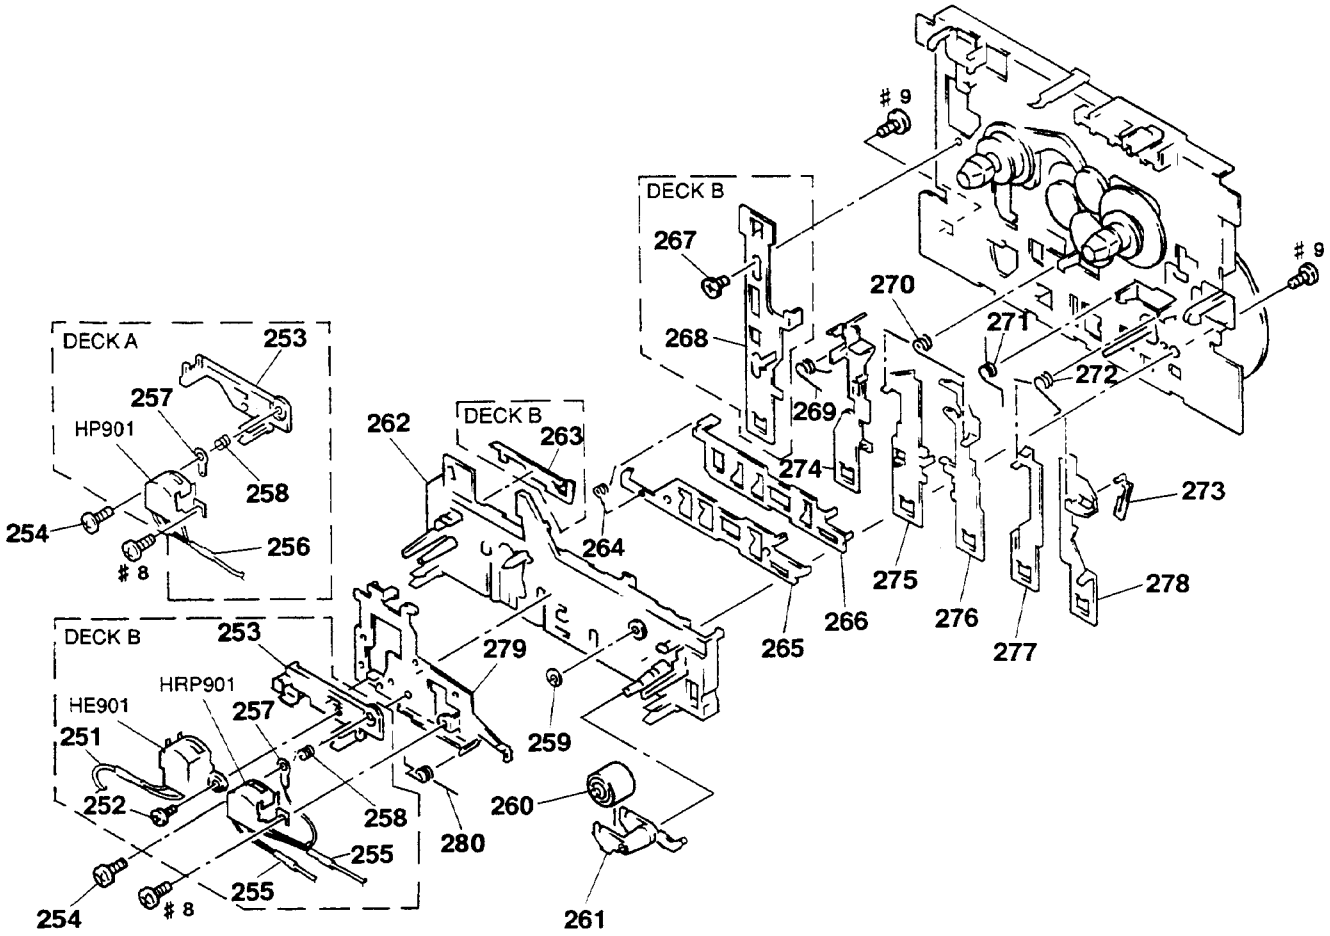

Ref. No.	Part No.	Description	Remark
251	1-500-322-11	HEAD, WIRE (E) (DECK B)	
252	3-931-789-01	SCREW (DECK B)	
253	1-500-319-11	HEAD, HOLDER (DECK B)	
253	3-362-986-01	HOLDER, HEAD (DECK A)	
254	3-363-229-01	SCREW	
255	1-500-320-11	HEAD, WIRE R/P (DECK B)	
256	1-500-321-11	HEAD, WIRE P.B (DECK A)	
257	3-390-817-01	LUG	
258	3-362-985-01	SPRING	
259	3-362-980-01	WASHER	
260	3-362-982-01	PINCH ROLLER	
261	3-362-981-01	PINCH ARM	
262	3-362-942-01	FRAME ASSY	
263	3-362-944-01	STOPPER, REC (DECK B)	
264	3-362-945-01	SPRING	
* 265	3-362-943-01	PLATE, FUNCTION	
* 266	3-362-946-01	LEVER, SW	

Ref. No.	Part No.	Description	Remark
267	3-362-958-01	SCREW (DECK B)	
* 268	3-362-947-01	LEVER, REC (DECK B)	
269	3-362-954-01	SPRING	
270	3-362-955-01	SPRING	
271	3-362-956-01	SPRING	
272	3-932-552-01	SPRING	
273	3-362-953-01	ARM, PAUSE	
* 274	3-362-948-01	LEVER, PLAY	
* 275	3-362-949-01	LEVER, REW	
* 276	3-362-950-01	LEVER, FF	
* 277	3-362-951-01	LEVER, SE	
* 278	3-362-952-01	LEVER, PAUSE	
* 279	3-362-984-01	HEAD (BASE)	
280	3-362-983-01	SPRING	
HE901	1-500-318-11	HEAD, E (ERASE) (DECK B)	
HP901	1-543-424-21	HEAD (PLAYBACK) (DECK A)	
HRP901	1-543-424-21	HEAD (RECORD/PLAYBACK) (DECK B)	

MC-Service

6-7. TC MECHANISM SECTION 3 (TCM-YSW47C24)

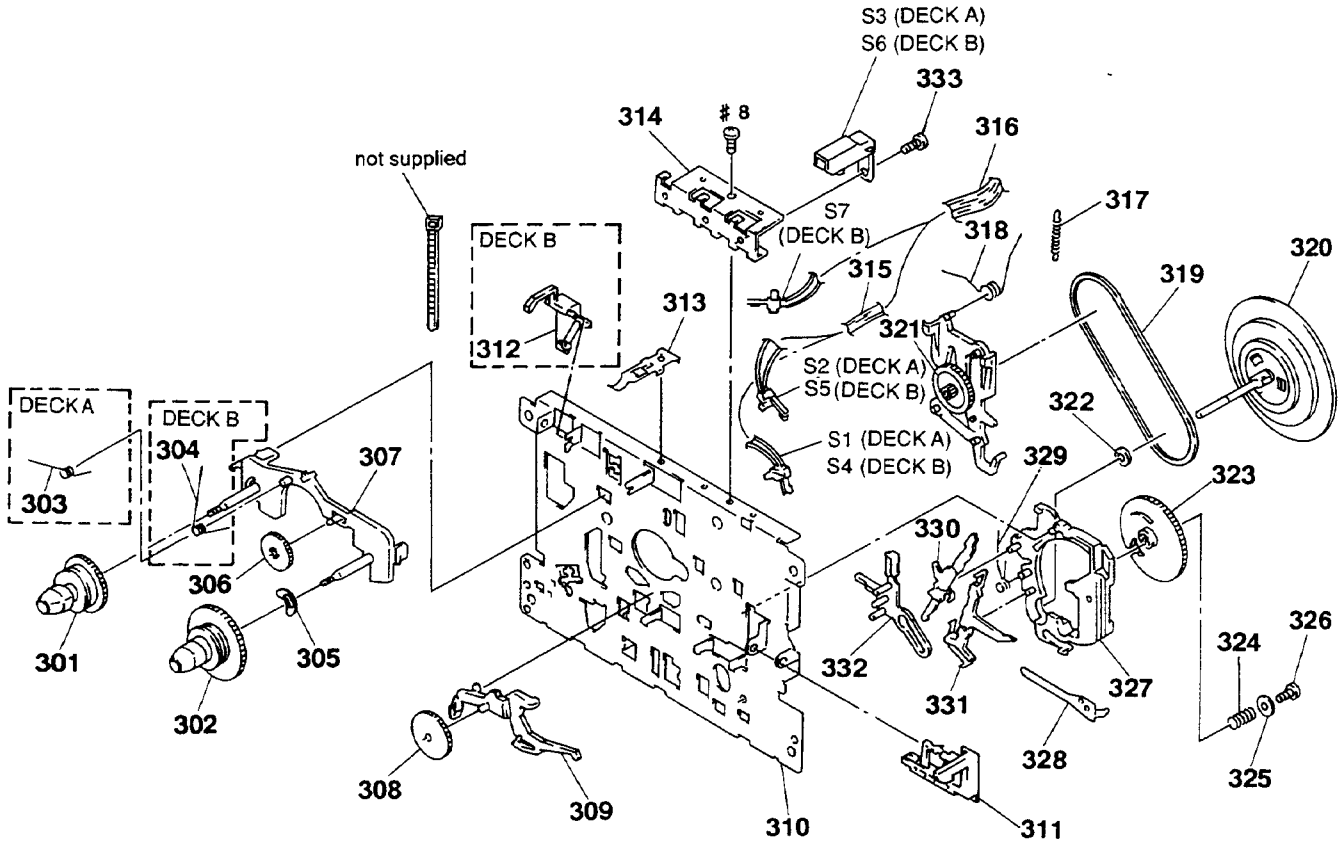

Ref.No.	Part No.	Description	Remark
301	X-3363-611-1	REEL, S	
302	3-362-962-01	REEL ASSY, T	
303	3-372-120-01	SPRING (DECK A)	
304	3-918-735-01	SPRING (DECK B)	
305	3-932-553-01	PLATE SPRING BT	
306	3-362-965-01	IDLER, FF	
307	3-362-961-01	SPINDLE (BASE)	
308	3-362-960-01	PULLEY, IDLER	
309	3-362-959-01	ARM, IDLER	
* 310	3-362-941-01	CHASSIS	
311	3-362-968-01	LEVER, EJECT	
312	3-362-966-01	INTER LOCK (DECK B)	
313	3-918-744-01	SPRING, CASSETTE	
314	1-762-610-11	SWITCH, PLATE	
315	1-762-613-11	SWITCH, WIRE LEAF (DECK A)	
316	1-762-612-11	SWITCH, WIRE LEAF (DECK B)	
317	3-362-971-01	SPRING	
318	3-362-970-01	SPRING	
319	3-918-734-01	BELT	
320	3-369-921-01	FW ASSY	

Ref.No.	Part No.	Description	Remark
321	3-362-969-01	IDLER ASSY, PF	
322	3-918-736-01	WASHER	
323	X-3363-315-1	GEAR, CAM	
324	3-369-962-01	SPRING, COMPRESSION	
325	3-369-961-01	WASHER	
326	3-366-352-01	SCREW	
327	3-362-973-01	AS (BASE)	
328	3-362-978-01	SPRING, PLATE	
329	3-362-977-01	SPRING	
330	3-362-976-01	LEVER, CONTROL	
331	3-362-975-01	LEVER, SENSOR	
332	3-387-697-01	SENSOR	
333	3-918-741-01	SCREW	
S1	1-571-556-11	SWITCH, LEAF (MOTOR) (DECK A)	
S2	1-571-745-11	SWITCH, LEAF (PLAY) (DECK A)	
S3	1-762-611-11	SWITCH, LEAF (TYPE 2) (DECK A)	
S4	1-571-556-11	SWITCH, LEAF (MOTOR) (DECK B)	
S5	1-571-745-11	SWITCH, LEAF (PLAY) (DECK B)	
S6	1-762-611-11	SWITCH, LEAF (TYPE 2) (DECK B)	
S7	1-571-556-11	SWITCH, LEAF (REC) (DECK B)	

6-8. CD MECHANISM SECTION (CDM37-5BD19)

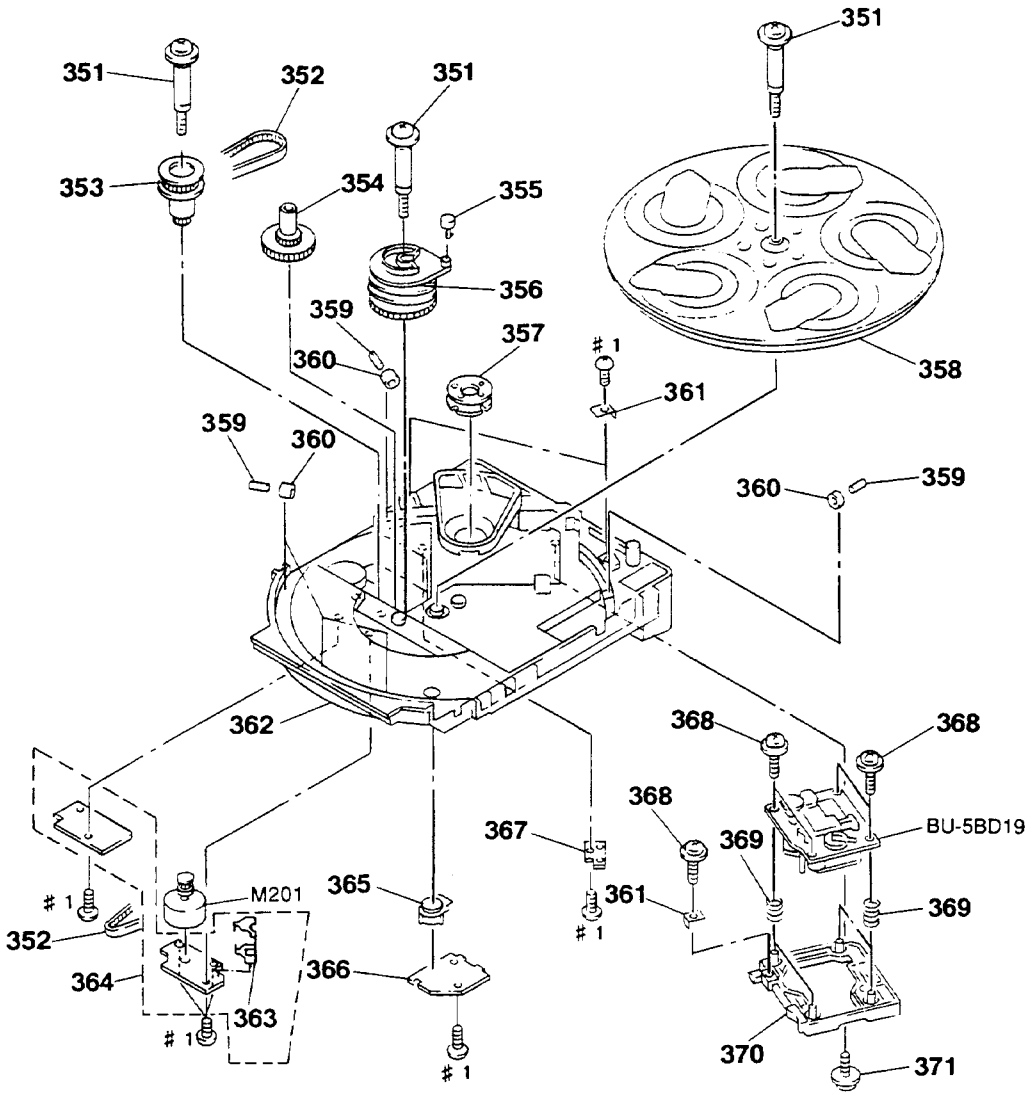

Ref. No.	Part No.	Description	Remark
351	4-978-423-01	SCREW, STEP	
352	4-944-490-01	BELT (TIMING)	
353	A-4660-978-A	GEAR (PULLEY) ASSY	
354	4-978-421-01	GEAR (MID)	
355	4-978-425-01	ROLLER (CAM)	
356	4-978-420-01	CAM (HOLDER)	
* 357	1-452-538-11	MAGNET	
358	4-978-417-01	TABLE, DISC	
359	4-934-376-01	SHAFT (ROLLER)	
360	X-4924-457-1	ROLLER ASSY	
* 361	4-978-583-01	BRACKET (BU)	

Ref. No.	Part No.	Description	Remark
* 362	4-978-418-01	CHASSIS	
* 363	4-980-385-01	HOLDER (SW)	
* 364	A-4673-765-A	CD MOTOR BOARD, COMPLETE	
365	4-978-426-01	INDICATOR (NO.)	
* 366	1-659-059-12	LED BOARD	
* 367	1-659-058-12	TABLE SENSOR BOARD	
368	4-933-134-01	SCREW (+PTPWH M2.6X6)	
369	4-958-593-01	SPRING (BU), COMPRESSION	
* 370	4-978-419-01	HOLDER (BU-5)	
371	4-917-583-71	BRACKET, YOKE	
M201	A-4660-977-A	MOTOR ASSY (TABLE)	

MC-Service

6-9. BASE UNIT SECTION (BU-5BD19)

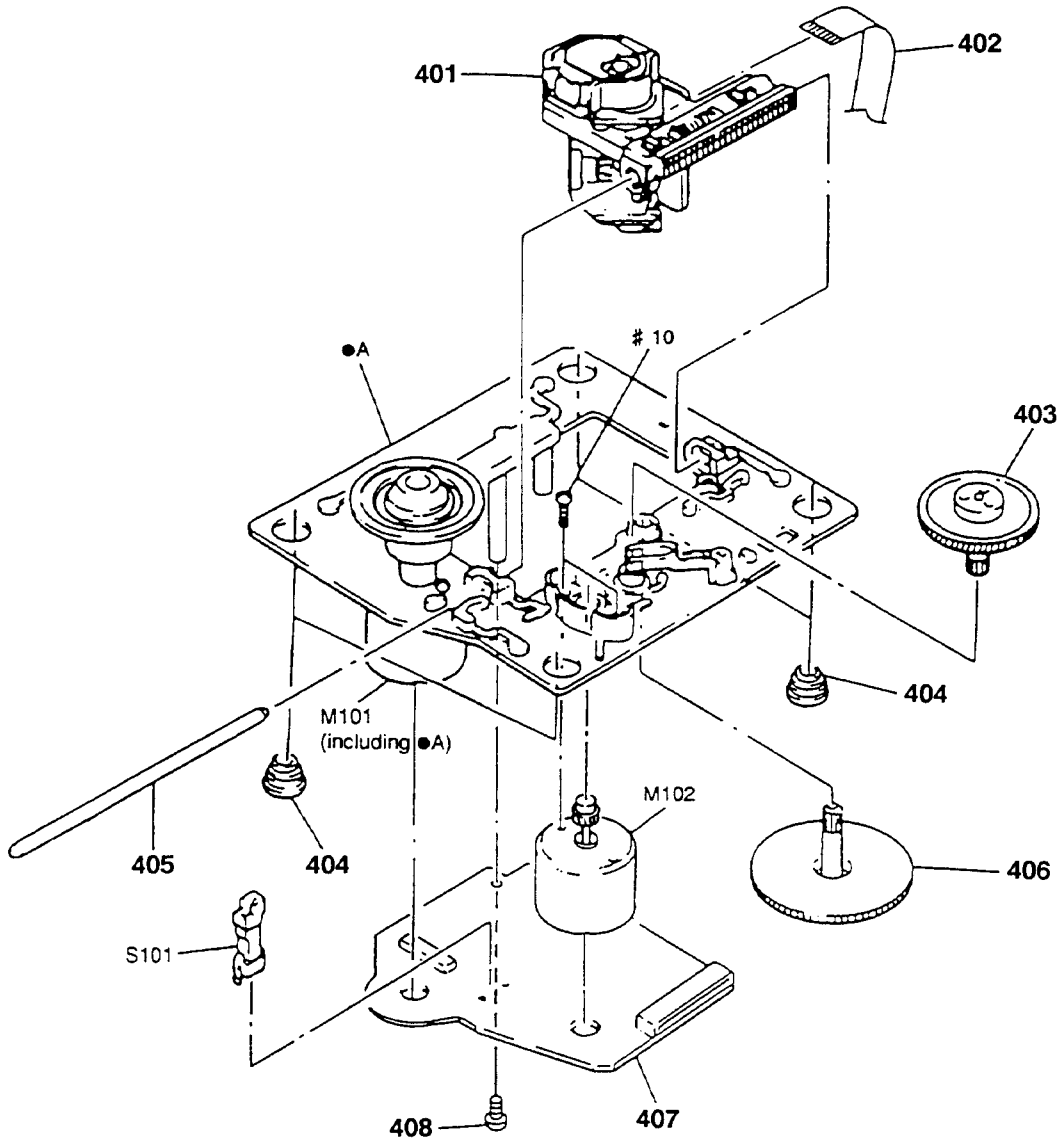

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

Ref.No.	Part No.	Description	Remark
⚠401	8-848-387-01	OPTICAL PICK-UP KSS-213BA/S-N	
402	1-769-069-11	WIRE (FLAT TYPE) (16 CORE)	
403	4-917-567-01	GEAR (M)	
404	4-951-940-01	INSULATOR (BU)	
405	4-917-565-01	SHAFT, SLED	
406	4-917-564-01	GEAR (P), FLATNESS	

Ref.No.	Part No.	Description	Remark
* 407	A-4673-402-A	BD BOARD, COMPLETE	
408	4-951-620-01	SCREW (2.6X8), +BVTP	
M101	X-4917-523-4	MOTOR ASSY (SPINDLE)	
M102	X-4917-504-1	MOTOR ASSY (SLED)	
S101	1-572-085-11	SWITCH, LEAF (LIMIT)	

BD

SECTION 7
ELECTRICAL PARTS LIST

NOTE:

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
  All resistors are in ohms
  METAL: Metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F : nonflammable
- CAPACITORS
  uF : μF
- SEMICONDUCTORS
  In each case, u: μ , for example:
  uA...: μA..., uPA...: μPA..., uPB...: μPB..., uPC...: μPC..., uPD...: μPD...
- COILS
  uH : μH
- Abbreviation
  CND : Canadian model
  G : German model
  IT : Italian model
  EE : East European model
  MX : Mexican model
  AUS : Australian model
  AR : Argentine model

Ref. No.	Part No.	Description			Remark
*	A-4673-402-A	BD BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C101	1-126-607-11	ELECT CHIP	47uF	20%	4V
C102	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C103	1-164-346-11	CERAMIC CHIP	1uF		16V
C105	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C106	1-164-695-11	CERAMIC CHIP	0.0022uF	5%	50V
C107	1-164-695-11	CERAMIC CHIP	0.0022uF	5%	50V
C108	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C109	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C110	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C111	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C112	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C113	1-164-695-11	CERAMIC CHIP	0.0022uF	5%	50V
C114	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C115	1-126-607-11	ELECT CHIP	47uF	20%	4V
C116	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
C117	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C118	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C119	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C120	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C121	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C122	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C123	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C124	1-126-607-11	ELECT CHIP	47uF	20%	4V
C125	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C126	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C127	1-164-695-11	CERAMIC CHIP	0.0022uF	5%	50V
C128	1-163-135-00	CERAMIC CHIP	560PF	5%	50V
C129	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C130	1-164-336-11	CERAMIC CHIP	0.33uF		25V
C131	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C132	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C133	1-163-145-00	CERAMIC CHIP	0.0015uF	5%	50V
C134	1-164-346-11	CERAMIC CHIP	1uF		16V
C135	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C136	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C137	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C139	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C140	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C141	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C142	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C145	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C146	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C147	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C148	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C149	1-164-346-11	CERAMIC CHIP	1uF		16V
C153	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C154	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
		< CONNECTOR >			
CNU101	1-770-014-11	CONNECTOR, FFC/FPC 16P			
CNU102	1-770-013-11	CONNECTOR, FFC/FPC 19P			
		< IC >			
IC101	8-752-069-56	IC CXA1782BQ			
IC102	8-759-291-06	IC BA6397FP			
IC103	8-752-372-94	IC CXD2507AQ			
IC104	8-759-185-29	IC PCM1710U-B			
		< TRANSISTOR >			
Q101	8-729-010-08	TRANSISTOR MSB710-R			
Q102	8-729-424-08	TRANSISTOR UN2111			
Q103	8-729-421-22	TRANSISTOR UN2211			
		< RESISTOR >			
R102	1-216-001-00	METAL CHIP	10	5%	1/10W
R103	1-216-049-91	METAL GLAZE	1K	5%	1/10W
R104	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R105	1-216-093-00	METAL CHIP	68K	5%	1/10W
R106	1-216-093-00	METAL CHIP	68K	5%	1/10W
R107	1-216-093-00	METAL CHIP	68K	5%	1/10W
R108	1-216-093-00	METAL CHIP	68K	5%	1/10W
R109	1-216-097-91	METAL GLAZE	100K	5%	1/10W
R112	1-216-083-00	METAL CHIP	27K	5%	1/10W
R113	1-216-083-00	METAL CHIP	27K	5%	1/10W
R114	1-216-101-00	METAL CHIP	150K	5%	1/10W
R115	1-216-101-00	METAL CHIP	150K	5%	1/10W
R116	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R117	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R118	1-216-049-91	METAL GLAZE	1K	5%	1/10W

MC-Service

Ref.No.	Part No.	Description				Remark
R119	1-216-089-91	METAL GLAZE	47K	5%	1/10W	
R120	1-216-089-91	METAL GLAZE	47K	5%	1/10W	
R121	1-216-114-00	METAL GLAZE	510K	5%	1/10W	
R122	1-216-097-91	METAL GLAZE	100K	5%	1/10W	
R123	1-216-099-00	METAL CHIP	120K	5%	1/10W	
R124	1-216-091-00	METAL CHIP	56K	5%	1/10W	
R125	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R126	1-216-063-91	METAL GLAZE	3.9K	5%	1/10W	
R127	1-216-089-91	METAL GLAZE	47K	5%	1/10W	
R128	1-216-105-91	METAL GLAZE	220K	5%	1/10W	
R129	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R130	1-216-079-00	METAL CHIP	18K	5%	1/10W	
R131	1-216-079-00	METAL CHIP	18K	5%	1/10W	
R132	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R133	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R134	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R135	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R136	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R137	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R138	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R139	1-216-033-00	METAL CHIP	220	5%	1/10W	
R140	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R141	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R142	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R143	1-216-121-91	METAL GLAZE	1M	5%	1/10W	
R144	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R145	1-216-097-91	METAL GLAZE	100K	5%	1/10W	
R146	1-216-097-91	METAL GLAZE	100K	5%	1/10W	
R147	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R148	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R149	1-216-049-91	METAL GLAZE	1K	5%	1/10W	
R150	1-216-037-00	METAL CHIP	330	5%	1/10W	
R151	1-216-037-00	METAL CHIP	330	5%	1/10W	
R152	1-216-037-00	METAL CHIP	330	5%	1/10W	
R153	1-216-082-00	METAL GLAZE	24K	5%	1/10W	
R154	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R156	1-216-085-00	METAL CHIP	33K	5%	1/10W	
R157	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	
R158	1-216-001-00	METAL CHIP	10	5%	1/10W	
		< VARIABLE RESISTOR >				
RV101	1-241-396-11	RES, ADJ, METAL GLAZE 22K				
RV102	1-241-396-11	RES, ADJ, METAL GLAZE 22K				
RV103	1-241-396-11	RES, ADJ, METAL GLAZE 22K				
		< SWITCH >				
S101	1-572-085-11	SWITCH, LEAF (LIMIT)				
		< VIBRATOR >				
X101	1-579-280-11	VIBRATOR, CRYSTAL (16.9344MHz)				

Ref.No.	Part No.	Description				Remark
**********						
*	A-4673-765-A	CD MOTOR BOARD, COMPLETE				
		**********				
*	4-980-385-01	HOLDER (SW)				
		< CAPACITOR >				
C201	1-124-907-11	ELECT	10uF	20%	50V	
C202	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C203	1-124-907-11	ELECT	10uF	20%	50V	
		< CONNECTOR >				
* CN201	1-568-947-11	PIN, CONNECTOR 9P				
		< IC >				
IC201	8-759-365-94	IC TA8409S				
		< COIL >				
L201	1-408-117-00	INDUCTOR 10uH				
		< RESISTOR >				
R205	1-249-427-11	CARBON	6.8K	5%	1/4W	F
R206	1-249-425-11	CARBON	4.7K	5%	1/4W	F
		< SWITCH >				
S201	1-762-587-11	SWITCH, PUSH (1 KEY)(UP)				
**********						
*	1-659-150-11	CD-L PANEL BOARD				
		**********				
		< DIODE >				
D511	8-719-812-44	DIODE TLO124 (AUTO)				
		< RESISTOR >				
R503	1-247-807-31	CARBON	100	5%	1/4W	
R504	1-249-407-11	CARBON	150	5%	1/4W	F
R505	1-249-407-11	CARBON	150	5%	1/4W	F
R506	1-247-815-91	CARBON	220	5%	1/4W	
R507	1-249-411-11	CARBON	330	5%	1/4W	
R508	1-249-413-11	CARBON	470	5%	1/4W	F
R509	1-249-415-11	CARBON	680	5%	1/4W	F
R510	1-249-417-11	CARBON	1K	5%	1/4W	F
R511	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R512	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R560	1-247-815-91	CARBON	220	5%	1/4W	

CD-L PANEL | CD-LED | CD-R PANEL | DOOR SW | H.P. | LED

Ref.No.	Part No.	Description				Remark
		< SWITCH >				
S503	1-554-303-21	SWITCH, TACTILE (CONTINUE)				
S504	1-554-303-21	SWITCH, TACTILE (SHUFFLE)				
S505	1-554-303-21	SWITCH, TACTILE (PROGRAM)				
S506	1-554-303-21	SWITCH, TACTILE (REPEAT)				
S507	1-554-303-21	SWITCH, TACTILE (AUTO)				
S508	1-554-303-21	SWITCH, TACTILE (DISC 1)				
S509	1-554-303-21	SWITCH, TACTILE (DISC 2)				
S510	1-554-303-21	SWITCH, TACTILE (DISC 3)				
S511	1-554-303-21	SWITCH, TACTILE (DISC 4)				
S512	1-554-303-21	SWITCH, TACTILE (DISC 5)				
**********						
*	1-659-154-11	CD-LED BOARD				
		**********				
		< DIODE >				
D521	8-719-058-19	DIODE HLMF-K405-2UL (5CD)				
D522	8-719-057-40	DIODE HLMF-K305-2UL (5CD)				
D523	8-719-057-40	DIODE HLMF-K305-2UL (5CD)				
D524	8-719-058-19	DIODE HLMF-K405-2UL (5CD)				
		< TRANSISTOR >				
Q513	8-729-119-76	TRANSISTOR 2SA1175-HFE				
		< RESISTOR >				
R650	1-247-807-31	CARBON	100	5%	1/4W	
R651	1-247-807-31	CARBON	100	5%	1/4W	
R652	1-247-807-31	CARBON	100	5%	1/4W	
R653	1-249-415-11	CARBON	680	5%	1/4W	F
R654	1-247-807-31	CARBON	100	5%	1/4W	
**********						
*	1-659-151-11	CD-R PANEL BOARD				
		**********				
		< CAPACITOR >				
C530	1-162-306-11	CERAMIC	0.01uF	30%	16V	
		< DIODE >				
D509	8-719-058-03	DIODE SEL5423E-TP15 (▷)				
D510	8-719-058-03	DIODE SEL5423E-TP15 (▷)				
D514	8-719-033-06	DIODE SEL5920A-TP15 (◫)				
		< TRANSISTOR >				
Q510	8-729-119-76	TRANSISTOR 2SA1175-HFE				
		< RESISTOR >				
R534	1-249-411-11	CARBON	330	5%	1/4W	
R535	1-249-413-11	CARBON	470	5%	1/4W	F
R536	1-249-415-11	CARBON	680	5%	1/4W	F
R537	1-249-417-11	CARBON	1K	5%	1/4W	F
R538	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R539	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R561	1-249-407-11	CARBON	150	5%	1/4W	F
R562	1-249-407-11	CARBON	150	5%	1/4W	F
R589	1-249-407-11	CARBON	150	5%	1/4W	F
		< SWITCH >				
S534	1-554-303-21	SWITCH, TACTILE (▷)				
S535	1-554-303-21	SWITCH, TACTILE (■)				
S536	1-554-303-21	SWITCH, TACTILE (▮▮)				
S537	1-554-303-21	SWITCH, TACTILE (DISC SKIP)				
S538	1-554-303-21	SWITCH, TACTILE (⏮◁)				
S539	1-554-303-21	SWITCH, TACTILE (▷▷⏭)				
**********						
*	1-659-161-11	DOOR SW BOARD				
		**********				
		< SWITCH >				
S560	1-572-126-11	SWITCH, PUSH (1 KEY) (⏏ OPEN)				
**********						
*	1-659-153-11	H.P. BOARD				
		**********				
		< CAPACITOR >				
C518	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C520	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C521	1-162-294-31	CERAMIC	0.001uF	10%	50V	
		< JACK >				
J501	1-569-113-11	JACK, LARGE TYPE (PHONES)				
**********						
*	1-659-059-12	LED BOARD				
		*********				
		< DIODE >				
D201	8-719-032-98	DIODE SEL5820A-TP15 (DISC No.)				
		< TRANSISTOR >				
Q201	8-729-119-78	TRANSISTOR 2SC2785-HFE				
		< RESISTOR >				
R201	1-247-863-91	CARBON	22K	5%	1/4W	

MC-Service

Ref.No.	Part No.	Description			Remark
R202	1-249-411-11	CARBON	330	5%	1/4W
R203	1-249-437-11	CARBON	47K	5%	1/4W
**********					
*	A-4378-904-A	MAIN BOARD, COMPLETE (D270/G3100)			
		**********			
*	A-4378-915-A	MAIN BOARD, COMPLETE (N255:AEP)			
		**********			
*	A-4378-922-A	MAIN BOARD, COMPLETE (N255:E2, MX, AR)			
		**********			
*	A-4389-680-A	MAIN BOARD, COMPLETE (N255:G, IT)			
		**********			
*	A-4389-688-A	MAIN BOARD, COMPLETE (N255:EE)			
		**********			
*	A-4389-691-A	MAIN BOARD, COMPLETE (N255:AUS, PX)			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S			
		< CAPACITOR >			
C201	1-124-925-11	ELECT	2.2uF	20%	100V
C202	1-162-600-11	CERAMIC	0.0047uF	30%	16V
C203	1-126-925-11	ELECT	470uF	20%	10V
C204	1-162-282-31	CERAMIC	100PF	10%	50V
C205	1-162-282-31	CERAMIC	100PF	10%	50V
C213	1-164-159-11	CERAMIC	0.1uF		50V (D270/G3100)
C251	1-124-925-11	ELECT	2.2uF	20%	100V
C252	1-162-600-11	CERAMIC	0.0047uF	30%	16V
C300	1-162-282-31	CERAMIC	100PF	10%	50V
C301	1-162-290-31	CERAMIC	470PF	10%	50V
C302	1-136-157-00	FILM	0.022uF	5%	50V
C303	1-126-964-11	ELECT	10uF	20%	50V
C304	1-162-292-31	CERAMIC	680PF	10%	50V
C310	1-162-282-31	CERAMIC	100PF	10%	50V
C311	1-162-289-31	CERAMIC	390PF	10%	50V
C312	1-136-157-00	FILM	0.022uF	5%	50V
C313	1-126-964-11	ELECT	10uF	20%	50V
C315	1-126-934-11	ELECT	220uF	20%	16V
C321	1-130-479-00	MYLAR	0.0047uF	5%	50V
C322	1-124-903-11	ELECT	1uF	20%	50V
C323	1-126-963-11	ELECT	4.7uF	20%	50V
C324	1-136-165-00	FILM	0.1uF	5%	50V (D270/G3100/N255:AEP, G, IT, EE)
C326	1-124-903-11	ELECT	1uF	20%	50V
C327	1-124-902-00	ELECT	0.47uF	20%	50V
C328	1-126-963-11	ELECT	4.7uF	20%	50V
C329	1-162-291-31	CERAMIC	560PF	10%	50V
C330	1-162-301-11	CERAMIC	0.0015uF	30%	16V
C331	1-107-599-11	CERAMIC	27PF	5%	500V
C332	1-101-890-00	CERAMIC	75PF	5%	50V
C333	1-162-288-31	CERAMIC	330PF	10%	50V
C334	1-102-973-00	CERAMIC	100PF	5%	50V
C335	1-162-286-21	CERAMIC	220PF	10%	50V
C336	1-162-286-21	CERAMIC	220PF	10%	50V (D270/G3100/N255:AEP, G, IT, EE)
C340	1-124-925-11	ELECT	2.2uF	20%	100V
C351	1-130-478-00	MYLAR	0.0039uF	5%	50V
C352	1-130-478-00	MYLAR	0.0039uF	5%	50V
C353	1-162-305-11	CERAMIC	0.0068uF	30%	16V
C354	1-130-482-00	MYLAR	0.0082uF	5%	50V
C355	1-124-925-11	ELECT	2.2uF	20%	100V
C356	1-130-487-00	MYLAR	0.022uF	5%	50V
C357	1-126-934-11	ELECT	220uF	20%	16V
C360	1-130-848-00	FILM	0.0082uF	5%	100V
C381	1-124-455-00	ELECT	100uF	20%	16V
C382	1-124-455-00	ELECT	100uF	20%	16V
C383	1-124-455-00	ELECT	100uF	20%	16V
C384	1-124-455-00	ELECT	100uF	20%	16V
C385	1-126-964-11	ELECT	10uF	20%	50V
C386	1-126-964-11	ELECT	10uF	20%	50V
C388	1-126-934-11	ELECT	220uF	20%	16V
C389	1-162-306-11	CERAMIC	0.01uF	30%	16V
C390	1-162-282-31	CERAMIC	100PF	10%	50V
C391	1-126-934-11	ELECT	220uF	20%	16V
C392	1-126-934-11	ELECT	220uF	20%	16V
C400	1-162-282-31	CERAMIC	100PF	10%	50V
C401	1-162-290-31	CERAMIC	470PF	10%	50V
C402	1-136-157-00	FILM	0.022uF	5%	50V
C403	1-126-964-11	ELECT	10uF	20%	50V
C404	1-162-292-31	CERAMIC	680PF	10%	50V
C410	1-162-282-31	CERAMIC	100PF	10%	50V
C411	1-162-289-31	CERAMIC	390PF	10%	50V
C412	1-136-157-00	FILM	0.022uF	5%	50V
C413	1-126-964-11	ELECT	10uF	20%	50V
C415	1-126-934-11	ELECT	220uF	20%	16V
C421	1-130-479-00	MYLAR	0.0047uF	5%	50V
C422	1-124-903-11	ELECT	1uF	20%	50V
C423	1-126-963-11	ELECT	4.7uF	20%	50V
C424	1-136-165-00	FILM	0.1uF	5%	50V (D270/G3100/N255:AEP, G, IT, EE)
C426	1-124-903-11	ELECT	1uF	20%	50V
C427	1-124-902-00	ELECT	0.47uF	20%	50V
C428	1-126-963-11	ELECT	4.7uF	20%	50V
C429	1-162-291-31	CERAMIC	560PF	10%	50V
C430	1-162-301-11	CERAMIC	0.0015uF	30%	16V
C431	1-107-599-11	CERAMIC	27PF	5%	500V
C432	1-101-890-00	CERAMIC	75PF	5%	50V
C433	1-162-288-31	CERAMIC	330PF	10%	50V

MAIN

Ref. No.	Part No.	Description				Remark
C434	1-102-973-00	CERAMIC	100PF	5%	50V	
C435	1-162-286-21	CERAMIC	220PF	10%	50V	
C452	1-164-159-21	CERAMIC	0.1uF		50V	
C453	1-124-903-11	ELECT	1uF	20%	50V	
			(D270/G3100/N255:AEP, G, IT, EE)			
C701	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C702	1-126-926-11	ELECT	1000uF	20%	10V	
C703	1-126-964-11	ELECT	10uF	20%	50V	
C704	1-136-165-00	FILM	0.1uF	5%	50V	
C705	1-136-165-00	FILM	0.1uF	5%	50V	
C706	1-126-965-11	ELECT	22uF	20%	50V	
C707	1-162-206-31	CERAMIC	20PF	5%	50V	
C708	1-162-206-31	CERAMIC	20PF	5%	50V	
C710	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C713	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C801	1-162-288-31	CERAMIC	330PF	10%	50V	
					(N255:AEP, G, IT, EE)	
C803	1-162-282-31	CERAMIC	100PF	10%	50V	
C804	1-162-282-31	CERAMIC	100PF	10%	50V	
C805	1-124-903-11	ELECT	1uF	20%	50V	
					(N255:E2, AUS, PX, MX, AR)	
C805	1-126-963-11	ELECT	4.7uF	20%	50V	
			(D270/G3100/N255:AEP, G, IT, EE)			
C806	1-162-600-11	CERAMIC	0.0047uF	30%	16V	
C807	1-162-301-11	CERAMIC	0.0015uF	30%	16V	
C808	1-124-463-00	ELECT	0.1uF	20%	50V	
					(N255:E2, AUS, PX, MX, AR)	
C808	1-124-902-00	ELECT	0.47uF	20%	50V	
			(D270/G3100/N255:AEP, G, IT, EE)			
C809	1-126-967-11	ELECT	47uF	20%	10V	
					(N255:AEP, G, IT, EE)	
C810	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C811	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C821	1-162-286-21	CERAMIC	220PF	10%	50V	
					(N255:AEP, G, IT, EE)	
C851	1-162-288-31	CERAMIC	330PF	10%	50V	
					(N255:AEP, G, IT, EE)	
C853	1-162-282-31	CERAMIC	100PF	10%	50V	
C854	1-162-282-31	CERAMIC	100PF	10%	50V	
C855	1-124-903-11	ELECT	1uF	20%	50V	
					(N255:E2, AUS, PX, MX, AR)	
C855	1-126-963-11	ELECT	4.7uF	20%	50V	
			(D270/G3100/N255:AEP, G, IT, EE)			
C856	1-162-600-11	CERAMIC	0.0047uF	30%	16V	
C857	1-162-301-11	CERAMIC	0.0015uF	30%	16V	
C858	1-124-463-00	ELECT	0.1uF	20%	50V	
					(N255:E2, AUS, PX, MX, AR)	
C858	1-124-902-00	ELECT	0.47uF	20%	50V	
			(D270/G3100/N255:AEP, G, IT, EE)			
C859	1-126-967-11	ELECT	47uF	20%	10V	
					(N255:AEP, G, IT, EE)	
C871	1-162-286-21	CERAMIC	220PF	10%	50V	
					(N255:AEP, G, IT, EE)	

Ref. No.	Part No.	Description				Remark
C901	1-136-169-00	FILM	0.22uF	5%	50V	
C902	1-136-169-00	FILM	0.22uF	5%	50V	
C903	1-136-495-11	FILM	0.068uF	5%	50V	
C904	1-136-495-11	FILM	0.068uF	5%	50V	
C905	1-136-156-00	FILM	0.018uF	5%	50V	
C906	1-136-156-00	FILM	0.018uF	5%	50V	
C907	1-130-480-00	MYLAR	0.0056uF	5%	50V	
C908	1-162-600-11	CERAMIC	0.0047uF	30%	16V	
C909	1-130-474-00	MYLAR	0.0018uF	5%	50V	
C910	1-126-964-11	ELECT	10uF	20%	50V	
C911	1-126-964-11	ELECT	10uF	20%	50V	
C912	1-136-169-00	FILM	0.22uF	5%	50V	
C913	1-136-169-00	FILM	0.22uF	5%	50V	
C914	1-126-964-11	ELECT	10uF	20%	50V	
C922	1-130-483-00	MYLAR	0.01uF	5%	50V	
C930	1-136-167-00	FILM	0.15uF	5%	50V	
					(N255:E2, AUS, PX, MX, AR)	
C931	1-162-294-31	CERAMIC	0.001uF	10%	50V	
					(N255:E2, AUS, PX, MX, AR)	
C932	1-124-925-11	ELECT	2.2uF	20%	100V	
C933	1-124-902-00	ELECT	0.47uF	20%	50V	
C934	1-164-159-21	CERAMIC	0.1uF		50V	
C935	1-124-925-11	ELECT	2.2uF	20%	100V	
C936	1-126-964-11	ELECT	10uF	20%	50V	
C938	1-162-290-31	CERAMIC	470PF	10%	50V	
C939	1-126-967-11	ELECT	47uF	20%	10V	
C940	1-126-967-11	ELECT	47uF	20%	10V	
C951	1-136-169-00	FILM	0.22uF	5%	50V	
C952	1-136-169-00	FILM	0.22uF	5%	50V	
C953	1-136-495-11	FILM	0.068uF	5%	50V	
C954	1-136-495-11	FILM	0.068uF	5%	50V	
C955	1-136-156-00	FILM	0.018uF	5%	50V	
C956	1-136-156-00	FILM	0.018uF	5%	50V	
C957	1-130-480-00	MYLAR	0.0056uF	5%	50V	
C958	1-162-600-11	CERAMIC	0.0047uF	30%	16V	
C959	1-130-474-00	MYLAR	0.0018uF	5%	50V	
C960	1-126-964-11	ELECT	10uF	20%	50V	
C961	1-126-964-11	ELECT	10uF	20%	50V	
C962	1-136-169-00	FILM	0.22uF	5%	50V	
C963	1-136-169-00	FILM	0.22uF	5%	50V	
C964	1-126-964-11	ELECT	10uF	20%	50V	
C972	1-130-483-00	MYLAR	0.01uF	5%	50V	
C1001	1-126-937-11	ELECT	4700uF	20%	16V	
C1002	1-126-768-11	ELECT	2200uF	20%	16V	
C1004	1-126-916-11	ELECT	1000uF	20%	6.3V	
C1005	1-126-964-11	ELECT	10uF	20%	50V	
C1006	1-126-933-11	ELECT	100uF	20%	10V	
C1007	1-128-499-11	ELECT	220uF	20%	16V	
C1008	1-126-933-11	ELECT	100uF	20%	16V	
C1009	1-126-943-11	ELECT	2200uF	20%	25V	

MC-Service

Ref.No.	Part No.	Description			Remark
C1010	1-164-159-21	CERAMIC	0.1uF	50V	
C1011	1-164-159-21	CERAMIC	0.1uF	50V	
C1012	1-126-964-11	ELECT	10uF	20% 50V	
C1013	1-126-916-11	ELECT	1000uF	20% 6.3V	
C1014	1-126-795-11	ELECT	10uF	5% 50V	
C1015	1-126-795-11	ELECT	10uF	5% 50V	
C1016	1-126-925-11	ELECT	470uF	20% 10V	
C1017	1-126-925-11	ELECT	470uF	20% 10V	
C1018	1-126-795-11	ELECT	10uF	5% 50V	
C1019	1-126-795-11	ELECT	10uF	5% 50V	
C1020	1-126-964-11	ELECT	10uF	20% 50V	
C1021	1-126-964-11	ELECT	10uF	20% 50V	
C1022	1-126-968-11	ELECT	100uF	20% 50V	
C1023	1-126-968-11	ELECT	100uF	20% 50V	
C1031	1-126-974-11	ELECT	3300uF	20% 50V (N255)	
C1031	1-128-493-11	ELECT	4700uF	20% 71V (D270/G3100)	
C1032	1-126-974-11	ELECT	3300uF	20% 50V (N255)	
C1032	1-128-493-11	ELECT	4700uF	20% 71V (D270/G3100)	
C1033	1-130-781-00	FILM	0.22uF	10% 100V (D270/G3100)	
C1033	1-136-169-00	FILM	0.22uF	5% 50V (N255)	
C1034	1-130-781-00	FILM	0.22uF	10% 100V (D270/G3100)	
C1034	1-136-169-00	FILM	0.22uF	5% 50V (N255)	
C1221	1-126-933-11	ELECT	100uF	20% 10V	
C1222	1-126-923-11	ELECT	220uF	20% 10V (N255)	
C1222	1-126-933-11	ELECT	100uF	20% 10V (D270/G3100)	
C1223	1-126-923-11	ELECT	220uF	20% 10V	
C1224	1-124-925-11	ELECT	2.2uF	20% 100V	
C1230	1-130-471-00	FILM	0.001uF	5% 50V (N255:AEP, G, IT, EE)	
C1249	1-164-159-21	CERAMIC	0.1uF	50V (N255:AEP, G, IT, EE)	
C1250	1-130-471-00	FILM	0.001uF	5% 50V (N255:AEP, G, IT, EE)	
C1299	1-164-159-21	CERAMIC	0.1uF	50V (N255:AEP, G, IT, EE)	
		< CONNECTOR >			
CN201	1-770-067-11	CONNECTOR, FFC/FPC 19P			
* CN203	1-568-936-11	PIN, CONNECTOR 9P			
* CN250	1-568-832-11	SOCKET, CONNECTOR 13P (D270/G3100/N255:E2, AUS, PX, MX, AR)			
* CN250	1-568-834-11	SOCKET, CONNECTOR 15P (N255:AEP, G, IT, EE)			
CN301	1-564-506-11	PLUG, CONNECTOR 3P			
* CN302	1-564-509-11	PLUG, CONNECTOR 6P			
CN303	1-564-505-11	PLUG, CONNECTOR 2P			
* CN304	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			
* CN305	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P			
* CN306	1-564-710-11	PIN, CONNECTOR (SMALL TYPE) 8P			
* CN307	1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P			
* CN308	1-568-449-11	HOUSING, CONNECTOR (PC BOARD) 3P			
* CN701	1-568-834-11	SOCKET, CONNECTOR 15P			
		< DIODE >			
D201	8-719-987-63	DIODE	1N4148M		
D202	8-719-987-63	DIODE	1N4148M		
D381	8-719-200-82	DIODE	11ES2		
D382	8-719-200-82	DIODE	11ES2		
D383	8-719-200-82	DIODE	11ES2		
D384	8-719-987-63	DIODE	1N4148M		
D385	8-719-987-63	DIODE	1N4148M		
D386	8-719-200-82	DIODE	11ES2		
D387	8-719-200-82	DIODE	11ES2		
D450	8-719-987-63	DIODE	1N4148M		
D451	8-719-987-63	DIODE	1N4148M		
D452	8-719-987-63	DIODE	1N4148M		
D453	8-719-987-63	DIODE	1N4148M		
D701	8-719-987-63	DIODE	1N4148M		
D702	8-719-987-63	DIODE	1N4148M		
D703	8-719-987-63	DIODE	1N4148M		
D704	8-719-987-63	DIODE	1N4148M		
D705	8-719-987-63	DIODE	1N4148M		
D706	8-719-200-82	DIODE	11ES2		
D707	8-719-987-63	DIODE	1N4148M		
D708	8-719-987-63	DIODE	1N4148M		
D901	8-719-987-63	DIODE	1N4148M		
D939	8-719-987-63	DIODE	1N4148M		
D940	8-719-987-63	DIODE	1N4148M		
D1001	8-719-200-82	DIODE	11ES2		
D1002	8-719-200-82	DIODE	11ES2		
D1003	8-719-200-82	DIODE	11ES2		
D1004	8-719-200-82	DIODE	11ES2		
D1005	8-719-200-82	DIODE	11ES2		
D1006	8-719-200-82	DIODE	11ES2		
D1007	8-719-987-63	DIODE	1N4148M		
D1008	8-719-001-43	DIODE	UZL-11M1		
D1009	8-719-987-63	DIODE	1N4148M		
D1010	8-719-987-63	DIODE	1N4148M		
D1013	8-719-200-82	DIODE	11ES2		
D1014	8-719-200-82	DIODE	11ES2		
D1017	8-719-200-82	DIODE	11ES2		
D1023	8-719-934-18	DIODE	HZS27-2L		
D1031	8-719-500-56	DIODE	D3SBA20 (D270/G3100)		
D1031	8-719-510-68	DIODE	D5SBA20F01 (N255)		
D1059	8-719-987-63	DIODE	1N4148M		
D1069	8-719-987-63	DIODE	1N4148M		
D1204	8-719-815-85	DIODE	1S1585 (D270/G3100)		
D1204	8-719-987-63	DIODE	1N4148M (N255)		

MAIN

Ref.No.	Part No.	Description	Remark
D1205	8-719-815-85	DIODE 1S1585 (D270/G3100)	
D1205	8-719-987-63	DIODE 1N4148M (N255)	
D1309	8-719-815-85	DIODE 1S1585 (D270/G3100)	
D1309	8-719-987-63	DIODE 1N4148M (N255)	
D1310	8-719-815-85	DIODE 1S1585 (D270/G3100)	
D1310	8-719-987-63	DIODE 1N4148M (N255)	
		< IC >	
IC301	8-759-710-59	IC NJM4580D-D	
IC302	8-759-710-59	IC NJM4580D-D	
IC303	8-759-289-38	IC HA12195NT (D270/G3100/N255:AEP, G, IT, EE)	
IC303	8-759-289-39	IC HA12196NT (N255:E2, AUS, PX, MX, AR)	
IC304	8-759-143-54	IC uPC1330HA	
IC701	8-759-375-44	IC TMP87CS64YF-6361	
IC702	8-759-165-80	IC PST600C-T	
IC801	8-759-634-51	IC M5218AP	
IC802	8-759-000-48	IC MC14052BCP	
IC901	8-759-331-39	IC M62427FP	
IC1001	8-759-231-53	IC M5F7805L	
IC1002	8-759-604-86	IC M5F7807L	
IC1003	8-759-604-86	IC M5F7807L	
IC1004	8-759-604-90	IC M5F7907L	
IC1202	8-759-111-68	IC uPC1237HA	
		< JACK >	
J801	1-695-188-31	JACK, PIN 4P (PHONO/VIDEO)	
		< COIL >	
L75	1-412-473-21	INDUCTOR (D270/G3100)	
L301	1-410-780-11	INDUCTOR 27mH	
L351	1-414-223-11	INDUCTOR 470uH	
L401	1-410-780-11	INDUCTOR 27mH	
L1201	1-420-872-00	COIL, AIR-CORE	
L1251	1-420-872-00	COIL, AIR-CORE	
		< TRANSISTOR >	
Q301	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q351	8-729-194-57	TRANSISTOR 2SC945-P	
Q352	8-729-194-57	TRANSISTOR 2SC945-P	
Q353	8-729-119-77	TRANSISTOR 2SA1175-FEK	
Q354	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q380	8-729-900-89	TRANSISTOR DTC144ES	
Q381	8-729-900-65	TRANSISTOR DTA144ES	
Q382	8-729-900-89	TRANSISTOR DTC144ES	
Q401	8-729-119-79	TRANSISTOR 2SC2785-FEK	
Q450	8-729-900-65	TRANSISTOR DTA144ES	
Q451	8-729-900-89	TRANSISTOR DTC144ES	
Q701	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q820	8-729-422-57	TRANSISTOR DTA144ES	

Ref.No.	Part No.	Description	Remark
Q901	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q902	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q951	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q952	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q953	8-729-141-26	TRANSISTOR 2SC3622A-LK	
Q954	8-729-141-26	TRANSISTOR 2SC3622A-LK	
Q1001	8-729-118-01	TRANSISTOR 2SB1116-K	
Q1002	8-729-900-36	TRANSISTOR DTC124ES	
Q1006	8-729-141-83	TRANSISTOR 2SB1094-LK	
Q1011	8-729-209-15	TRANSISTOR 2SD2012	
Q1202	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q1203	8-729-119-76	TRANSISTOR 2SA1175-HFE (N255)	
Q1203	8-729-140-82	TRANSISTOR 2SA988-PAFAEA (D270/G3100)	
Q1204	8-729-900-63	TRANSISTOR DTA124ES	
Q1205	8-729-900-36	TRANSISTOR DTC124ES	
Q1206	8-729-900-80	TRANSISTOR DTC114ES	
Q1207	8-729-422-57	TRANSISTOR UN4111	
		< RESISTOR >	
R201	1-249-415-11	CARBON 680 5% 1/4W F	
R202	1-249-435-11	CARBON 33K 5% 1/4W	
R203	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R208	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R251	1-249-415-11	CARBON 680 5% 1/4W F	
R252	1-249-435-11	CARBON 33K 5% 1/4W	
R301	1-247-889-00	CARBON 270K 5% 1/4W	
R302	1-249-404-00	CARBON 82 5% 1/4W F	
R303	1-247-882-11	CARBON 130K 5% 1/4W	
R304	1-247-850-11	CARBON 6.2K 5% 1/4W	
R311	1-247-889-00	CARBON 270K 5% 1/4W	
R312	1-249-404-00	CARBON 82 5% 1/4W F	
R313	1-247-882-11	CARBON 130K 5% 1/4W	
R314	1-247-850-11	CARBON 6.2K 5% 1/4W	
R315	1-247-863-91	CARBON 22K 5% 1/4W	
R320	1-249-432-11	CARBON 18K 5% 1/4W (D270/G3100/N255:AEP, G, IT, EE)	
R321	1-249-429-11	CARBON 10K 5% 1/4W	
R322	1-249-431-11	CARBON 15K 5% 1/4W	
R323	1-249-429-11	CARBON 10K 5% 1/4W	
R324	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R325	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R326	1-249-428-11	CARBON 8.2K 5% 1/4W F	
R327	1-247-840-00	CARBON 2.4K 5% 1/4W	
R328	1-247-863-91	CARBON 22K 5% 1/4W	
R329	1-249-417-11	CARBON 1K 5% 1/4W F	
R331	1-249-430-11	CARBON 12K 5% 1/4W	
R351	1-249-434-11	CARBON 27K 5% 1/4W	
R352	1-249-434-11	CARBON 27K 5% 1/4W	
R353	1-249-389-11	CARBON 4.7 5% 1/4W F	
R354	1-249-389-11	CARBON 4.7 5% 1/4W F	

MC-Service

Ref.No.	Part No.	Description				Remark
R355	1-249-429-11	CARBON	10K	5%	1/4W	
R381	1-249-413-11	CARBON	470	5%	1/4W	F
R382	1-249-413-11	CARBON	470	5%	1/4W	F
R383	1-249-413-11	CARBON	470	5%	1/4W	F
R384	1-249-413-11	CARBON	470	5%	1/4W	F
R387	1-249-417-11	CARBON	1K	5%	1/4W	F
R388	1-249-429-11	CARBON	10K	5%	1/4W	
R390	1-249-417-11	CARBON	1K	5%	1/4W	F
⚠R391	1-215-905-11	METAL OXIDE	10	5%	3W	F
R401	1-247-889-00	CARBON	270K	5%	1/4W	
R402	1-249-404-00	CARBON	82	5%	1/4W	F
R403	1-247-882-11	CARBON	130K	5%	1/4W	
R404	1-247-850-11	CARBON	6.2K	5%	1/4W	
R411	1-247-889-00	CARBON	270K	5%	1/4W	
R412	1-249-404-00	CARBON	82	5%	1/4W	F
R413	1-247-882-11	CARBON	130K	5%	1/4W	
R414	1-247-850-11	CARBON	6.2K	5%	1/4W	
R415	1-247-863-91	CARBON	22K	5%	1/4W	
R421	1-249-429-11	CARBON	10K	5%	1/4W	
R422	1-249-431-11	CARBON	15K	5%	1/4W	
R423	1-249-429-11	CARBON	10K	5%	1/4W	
R424	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R425	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R426	1-249-428-11	CARBON	8.2K	5%	1/4W	F
R427	1-247-840-00	CARBON	2.4K	5%	1/4W	
R428	1-247-863-91	CARBON	22K	5%	1/4W	
R429	1-249-417-11	CARBON	1K	5%	1/4W	F
R431	1-249-430-11	CARBON	12K	5%	1/4W	
R450	1-249-429-11	CARBON	10K	5%	1/4W	
R451	1-249-429-11	CARBON	10K	5%	1/4W	
R452	1-249-429-11	CARBON	10K	5%	1/4W	
R453	1-249-429-11	CARBON	10K	5%	1/4W	
R454	1-249-429-11	CARBON	10K	5%	1/4W	
R455	1-249-429-11	CARBON	10K	5%	1/4W	(D270/G3100/N255:AEP, G, IT, EE)
R456	1-249-429-11	CARBON	10K	5%	1/4W	(D270/G3100/N255:AEP, G, IT, EE)
R457	1-247-864-11	CARBON	24K	5%	1/4W	
R458	1-249-429-11	CARBON	10K	5%	1/4W	(D270/G3100/N255:AEP, G, IT, EE)
R459	1-249-440-11	CARBON	82K	5%	1/4W	
R460	1-247-862-11	CARBON	20K	5%	1/4W	
R461	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R462	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R463	1-249-429-11	CARBON	10K	5%	1/4W	
R464	1-249-429-11	CARBON	10K	5%	1/4W	
R701	1-249-429-11	CARBON	10K	5%	1/4W	
R702	1-249-437-11	CARBON	47K	5%	1/4W	
R703	1-249-437-11	CARBON	47K	5%	1/4W	
R704	1-249-429-11	CARBON	10K	5%	1/4W	
R705	1-249-429-11	CARBON	10K	5%	1/4W	

Ref.No.	Part No.	Description				Remark
R706	1-249-429-11	CARBON	10K	5%	1/4W	
R708	1-249-429-11	CARBON	10K	5%	1/4W	
R709	1-249-429-11	CARBON	10K	5%	1/4W	
R710	1-249-429-11	CARBON	10K	5%	1/4W	
R712	1-249-429-11	CARBON	10K	5%	1/4W	
R713	1-249-429-11	CARBON	10K	5%	1/4W	
R714	1-249-429-11	CARBON	10K	5%	1/4W	
R715	1-249-429-11	CARBON	10K	5%	1/4W	
R716	1-247-807-31	CARBON	100	5%	1/4W	
R717	1-247-807-31	CARBON	100	5%	1/4W	
R718	1-247-807-31	CARBON	100	5%	1/4W	
R719	1-247-807-31	CARBON	100	5%	1/4W	
R720	1-247-807-31	CARBON	100	5%	1/4W	
R721	1-247-807-31	CARBON	100	5%	1/4W	
R724	1-247-807-31	CARBON	100	5%	1/4W	
R725	1-247-807-31	CARBON	100	5%	1/4W	
R726	1-247-807-31	CARBON	100	5%	1/4W	
R727	1-247-807-31	CARBON	100	5%	1/4W	
R728	1-247-807-31	CARBON	100	5%	1/4W	
R729	1-247-807-31	CARBON	100	5%	1/4W	
R730	1-247-807-31	CARBON	100	5%	1/4W	
R731	1-247-807-31	CARBON	100	5%	1/4W	
R732	1-247-807-31	CARBON	100	5%	1/4W	
R733	1-247-807-31	CARBON	100	5%	1/4W	
R734	1-247-807-31	CARBON	100	5%	1/4W	
R735	1-247-807-31	CARBON	100	5%	1/4W	
R736	1-247-807-31	CARBON	100	5%	1/4W	
R737	1-247-807-31	CARBON	100	5%	1/4W	
R738	1-247-863-91	CARBON	22K	5%	1/4W	
R739	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R740	1-249-423-11	CARBON	3.3K	5%	1/4W	F (N255:AUS, PX)
R740	1-249-425-11	CARBON	4.7K	5%	1/4W	F (N255:E2, MX, AR)
R740	1-249-427-11	CARBON	6.8K	5%	1/4W	F (N255:G, IT)
R740	1-249-429-11	CARBON	10K	5%	1/4W	(N255:AEP)
R740	1-249-435-11	CARBON	33K	5%	1/4W	(N255:EE)
R741	1-249-423-11	CARBON	3.3K	5%	1/4W	F (N255:AEP, G, IT)
R741	1-249-427-11	CARBON	6.8K	5%	1/4W	F (N255:E2, EE, MX, AR)
R741	1-249-429-11	CARBON	10K	5%	1/4W	(N255: AUS, PX)
R742	1-247-807-31	CARBON	100	5%	1/4W	
R743	1-247-807-31	CARBON	100	5%	1/4W	
R753	1-247-807-31	CARBON	100	5%	1/4W	
R755	1-247-807-31	CARBON	100	5%	1/4W	
R762	1-249-429-11	CARBON	10K	5%	1/4W	
R763	1-249-429-11	CARBON	10K	5%	1/4W	
R764	1-249-429-11	CARBON	10K	5%	1/4W	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

MAIN

Ref. No.	Part No.	Description				Remark
R771	1-249-429-11	CARBON	10K	5%	1/4W	
R772	1-249-429-11	CARBON	10K	5%	1/4W	
R773	1-249-429-11	CARBON	10K	5%	1/4W	
R801	1-249-417-11	CARBON	1K	5%	1/4W	F (N255:AEP, G, IT, EE)
R802	1-249-417-11	CARBON	1K	5%	1/4W	F
R803	1-249-437-11	CARBON	47K	5%	1/4W	
R804	1-249-416-11	CARBON	820	5%	1/4W	F (D270/G3100/N255:AEP, G, IT, EE)
R804	1-249-419-11	CARBON	1.5K	5%	1/4W	F (N255:E2, AUS, PX, MX, AR)
R805	1-247-897-11	CARBON	560K	5%	1/4W	
R806	1-249-437-11	CARBON	47K	5%	1/4W	
R807	1-249-417-11	CARBON	1K	5%	1/4W	F
R808	1-249-441-11	CARBON	100K	5%	1/4W	
R809	1-247-815-91	CARBON	220	5%	1/4W	(N255:AEP, G, IT, EE)
R821	1-249-417-11	CARBON	1K	5%	1/4W	F
R822	1-249-441-11	CARBON	100K	5%	1/4W	
R825	1-247-887-00	CARBON	220K	5%	1/4W	
R826	1-249-441-11	CARBON	100K	5%	1/4W	
R851	1-249-417-11	CARBON	1K	5%	1/4W	F (N255:AEP, G, IT, EE)
R852	1-249-417-11	CARBON	1K	5%	1/4W	F
R853	1-249-437-11	CARBON	47K	5%	1/4W	
R854	1-249-416-11	CARBON	820	5%	1/4W	F (D270/G3100/N255:AEP, G, IT, EE)
R854	1-249-419-11	CARBON	1.5K	5%	1/4W	F (N255:E2, AUS, PX, MX, AR)
R855	1-247-897-11	CARBON	560K	5%	1/4W	
R856	1-249-437-11	CARBON	47K	5%	1/4W	
R857	1-249-417-11	CARBON	1K	5%	1/4W	F
R858	1-249-441-11	CARBON	100K	5%	1/4W	
R859	1-247-815-91	CARBON	220	5%	1/4W	(N255:AEP, G, IT, EE)
R871	1-249-417-11	CARBON	1K	5%	1/4W	F
R872	1-249-441-11	CARBON	100K	5%	1/4W	
R901	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R902	1-249-425-11	CARBON	4.7K	5%	1/4W	F (D270/G3100/N255:AEP, G, IT, EE)
R903	1-249-425-11	CARBON	4.7K	5%	1/4W	F (N255:E2, AUS, PX, MX, AR)
R904	1-249-429-11	CARBON	10K	5%	1/4W	F
R905	1-249-441-11	CARBON	100K	5%	1/4W	
R906	1-247-895-91	CARBON	470K	5%	1/4W	
R907	1-249-437-11	CARBON	47K	5%	1/4W	
R908	1-247-863-91	CARBON	22K	5%	1/4W	
R909	1-247-819-91	CARBON	330	5%	1/4W	F
R910	1-249-429-11	CARBON	10K	5%	1/4W	
R911	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R912	1-249-441-11	CARBON	100K	5%	1/4W	
R913	1-249-429-11	CARBON	10K	5%	1/4W	
R914	1-249-437-11	CARBON	47K	5%	1/4W	
R920	1-249-441-11	CARBON	100K	5%	1/4W	
R921	1-249-423-11	CARBON	3.3K	5%	1/4W	
R922	1-249-429-11	CARBON	10K	5%	1/4W	
R923	1-247-903-00	CARBON	1M	5%	1/4W	
R930	1-247-863-91	CARBON	22K	5%	1/4W	(N255:E2, AUS, PX, MX, AR)
R931	1-247-863-91	CARBON	22K	5%	1/4W	(N255:E2, AUS, PX, MX, AR)
R932	1-249-429-11	CARBON	10K	5%	1/4W	(N255:E2, AUS, PX, MX, AR)
R938	1-247-807-31	CARBON	100	5%	1/4W	
R940	1-249-429-11	CARBON	10K	5%	1/4W	
R941	1-249-429-11	CARBON	10K	5%	1/4W	
R942	1-249-429-11	CARBON	10K	5%	1/4W	
R951	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R952	1-249-425-11	CARBON	4.7K	5%	1/4W	F (D270/G3100/N255:AEP, G, IT, EE)
R953	1-249-425-11	CARBON	4.7K	5%	1/4W	F (N255:E2, AUS, PX, MX, AR)
R954	1-249-429-11	CARBON	10K	5%	1/4W	F
R955	1-249-441-11	CARBON	100K	5%	1/4W	
R956	1-247-895-91	CARBON	470K	5%	1/4W	
R957	1-249-437-11	CARBON	47K	5%	1/4W	
R958	1-247-863-91	CARBON	22K	5%	1/4W	
R959	1-247-819-91	CARBON	330	5%	1/4W	F
R960	1-249-429-11	CARBON	10K	5%	1/4W	
R961	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R962	1-249-441-11	CARBON	100K	5%	1/4W	
R963	1-249-429-11	CARBON	10K	5%	1/4W	
R964	1-249-437-11	CARBON	47K	5%	1/4W	
R970	1-247-903-00	CARBON	1M	5%	1/4W	
R973	1-247-903-00	CARBON	1M	5%	1/4W	
R1001	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R1002	1-247-815-91	CARBON	220	5%	1/4W	
R1011	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R1023	1-249-417-11	CARBON	1K	5%	1/4W	F
R1220	1-249-389-11	CARBON	4.7	5%	1/4W	F
R1221	1-249-389-11	CARBON	4.7	5%	1/4W	F
R1222	1-247-815-91	CARBON	220	5%	1/4W	(N255)
R1222	1-260-095-11	CARBON	470	5%	1/2W	(D270/G3100)
R1223	1-247-815-91	CARBON	220	5%	1/4W	(N255)
R1223	1-260-095-11	CARBON	470	5%	1/2W	(D270/G3100)
R1224	1-249-429-11	CARBON	10K	5%	1/4W	
R1225	1-249-429-11	CARBON	10K	5%	1/4W	
⚠R1226	1-215-891-11	METAL OXIDE	680	5%	2W	F (N255:AEP, G, IT, EE)
⚠R1226	1-216-454-11	METAL OXIDE	390	5%	2W	(N255:E2, AUS, PX, MX, AR)

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MC-Service

Ref.No.	Part No.	Description			Remark
⚠R1226	1-216-482-11	METAL OXIDE	1.8K	5% 3W F	(D270/G3100)
R1227	1-249-429-11	CARBON	10K	5% 1/4W	
R1229	1-249-429-11	CARBON	10K	5% 1/4W	
R1231	1-249-417-11	CARBON	1K	5% 1/4W F	
R1233	1-247-854-11	CARBON	9.1K	5% 1/4W	(D270/G3100)
R1233	1-249-425-11	CARBON	4.7K	5% 1/4W F	(N255)
R1234	1-247-854-11	CARBON	9.1K	5% 1/4W	(D270/G3100)
R1234	1-249-425-11	CARBON	4.7K	5% 1/4W F	(N255)
R1235	1-249-435-11	CARBON	33K	5% 1/4W	(N255)
R1235	1-249-437-11	CARBON	47K	5% 1/4W	(D270/G3100)
R1236	1-249-441-11	CARBON	100K	5% 1/4W	
R1237	1-249-429-11	CARBON	10K	5% 1/4W	
R1240	1-249-438-11	CARBON	56K	5% 1/4W	
R1241	1-247-791-91	CARBON	22	5% 1/4W	
R1245	1-247-863-91	CARBON	22K	5% 1/4W	
R1248	1-249-385-11	CARBON	2.2	5% 1/4W F	(N255:AEP, G, IT, EE)
R1249	1-249-385-11	CARBON	2.2	5% 1/4W F	(N255:AEP, G, IT, EE)
R1250	1-249-421-11	CARBON	2.2K	5% 1/4W F	
R1270	1-249-389-11	CARBON	4.7	5% 1/4W F	
R1271	1-249-389-11	CARBON	4.7	5% 1/4W F	
R1272	1-247-815-91	CARBON	220	5% 1/4W	(N255)
R1272	1-260-095-11	CARBON	470	5% 1/2W	(D270/G3100)
R1273	1-247-815-91	CARBON	220	5% 1/4W	(N255)
R1273	1-260-095-11	CARBON	470	5% 1/2W	(D270/G3100)
R1290	1-249-437-11	CARBON	47K	5% 1/4W	
R1295	1-247-863-91	CARBON	22K	5% 1/4W	
R1298	1-249-385-11	CARBON	2.2	5% 1/4W F	(N255:AEP, G, IT, EE)
R1299	1-249-385-11	CARBON	2.2	5% 1/4W F	(N255:AEP, G, IT, EE)
R1303	1-249-425-11	CARBON	4.7K	5% 1/4W F	
R1304	1-249-425-11	CARBON	4.7K	5% 1/4W F	
		< VARIABLE RESISTOR >			
RV301	1-238-600-11	RES, ADJ, CARBON	10K		
RV302	1-238-600-11	RES, ADJ, CARBON	10K		
RV303	1-238-600-11	RES, ADJ, CARBON	10K		
RV304	1-238-603-11	RES, ADJ, CARBON	100K		
RV380	1-238-599-11	RES, ADJ, CARBON	4.7K		
RV401	1-238-600-11	RES, ADJ, CARBON	10K		
RV402	1-238-600-11	RES, ADJ, CARBON	10K		
RV403	1-238-600-11	RES, ADJ, CARBON	10K		
RV404	1-238-603-11	RES, ADJ, CARBON	100K		

Ref.No.	Part No.	Description			Remark
		< RELAY >			
RY1201	1-515-920-11	RELAY (24V) (N255)			
RY1201	1-755-141-11	RELAY (D270/G3100)			
		< TRANSFORMER >			
T350	1-433-349-11	TRANSFORMER, BIAS OSCILLATION			
		< TERMINAL >			
TM1201	1-537-801-11	TERMINAL BOARD (SPEAKER)			(N255:AEP, G, IT, EE)
TM1201	1-537-925-41	TERMINAL BOARD (SPEAKER)			(D270/G3100/N255:E2, AUS, PX, MX, AR)
		< VIBRATOR >			
X701	1-579-175-11	VIBRATOR, CERAMIC (10MHz)			
X702	1-567-098-41	VIBRATOR, CRYSTAL (32.768kHz)			
**********					
*	A-4378-921-A	MIC BOARD, COMPLETE			(N255:E2, AUS, PX, MX, AR)
		**********			
		< CAPACITOR >			
C640	1-162-306-11	CERAMIC	0.01uF	30%	16V
C641	1-124-925-11	ELECT	2.2uF	20%	100V
C642	1-162-294-31	CERAMIC	0.001uF	10%	50V
C643	1-162-215-31	CERAMIC	47PF	5%	50V
C644	1-162-290-31	CERAMIC	470PF	10%	50V
C645	1-124-902-00	ELECT	0.47uF	20%	50V
C646	1-162-282-31	CERAMIC	100PF	10%	50V
C647	1-162-294-31	CERAMIC	0.001uF	10%	50V
C648	1-124-902-00	ELECT	0.47uF	20%	50V
C649	1-104-664-11	ELECT	47uF	20%	25V
C650	1-104-664-11	ELECT	47uF	20%	25V
C655	1-164-159-21	CERAMIC	0.1uF		50V
		< CONNECTOR >			
CN601	1-506-469-11	PIN, CONNECTOR 4P			
		< IC >			
IC601	8-759-634-51	IC M5218AP			
		< JACK >			
J601	1-573-151-11	JACK, LARGE TYPE (MIC)			
		< RESISTOR >			
R640	1-249-429-11	CARBON	10K	5% 1/4W	
R641	1-249-441-11	CARBON	100K	5% 1/4W	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

MIC PANEL

Ref.No.	Part No.	Description				Remark
R642	1-249-417-11	CARBON	1K	5%	1/4W	F
R643	1-249-417-11	CARBON	1K	5%	1/4W	F
R644	1-247-863-91	CARBON	22K	5%	1/4W	
R645	1-249-429-11	CARBON	10K	5%	1/4W	
R646	1-247-883-00	CARBON	150K	5%	1/4W	
R647	1-247-903-00	CARBON	1M	5%	1/4W	
		< VARIABLE RESISTOR >				
RV601	1-223-983-11	RES, VAR, CARBON 50K (MIC LEVEL)				
**********						
*	A-4378-889-A	PANEL BOARD, COMPLETE				
		**********				
		(D270/G3100/N255:AEP, G, IT, EE)				
*	A-4378-919-A	PANEL BOARD, COMPLETE				
		**********				
		(N255:E2, AUS, PX, MX, AR)				
*	4-978-168-01	HOLDER, FL TUBE				
		< CAPACITOR >				
C501	1-162-286-21	CERAMIC	220PF	10%	50V	
C502	1-162-286-21	CERAMIC	220PF	10%	50V	
C503	1-162-286-21	CERAMIC	220PF	10%	50V	
C504	1-162-286-21	CERAMIC	220PF	10%	50V	
C505	1-162-286-21	CERAMIC	220PF	10%	50V	
C506	1-162-286-21	CERAMIC	220PF	10%	50V	
C507	1-162-286-21	CERAMIC	220PF	10%	50V	
C508	1-162-286-21	CERAMIC	220PF	10%	50V	
C509	1-162-286-21	CERAMIC	220PF	10%	50V	
C510	1-162-286-21	CERAMIC	220PF	10%	50V	
C511	1-162-286-21	CERAMIC	220PF	10%	50V	
C512	1-162-286-21	CERAMIC	220PF	10%	50V	
C513	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C514	1-126-967-11	ELECT	47uF	20%	16V	
C515	1-164-159-11	CERAMIC	0.1uF		50V	
C516	1-124-584-00	ELECT	100uF	20%	10V	
C517	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C519	1-164-159-21	CERAMIC	0.1uF		50V	
C522	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C523	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C524	1-164-159-21	CERAMIC	0.1uF		50V	
C525	1-124-903-11	ELECT	1uF	20%	50V	
C526	1-164-159-21	CERAMIC	0.1uF		50V	
C527	1-124-903-11	ELECT	1uF	20%	50V	
C531	1-162-286-21	CERAMIC	220PF	10%	50V	
C532	1-162-286-21	CERAMIC	220PF	10%	50V	
C533	1-162-286-21	CERAMIC	220PF	10%	50V	
C534	1-162-286-21	CERAMIC	220PF	10%	50V	
C535	1-162-286-21	CERAMIC	220PF	10%	50V	
C536	1-162-286-21	CERAMIC	220PF	10%	50V	
C537	1-162-286-21	CERAMIC	220PF	10%	50V	
C538	1-162-286-21	CERAMIC	220PF	10%	50V	
C539	1-162-286-21	CERAMIC	220PF	10%	50V	
C540	1-162-286-21	CERAMIC	220PF	10%	50V	
C541	1-162-286-21	CERAMIC	220PF	10%	50V	
C542	1-162-286-21	CERAMIC	220PF	10%	50V	
C543	1-162-286-21	CERAMIC	220PF	10%	50V	
C544	1-162-286-21	CERAMIC	220PF	10%	50V	
C545	1-162-286-21	CERAMIC	220PF	10%	50V	
C546	1-162-286-21	CERAMIC	220PF	10%	50V	
C547	1-162-286-21	CERAMIC	220PF	10%	50V	
C548	1-162-286-21	CERAMIC	220PF	10%	50V	
C549	1-162-286-21	CERAMIC	220PF	10%	50V	
C550	1-162-286-21	CERAMIC	220PF	10%	50V	
C551	1-162-286-21	CERAMIC	220PF	10%	50V	
C561	1-164-159-11	CERAMIC	0.1uF		50V	
		< CONNECTOR >				
* CN501	1-568-834-11	SOCKET, CONNECTOR 15P				
		< DIODE >				
D500	8-719-812-44	DIODE	TLO124 (SELECT 5)			
D501	8-719-812-44	DIODE	TLO124 (EFFECT)			
D502	8-719-812-44	DIODE	TLO124 (ROCK)			
D503	8-719-812-44	DIODE	TLO124 (JAZZ)			
D504	8-719-812-44	DIODE	TLO124 (POPS)			
D505	8-719-812-44	DIODE	TLO124 (P.FILE)			
D506	8-719-812-44	DIODE	TLO124 (CLASSIC)			
D507	8-719-812-44	DIODE	TLO124 (ENTER/ENXT)			
D508	8-719-812-44	DIODE	TLO124 (SALSA)			
D512	8-719-058-03	DIODE	SEL5423E-TP15 (TUNER/BAND)			
D513	8-719-058-03	DIODE	SEL5423E-TP15 (TUNER/BAND)			
D560	8-719-010-40	DIODE	UZ-5.6BS			
		< FLUORESCENT INDICATOR >				
FL501	1-517-489-11	INDICATOR TUBE, FLUORESCENT				
		< IC >				
IC501	8-759-375-45	IC	ASD042			
IC502	8-759-339-53	IC	GP1U28XB			
		< TRANSISTOR >				
Q501	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q502	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q503	8-729-422-57	TRANSISTOR	UN4111			
Q504	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q505	8-729-119-76	TRANSISTOR	2SA1175-HFE			

MC-Service

Ref.No.	Part No.	Description				Remark
Q506	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q507	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q508	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q509	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q511	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q521	8-729-422-57	TRANSISTOR	UN4111			
		< RESISTOR >				
R500	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R501	1-249-401-11	CARBON	47	5%	1/4W	F
R502	1-249-403-11	CARBON	68	5%	1/4W	F
R513	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R514	1-249-401-11	CARBON	47	5%	1/4W	F
R515	1-249-403-11	CARBON	68	5%	1/4W	F
R516	1-247-807-31	CARBON	100	5%	1/4W	
R517	1-249-407-11	CARBON	150	5%	1/4W	F
R518	1-249-407-11	CARBON	150	5%	1/4W	F
R519	1-247-815-91	CARBON	220	5%	1/4W	
R520	1-249-411-11	CARBON	330	5%	1/4W	
R521	1-249-413-11	CARBON	470	5%	1/4W	F
R522	1-249-415-11	CARBON	680	5%	1/4W	F
R523	1-249-417-11	CARBON	1K	5%	1/4W	F
R524	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R525	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R526	1-249-423-11	CARBON	3.3K	5%	1/4W	F
			(D270/G3100/N255:AEP, G, IT, EE)			
R527	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R528	1-249-401-11	CARBON	47	5%	1/4W	F
R529	1-249-403-11	CARBON	68	5%	1/4W	F
R530	1-247-807-31	CARBON	100	5%	1/4W	
R531	1-249-407-11	CARBON	150	5%	1/4W	F
R532	1-249-407-11	CARBON	150	5%	1/4W	F
R533	1-247-815-91	CARBON	220	5%	1/4W	
R540	1-249-419-11	CARBON	1.5K	5%	1/4W	F
R541	1-249-401-11	CARBON	47	5%	1/4W	F
R542	1-249-403-11	CARBON	68	5%	1/4W	F
R543	1-247-807-31	CARBON	100	5%	1/4W	
R544	1-249-407-11	CARBON	150	5%	1/4W	F
R545	1-249-407-11	CARBON	150	5%	1/4W	F
R546	1-247-815-91	CARBON	220	5%	1/4W	
R547	1-249-411-11	CARBON	330	5%	1/4W	
R548	1-249-413-11	CARBON	470	5%	1/4W	F
			(N255:E2, AUS, PX, MX, AR)			
R550	1-247-815-91	CARBON	220	5%	1/4W	
R551	1-247-815-91	CARBON	220	5%	1/4W	
R552	1-247-815-91	CARBON	220	5%	1/4W	
R553	1-247-815-91	CARBON	220	5%	1/4W	
R554	1-247-815-91	CARBON	220	5%	1/4W	
R555	1-247-815-91	CARBON	220	5%	1/4W	
R556	1-247-815-91	CARBON	220	5%	1/4W	

Ref.No.	Part No.	Description				Remark
R557	1-247-815-91	CARBON	220	5%	1/4W	
R558	1-249-407-11	CARBON	150	5%	1/4W	F
R559	1-249-407-11	CARBON	150	5%	1/4W	F
R563	1-249-429-11	CARBON	10K	5%	1/4W	
R564	1-249-401-11	CARBON	47	5%	1/4W	F
R565	1-249-429-11	CARBON	10K	5%	1/4W	
R566	1-249-429-11	CARBON	10K	5%	1/4W	
R567	1-249-429-11	CARBON	10K	5%	1/4W	
R568	1-249-429-11	CARBON	10K	5%	1/4W	
R569	1-249-429-11	CARBON	10K	5%	1/4W	
R570	1-249-437-11	CARBON	47K	5%	1/4W	
R571	1-249-429-11	CARBON	10K	5%	1/4W	
R572	1-249-429-11	CARBON	10K	5%	1/4W	
R573	1-249-429-11	CARBON	10K	5%	1/4W	
R574	1-249-429-11	CARBON	10K	5%	1/4W	
R575	1-249-429-11	CARBON	10K	5%	1/4W	
R576	1-249-429-11	CARBON	10K	5%	1/4W	
R577	1-247-903-00	CARBON	1M	5%	1/4W	
R578	1-249-429-11	CARBON	10K	5%	1/4W	
R579	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R580	1-249-429-11	CARBON	10K	5%	1/4W	
R581	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R582	1-247-807-31	CARBON	100	5%	1/4W	
R583	1-247-807-31	CARBON	100	5%	1/4W	
R584	1-247-807-31	CARBON	100	5%	1/4W	
R585	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R586	1-247-807-31	CARBON	100	5%	1/4W	
R587	1-247-807-31	CARBON	100	5%	1/4W	
R590	1-247-815-91	CARBON	220	5%	1/4W	
R591	1-249-437-11	CARBON	47K	5%	1/4W	
R592	1-249-437-11	CARBON	47K	5%	1/4W	
R593	1-249-437-11	CARBON	47K	5%	1/4W	
R594	1-249-437-11	CARBON	47K	5%	1/4W	
R595	1-249-437-11	CARBON	47K	5%	1/4W	
R596	1-249-437-11	CARBON	47K	5%	1/4W	
R597	1-249-437-11	CARBON	47K	5%	1/4W	
R598	1-249-437-11	CARBON	47K	5%	1/4W	
R599	1-249-437-11	CARBON	47K	5%	1/4W	
R600	1-249-437-11	CARBON	47K	5%	1/4W	
R601	1-249-437-11	CARBON	47K	5%	1/4W	
R602	1-249-437-11	CARBON	47K	5%	1/4W	
R603	1-249-437-11	CARBON	47K	5%	1/4W	
R604	1-249-437-11	CARBON	47K	5%	1/4W	
R605	1-249-437-11	CARBON	47K	5%	1/4W	
R606	1-249-437-11	CARBON	47K	5%	1/4W	
R607	1-249-437-11	CARBON	47K	5%	1/4W	
R608	1-247-807-31	CARBON	100	5%	1/4W	
R609	1-247-807-31	CARBON	100	5%	1/4W	
R610	1-247-807-31	CARBON	100	5%	1/4W	
R611	1-247-863-91	CARBON	22K	5%	1/4W	

PANEL | POWER AMP

Ref.No.	Part No.	Description	Remark
		< SWITCH >	
S500	1-554-303-21	SWITCH, TACTILE (SYSTEM POWER)	
S501	1-554-303-21	SWITCH, TACTILE (SLEEP)	
S502	1-554-303-21	SWITCH, TACTILE (CLOCK SET)	
S513	1-554-303-21	SWITCH, TACTILE (ENTER/NEXT)	
S514	1-554-303-21	SWITCH, TACTILE (DISPLAY/DEMO)	
S515	1-554-303-21	SWITCH, TACTILE (▽)	
S516	1-554-303-21	SWITCH, TACTILE (◁)	
S517	1-554-303-21	SWITCH, TACTILE (△)	
S518	1-554-303-21	SWITCH, TACTILE (▷)	
S519	1-554-303-21	SWITCH, TACTILE (-)	
S520	1-554-303-21	SWITCH, TACTILE (+)	
S521	1-554-303-21	SWITCH, TACTILE (TUNING MODE)	
S522	1-554-303-21	SWITCH, TACTILE (TUNER MEMORY)	
S523	1-554-303-21	SWITCH, TACTILE (STEREO/MONO)	
S524	1-554-303-21	SWITCH, TACTILE (DBFB)	
S525	1-554-303-21	SWITCH, TACTILE (S-SURROUND)	
S526	1-554-303-21	SWITCH, TACTILE (DOLBY NR)	(D270/G3100/N255:AEP, G, IT, EE)
S527	1-554-303-21	SWITCH, TACTILE (FILE 1)	
S528	1-554-303-21	SWITCH, TACTILE (FILE 2)	
S529	1-554-303-21	SWITCH, TACTILE (FILE 3)	
S530	1-554-303-21	SWITCH, TACTILE (FILE 4)	
S531	1-554-303-21	SWITCH, TACTILE (FILE SELECT)	
S532	1-554-303-21	SWITCH, TACTILE (FILE 5)	
S533	1-554-303-21	SWITCH, TACTILE (EQ MEMORY)	
S541	1-554-303-21	SWITCH, TACTILE (DAILY 2)	
S542	1-554-303-21	SWITCH, TACTILE (DAILY 1)	
S543	1-554-303-21	SWITCH, TACTILE (TIMER SET)	
S544	1-554-303-21	SWITCH, TACTILE (TUNER/BAND)	
S545	1-554-303-21	SWITCH, TACTILE (FUNCTION)	
S546	1-554-303-21	SWITCH, TACTILE (EFFECT)	
S547	1-554-303-21	SWITCH, TACTILE (KARAOKE PON)	(N255:E2, AUS, PX, MX, AR)
S550	1-467-869-11	ENCODER, ROTARY (VOLUME)	
		< VIBRATOR >	
X501	1-579-233-11	VIBRATOR, CERAMIC (5MHz)	

****

Ref.No.	Part No.	Description			Remark
*	A-4378-913-A	POWER AMP BOARD, COMPLETE (D270/G3100)			
		**********			
*	A-4378-918-A	POWER AMP BOARD, COMPLETE			
		**********			(N255:AEP, G, IT, EE)
*	A-4378-928-A	POWER AMP BOARD, COMPLETE			
		**********			(N255:E2, AUS, PX, MX, AR)
		< CAPACITOR >			
C1201	1-124-667-11	ELECT	10uF	20%	100V (D270/G3100)
C1201	1-126-963-11	ELECT	4.7uF	20%	50V (N255)
C1202	1-162-294-31	CERAMIC	1000PF	10%	50V
C1203	1-162-286-21	CERAMIC	220PF	10%	50V
C1204	1-126-967-11	ELECT	47uF	20%	50V
C1205	1-126-967-11	ELECT	47uF	20%	50V
C1206	1-126-968-11	ELECT	100uF	20%	50V (N255)
C1206	1-128-560-11	ELECT	22uF	20%	100V (D270/G3100)
C1207	1-126-795-11	ELECT	10uF	5%	50V (N255:E2, AUS, PX, MX, AR)
C1207	1-136-165-00	FILM	0.1uF	5%	50V (EXCEPT:E2, AUS, PX, MX, AR)
C1208	1-126-965-11	ELECT	22uF	20%	50V
C1210	1-136-495-11	FILM	0.068uF	5%	50V
C1211	1-136-495-11	FILM	0.068uF	5%	50V
C1220	1-126-925-11	ELECT	470uF	20%	10V (N255)
C1220	1-126-933-11	ELECT	100uF	20%	10V (D270/G3100)
C1245	1-164-159-21	CERAMIC	0.1uF		50V
C1246	1-164-159-21	CERAMIC	0.1uF		50V (N255:AEP)
C1251	1-124-667-11	ELECT	10uF	20%	100V (D270/G3100)
C1251	1-126-963-11	ELECT	4.7uF	20%	50V (N255)
C1252	1-162-294-31	CERAMIC	1000PF	10%	50V
C1253	1-162-286-21	CERAMIC	220PF	10%	50V
C1254	1-126-967-11	ELECT	47uF	20%	50V
C1255	1-126-967-11	ELECT	47uF	20%	50V
C1256	1-126-968-11	ELECT	100uF	20%	50V (N255)
C1256	1-128-560-11	ELECT	22uF	20%	100V (D270/G3100)
C1257	1-136-165-00	FILM	0.1uF	5%	50V
C1260	1-136-495-11	FILM	0.068uF	5%	50V
C1261	1-136-495-11	FILM	0.068uF	5%	50V
C1295	1-164-159-21	CERAMIC	0.1uF		50V
C1296	1-164-159-21	CERAMIC	0.1uF		50V (N255:AEP)

MC-Service

Ref.No.	Part No.	Description				Remark
		< CONNECTOR >				
CN1203	1-691-765-11	PLUG (MICRO CONNECTOR) 3P				
CN1204	1-691-770-11	PLUG (MICRO CONNECTOR) 8P				
		< DIODE >				
D1201	8-719-815-85	DIODE 1S1585 (D270/G3100)				
D1201	8-719-987-63	DIODE 1N4148M (N255)				
D1202	8-719-987-63	DIODE 1N4148M				
D1251	8-719-815-85	DIODE 1S1585 (D270/G3100)				
D1251	8-719-987-63	DIODE 1N4148M (N255)				
		< IC >				
IC1201	8-749-900-24	IC STK-4162MK2K (N255:AEP, G, IT, EE)				
IC1201	8-749-921-68	IC STK-4231MK2 (D270/G3100)				
IC1201	8-749-941-52	IC STK-4152II (N255:E2, AUS, PX, MX, AR)				
		< TRANSISTOR >				
Q1201	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA				
Q1251	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA				
		< RESISTOR >				
R1201	1-249-417-11	CARBON	1K	5%	1/4W	F
R1202	1-249-413-11	CARBON	470	5%	1/4W	F (D270/G3100)
R1202	1-249-415-11	CARBON	680	5%	1/4W	(N255)
R1203	1-249-415-11	CARBON	680	5%	1/4W	F
R1204	1-249-437-11	CARBON	47K	5%	1/4W	
R1205	1-260-103-11	CARBON	2.2K	5%	1/2W	(N255)
R1205	1-260-107-11	CARBON	4.7K	5%	1/2W	(D270/G3100)
R1207	1-260-103-11	CARBON	2.2K	5%	1/2W	(N255)
R1207	1-260-107-11	CARBON	4.7K	5%	1/2W	(D270/G3100)
⚠R1209	1-212-881-11	FUSIBLE	100	5%	1/4W	F
⚠R1210	1-208-601-11	WIREWOUND	0.1	10%	2W	F (D270/G3100)
⚠R1210	1-208-602-11	WIREWOUND	0.22	10%	2W	F (N255)
R1211	1-249-417-11	CARBON	1K	5%	1/4W	F
R1212	1-247-863-91	CARBON	22K	5%	1/4W	(D270/G3100)
R1212	1-249-431-11	CARBON	15K	5%	1/4W	(N255)
R1213	1-249-441-11	CARBON	100K	5%	1/4W	
R1214	1-260-099-11	CARBON	1K	5%	1/2W	(N255)
R1214	1-260-102-11	CARBON	1.8K	5%	1/2W	(D270/G3100)
R1217	1-260-099-11	CARBON	1K	5%	1/2W	(N255)
R1217	1-260-102-11	CARBON	1.8K	5%	1/2W	(D270/G3100)
R1218	1-260-076-11	CARBON	10	5%	1/2W	
R1228	1-247-891-00	CARBON	330K	5%	1/4W	(N255)
R1228	1-247-893-11	CARBON	390K	5%	1/4W	(D270/G3100)
R1230	1-249-429-11	CARBON	10K	5%	1/4W	(N255)
R1230	1-249-438-11	CARBON	56K	5%	1/4W	(D270/G3100)
R1242	1-249-429-11	CARBON	10K	5%	1/4W	
R1243	1-249-383-11	CARBON	1.5	5%	1/6W	F
R1251	1-249-417-11	CARBON	1K	5%	1/4W	F
R1252	1-249-413-11	CARBON	470	5%	1/4W	F (D270/G3100)
R1252	1-249-415-11	CARBON	680	5%	1/4W	(N255)
R1253	1-249-415-11	CARBON	680	5%	1/4W	F
R1254	1-249-437-11	CARBON	47K	5%	1/4W	
R1255	1-260-103-11	CARBON	2.2K	5%	1/2W	(N255)
R1255	1-260-107-11	CARBON	4.7K	5%	1/2W	(D270/G3100)
R1257	1-260-103-11	CARBON	2.2K	5%	1/2W	(N255)
R1257	1-260-107-11	CARBON	4.7K	5%	1/2W	(D270/G3100)
⚠R1259	1-212-881-11	FUSIBLE	100	5%	1/4W	F
⚠R1260	1-208-601-11	WIREWOUND	0.1	10%	2W	F (D270/G3100)
⚠R1260	1-208-602-11	WIREWOUND	0.22	10%	2W	F (N255)
R1261	1-249-417-11	CARBON	1K	5%	1/4W	F
R1262	1-247-863-91	CARBON	22K	5%	1/4W	(D270/G3100)
R1262	1-249-431-11	CARBON	15K	5%	1/4W	(N255)
R1263	1-249-441-11	CARBON	100K	5%	1/4W	
R1268	1-260-076-11	CARBON	10	5%	1/2W	
*	1-659-058-12	TABLE SENSOR BOARD				
		< IC >				
IC202	8-749-924-18	PHOTO INTERRUPTER RPI-1391				
		< RESISTOR >				
R207	1-249-416-11	CARBON	820	5%	1/4W	F
*	A-4303-510-A	TCB BOARD, COMPLETE (D270/G3100)				
*	A-4303-513-A	TCB BOARD, COMPLETE(N255:E2, AUS, AR, MX, PX)				
		< CAPACITOR >				
C1	1-162-294-31	CERAMIC	0.001uF	10%	50V	
C2	1-126-967-11	ELECT	47uF	20%	16V	
C3	1-164-159-21	CERAMIC	0.1uF		50V	
C5	1-162-306-11	CERAMIC	10000PF	30%	16V	
C6	1-162-306-11	CERAMIC	10000PF	30%	16V	
C7	1-101-004-00	CERAMIC	0.01uF		50V	
C8	1-162-306-11	CERAMIC	10000PF	30%	16V	
C9	1-162-306-11	CERAMIC	10000PF	30%	16V	
C11	1-164-159-21	CERAMIC	0.1uF		50V	
C12	1-162-198-31	CERAMIC	8.2PF	10%	50V	
C14	1-162-306-11	CERAMIC	10000PF	30%	16V	
C21	1-102-959-00	CERAMIC	22PF	5%	50V	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

TCB

Ref. No.	Part No.	Description			Remark
C22	1-164-159-21	CERAMIC	0.1uF		50V
C23	1-162-306-11	CERAMIC	10000PF	30%	16V
C24	1-126-967-11	ELECT	47uF	20%	16V
C25	1-162-306-11	CERAMIC	10000PF	30%	16V
C26	1-126-964-11	ELECT	10uF	20%	50V
C27	1-164-159-21	CERAMIC	0.1uF		50V
C28	1-124-925-11	ELECT	2.2uF	20%	100V
C29	1-102-518-11	CERAMIC	33PF	5%	50V
C30	1-162-294-31	CERAMIC	0.001uF	10%	50V
C31	1-162-306-11	CERAMIC	10000PF	30%	16V
C41	1-126-933-11	ELECT	100uF	20%	10V
C42	1-162-306-11	CERAMIC	10000PF	30%	16V
C43	1-126-962-11	ELECT	3.3uF	20%	50V
C44	1-162-306-11	CERAMIC	10000PF	30%	16V
C45	1-124-589-11	ELECT	47uF	20%	16V
C46	1-162-600-11	CERAMIC	4700PF	30%	16V
C47	1-162-294-31	CERAMIC	0.001uF	10%	50V
C48	1-126-160-11	ELECT	1uF	20%	50V
C49	1-136-159-00	METALIZED FILM	0.033uF	5%	50V (N255:E2, AUS, AR, MX, PX)
C49	1-136-160-00	METALIZED FILM	0.039uF	5%	50V (D270/G3100)
C50	1-136-159-00	METALIZED FILM	0.033uF	5%	50V (N255:E2, AUS, AR, MX, PX)
C50	1-136-160-00	METALIZED FILM	0.039uF	5%	50V (D270/G3100)
C51	1-162-600-11	CERAMIC	4700PF	30%	16V (D270/G3100)
C52	1-162-600-11	CERAMIC	4700PF	30%	16V (D270/G3100)
C53	1-126-964-11	ELECT	10uF	20%	50V
C54	1-126-157-11	ELECT	10uF	20%	16V
C55	1-126-964-11	ELECT	10uF	20%	50V
C56	1-126-964-11	ELECT	10uF	20%	50V
C57	1-164-159-21	CERAMIC	0.1uF		50V F
C58	1-162-306-11	CERAMIC	10000PF	30%	16V
C59	1-164-159-21	CERAMIC	0.1uF		50V F
C61	1-164-159-21	CERAMIC	0.1uF		50V F
C62	1-126-967-11	ELECT	47uF	20%	16V
C63	1-164-159-21	CERAMIC	0.1uF		50V F
C64	1-124-902-00	ELECT	0.47uF	20%	50V
C65	1-124-903-11	ELECT	1.0uF	20%	50V
C66	1-124-903-11	ELECT	1.0uF	20%	50V
C67	1-126-964-11	ELECT	10uF	20%	50V
C68	1-162-306-11	CERAMIC	10000PF	30%	16V
C69	1-162-306-11	CERAMIC	10000PF	30%	16V
C70	1-162-306-11	CERAMIC	10000PF	30%	16V
C71	1-162-306-11	CERAMIC	10000PF	30%	16V
C73	1-162-306-11	CERAMIC	10000PF	30%	16V
C74	1-126-964-11	ELECT	10uF	20%	50V

Ref. No.	Part No.	Description	Remark
		< FILTER >	
CF1	1-567-389-11	FILTER, CERAMIC	
CF2	1-567-389-11	FILTER, CERAMIC	
		< CONNECTOR >	
* CN1	1-568-832-11	SOCKET, CONNECTOR 13P	
		< DIODE >	
D1	8-719-933-33	DIODE UZL-6L1-TA	
D2	8-719-987-63	DIODE 1N4148M-TA	
		< FRONTEND >	
FE1	1-233-533-11	ENCAPSULATED COMPONENT	
FE2	1-239-260-11	ENCAPSULATED COMPONENT	
		< IC >	
IC1	8-759-288-54	IC LC72130	
IC2	8-759-176-03	IC LA1835	
		< IFT >	
IFT41	1-409-636-11	TRANSFORMER, IF (CERAMIC FILTER)	
		< COIL >	
L41	1-410-119-11	MICRO INDUCTOR (EL TYPE)	
		< FILTER >	
LPF41	1-239-845-11	FILTER, LOW PASS (D270/G3100)	
LPF42	1-239-845-11	FILTER, LOW PASS (D270/G3100)	
		< TRANSISTOR >	
Q1	8-729-230-XX	TRANSISTOR 2SC2669OY-TPE4	
Q2	8-729-230-XX	TRANSISTOR 2SC2669OY-TPE4	
Q3	8-729-230-XX	TRANSISTOR 2SC2669OY-TPE4	
Q4	8-729-230-XX	TRANSISTOR 2SC2669OY-TPE4	
Q5	8-729-422-57	TRANSISTOR BN1A4M-TP	
		< RESISTOR >	
R1	1-249-401-11	CARBON 47 5% 1/4W	F
R2	1-249-411-11	CARBON 330 5% 1/4W	
R3	1-249-411-11	CARBON 330 5% 1/4W	
R5	1-249-411-11	CARBON 330 5% 1/4W	
R6	1-247-863-91	CARBON 22K 5% 1/4W	
R7	1-249-411-11	CARBON 330 5% 1/4W	
R8	1-249-411-11	CARBON 330 5% 1/4W	
R9	1-247-863-91	CARBON 22K 5% 1/4W	
R10	1-249-411-11	CARBON 330 5% 1/4W	
R11	1-247-863-91	CARBON 22K 5% 1/4W	
R12	1-249-411-11	CARBON 330 5% 1/4W	

MC-Service

Ref.No.	Part No.	Description				Remark
R13	1-249-411-11	CARBON	330	5%	1/4W	
R14	1-247-863-91	CARBON	22K	5%	1/4W	
R15	1-249-429-11	CARBON	10K	5%	1/4W	
R16	1-249-437-11	CARBON	47K	5%	1/4W	
R19	1-249-399-11	CARBON	33	5%	1/4W	F
R21	1-247-807-31	CARBON	100	5%	1/4W	
R22	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R23	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R24	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R25	1-247-807-31	CARBON	100	5%	1/4W	
R26	1-249-411-11	CARBON	330	5%	1/4W	
R27	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R28	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R29	1-249-417-11	CARBON	1K	5%	1/4W	F
R30	1-249-417-11	CARBON	1K	5%	1/4W	F
R31	1-249-417-11	CARBON	1K	5%	1/4W	F
R32	1-249-417-11	CARBON	1K	5%	1/4W	F
R33	1-247-807-31	CARBON	100	5%	1/4W	
R34	1-249-429-11	CARBON	10K	5%	1/4W	
R35	1-249-429-11	CARBON	10K	5%	1/4W	
R36	1-249-437-11	CARBON	47K	5%	1/4W	
R37	1-249-417-11	CARBON	1K	5%	1/4W	F
R41	1-249-429-11	CARBON	10K	5%	1/4W	
R43	1-249-421-11	CARBON	2.2K	5%	1/4W	
R44	1-249-421-11	CARBON	2.2K	5%	1/4W	
R46	1-249-442-11	CARBON	510	5%	1/4W	
R47	1-249-403-11	CARBON	68	5%	1/4W	F
R48	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R49	1-249-393-11	CARBON	10	5%	1/4W	F
R50	1-249-429-11	CARBON	10K	5%	1/4W	
R51	1-249-441-11	CARBON	100K	5%	1/4W	
R52	1-249-429-11	CARBON	10K	5%	1/4W	
R53	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R54	1-249-425-11	CARBON	4.7K	5%	1/4W	F
		< VARIABLE RESISTOR >				
RV41	1-238-600-11	RES, ADJ, CARBON 10K				
RV42	1-238-601-11	RES, ADJ, CARBON 22K				
		< TERMINAL >				
TM1	1-537-238-21	TERMINAL BOARD (ANTENNA)				
		< VIBRATOR >				
X21	1-760-549-11	VIBRATOR, CRYSTAL (4.5MHz)				
X41	1-577-075-11	OSCILLATOR, CERAMIC (456KHz)				
X42	1-760-220-11	FILTER, CERAMIC (10.7MHz)				
X43	1-527-981-00	FILTER, CERAMIC (450KHz)				

****

Ref.No.	Part No.	Description			Remark
*	A-4303-502-A	TCB BOARD, COMPLETE (N255:AEP)			
		**********			
*	A-4303-503-A	TCB BOARD, COMPLETE (N255:IT,G)			
		**********			
*	A-4303-504-A	TCB BOARD, COMPLETE (N255:EE)			
		**********			
		< CAPACITOR >			
C1	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C2	1-126-967-11	ELECT	47uF	20% 16V	
C3	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C5	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C6	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C7	1-101-004-00	CERAMIC	0.01uF	50V	(N255:EE)
C8	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C9	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C10	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C11	1-216-295-91	CONDUCTOR, CHIP (2012)			(N255:IT,G)
C16	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C19	1-163-249-11	CERAMIC CHIP	82PF	5% 50V	(N255:AEP,EE)
C21	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C22	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C23	1-163-235-11	CERAMIC CHIP	22PF	5% 50V	
C24	1-163-239-11	CERAMIC CHIP	33PF	5% 50V	
C26	1-126-967-11	ELECT	47uF	20% 16V	
C28	1-126-967-11	ELECT	47uF	20% 16V	
C29	1-162-306-11	CERAMIC	0.01uF	30% 16V	
C30	1-124-925-11	ELECT	2.2uF	20% 100V	
C31	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C32	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C33	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C34	1-163-091-00	CERAMIC CHIP	8PF	50V	(N255:IT,G)
C34	1-163-229-11	CERAMIC CHIP	12PF	5% 50V	(N255:AEP,EE)
C35	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C36	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C37	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C39	1-163-141-00	CERAMIC CHIP	0.001uF	5% 50V	
C40	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C41	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C42	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C43	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C44	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C45	1-163-038-91	CERAMIC CHIP	0.1uF	25V	
C46	1-163-077-00	CERAMIC CHIP	0.1uF	10% 25V	
C47	1-126-967-11	ELECT	47uF	20% 16V	
C48	1-163-031-11	CERAMIC CHIP	0.01uF	50V	
C49	1-124-902-00	ELECT	0.47uF	20% 50V	

TCB

Ref. No.	Part No.	Description				Remark
C50	1-124-903-11	ELECT	1.0uF	20%	50V	
C51	1-124-903-11	ELECT	1.0uF	20%	50V	
C52	1-126-964-11	ELECT	10uF	20%	50V	
C53	1-126-964-11	ELECT	10uF	20%	50V	
C54	1-126-157-11	ELECT	10uF	20%	16V	
C55	1-126-157-11	ELECT	10uF	20%	16V	
C56	1-126-157-11	ELECT	10uF	20%	16V	
C57	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	
C58	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	
C59	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	(N255:AEP, IT, G)
C59	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V	(N255:EE)
C60	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	(N255:AEP, IT, G)
C60	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V	(N255:EE)
C61	1-126-301-11	ELECT	1uF	20%	50V	
C62	1-163-141-00	CERAMIC CHIP	0.001uF	5%	50V	
C63	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	
C64	1-126-967-11	ELECT	47uF	20%	16V	
C65	1-163-031-11	CERAMIC CHIP	0.01uF		50V	
C66	1-126-162-11	ELECT	3.3uF	20%	50V	
C67	1-126-933-11	ELECT	100uF	20%	10V	
C68	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C71	1-162-306-11	CERAMIC	0.01uF	30%	16V	
C72	1-126-967-11	ELECT	47uF	20%	16V	
C120	1-163-105-00	CERAMIC CHIP	33PF	5%	50V	(N255:AEP, IT, G)
		< FILTER >				
CF1	1-567-389-11	FILTER, CERAMIC (N255:EE)				
CF1	1-579-374-71	FILTER, CERAMIC (N255:AEP, IT, G)				
CF2	1-760-393-11	FILTER, CERAMIC (N255:AEP, IT, G)				
CF3	1-567-389-11	FILTER, CERAMIC (N255:EE)				
CF3	1-760-393-11	FILTER, CERAMIC (N255:AEP, IT, G)				
		< CONNECTOR >				
* CN1	1-568-834-11	SOCKET, CONNECTOR 15P				
		< DIODE >				
D21	8-719-976-XX	DIODE UDZ-TE-17-5.1B				
D41	8-719-016-74	DIODE 1SS352-TPH3				
		< FRONTEND >				
FE1	1-193-385-11	FRONT END (3 GANG) (N255:EE)				
FE1	1-233-542-11	FRONT END (4 GANG) (N255:AEP, IT, G)				
FE2	1-233-514-11	ENCAPSULATED COMPONENT (N255:AEP, EE)				
FE2	1-239-260-11	ENCAPSULATED COMPONENT (N255:IT, G)				
		< IC >				
IC21	8-759-288-54	IC LC72130				
IC41	8-759-176-03	IC LA1835				
		< IFT >				
IFT41	1-409-636-11	TRANSFORMER, IF (CERAMIC FILTER)				
		< JUMPER RESISTOR >				
JR1	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:IT, G)
JR2	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:AEP, EE)
JR3	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:IT, G)
JR6	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:AEP, IT, G)
JR7	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:IT, G)
JR8	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:AEP, EE)
JR9	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:AEP, EE)
JR45	1-216-295-11	METAL CHIP	0	5%	1/10W	
JR46	1-216-296-11	METAL CHIP	0	5%	1/8W	
JR47	1-216-295-11	METAL CHIP	0	5%	1/10W	
JR48	1-216-295-11	METAL CHIP	0	5%	1/10W	
JR49	1-216-296-11	METAL CHIP	0	5%	1/8W	
JR51	1-216-295-11	METAL CHIP	0	5%	1/10W	
JR52	1-216-295-11	METAL CHIP	0	5%	1/10W	
JR53	1-216-296-11	METAL CHIP	0	5%	1/8W	
JR54	1-216-295-11	METAL CHIP	0	5%	1/10W	
		< JUMPER RESISTOR >				
JW4	1-249-413-11	CARBON	470	5%	1/4W	(N255:AEP, IT, G)
JW5	1-249-413-11	CARBON	470	5%	1/4W	(N255:AEP, IT, G)
		< COIL >				
L2	1-414-142-11	MICRO INDUCTOR 1uH (N255:AEP, IT, G)				
L3	1-410-521-11	MICRO INDUCTOR 100uH				
L4	1-410-515-11	INDUCTOR 33uH (N255:AEP, IT, G)				
L41	1-407-500-00	MICRO INDUCTOR 4.7mH (N255:AEP, EE)				
L41	1-410-119-11	MICRO INDUCTOR (EL TYPE) 1mH (N255:IT, G)				
		< FILTER >				
LPF41	1-239-845-11	FILTER, LOW PASS				
LPF42	1-239-845-11	FILTER, LOW PASS				
		< TRANSISTOR >				
Q1	8-729-201-27	TRANSISTOR 2SC2715Y-TE85L				
Q2	8-729-201-27	TRANSISTOR 2SC2715Y-TE85L				
Q3	8-729-201-27	TRANSISTOR 2SC2715Y-TE85L				
Q4	8-729-201-27	TRANSISTOR 2SC2715Y-TE85L				
Q5	8-729-422-57	TRANSISTOR MUN2111				

MC-Service

Ref. No.	Part No.	Description				Remark
Q9	8-729-216-22	TRANSISTOR	2SA812-M5M6 (N255:AEP, EE)			
Q11	8-729-900-80	TRANSISTOR	DTC114ES (N255:AEP, EE)			
Q12	8-729-900-80	TRANSISTOR	DTC114ES (N255:AEP, EE)			
Q13	8-729-900-80	TRANSISTOR	DTC114ES (N255:AEP, EE)			
Q14	8-729-900-80	TRANSISTOR	DTC114ES (N255:AEP, EE)			
		< RESISTOR >				
R1	1-249-401-11	CARBON	47	5%	1/4W	F
R2	1-216-037-00	METAL CHIP	330	5%	1/10W	
R3	1-216-037-00	METAL CHIP	330	5%	1/10W	
R5	1-216-037-00	METAL CHIP	330	5%	1/10W	
R6	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R7	1-216-037-00	METAL CHIP	330	5%	1/10W	
R8	1-216-037-00	METAL CHIP	330	5%	1/10W	
R9	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R10	1-216-037-00	METAL CHIP	330	5%	1/10W	
R11	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R12	1-216-037-00	METAL CHIP	330	5%	1/10W	
R13	1-216-037-00	METAL CHIP	330	5%	1/10W	
R14	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R18	1-216-073-00	METAL CHIP	10K	5%	1/10W	(N255:AEP, EE)
R19	1-216-073-00	METAL CHIP	10K	5%	1/10W	(N255:AEP, EE)
R21	1-216-049-11	METAL CHIP	1.0K	5%	1/10W	
R22	1-216-049-11	METAL CHIP	1.0K	5%	1/10W	
R23	1-216-049-11	METAL CHIP	1.0K	5%	1/10W	
R24	1-216-025-11	METAL CHIP	100	5%	1/10W	
R25	1-249-417-11	CARBON	1K	5%	1/4W	F
R26	1-249-437-11	CARBON	47K	5%	1/4W	
R27	1-249-429-11	CARBON	10K	5%	1/4W	
R28	1-249-417-11	CARBON	1K	5%	1/4W	F
R29	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R30	1-216-186-00	METAL CHIP	330	5%	1/8W	
R31	1-216-025-11	METAL CHIP	100	5%	1/10W	
R32	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R33	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R34	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R35	1-216-214-00	METAL CHIP	4.7K	5%	1/8W	
R36	1-216-025-11	METAL CHIP	100	5%	1/10W	
R37	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R38	1-216-089-11	METAL CHIP	47K	5%	1/10W	
R39	1-249-429-11	CARBON	10K	5%	1/4W	
R42	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R43	1-216-042-00	METAL CHIP	510	5%	1/10W	
R44	1-216-021-00	METAL CHIP	68	5%	1/10W	
R45	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R46	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R47	1-216-097-11	METAL CHIP	100K	5%	1/10W	
R48	1-249-417-11	CARBON	1K	5%	1/4W	F
R49	1-216-049-11	METAL CHIP	1.0K	5%	1/10W	
R50	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R51	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
R53	1-249-429-11	CARBON	10K	5%	1/4W	
R55	1-216-162-00	METAL CHIP	33	5%	1/8W	
R56	1-249-393-11	CARBON	10	5%	1/4W	F
R91	1-216-295-11	METAL CHIP	0	5%	1/10W	(N255:AEP, EE)
R92	1-216-073-00	METAL CHIP	10K	5%	1/10W	(N255:AEP, EE)
		< VARIABLE RESISTOR >				
RV41	1-238-601-11	RES, ADJ, CARBON 22K				
RV42	1-238-600-11	RES, ADJ, CARBON 10K				
		< TERMINAL >				
TM1	1-537-488-11	TERMINAL BOARD (ANT) (ANTENNA)				
		< VIBRATOR >				
X21	1-760-549-11	VIBRATOR, CRYSTAL (4.5MHz)				
X41	1-760-220-11	FILTER, CERAMIC (10.7MHz)				
X42	1-527-981-00	FILTER, CERAMIC (450KHz)				
X43	1-577-075-11	OSCILLATOR, CERAMIC (456KHz)				
**********						
*	1-659-155-11	TRANSFORMER BOARD				
		**********				
	1-533-217-31	HOLDER, FUSE				
		< CAPACITOR >				
C1611	1-164-159-21	CERAMIC	0.1		50V	
		< CONNECTOR >				
* CN1601	1-560-595-00	TERMINAL (WITH BASE)				(N255:E2, AUS, PX, MX, AR)
CN1601	1-774-108-11	PIN, CONNECTOR (PC BOARD)				(D270/G3100/N255:AEP, G, IT, EE)
CN1602	1-564-524-11	PLUG, CONNECTOR 9P				
		< RESISTOR >				
⚠R1600	1-202-725-00	SOLID	3.3M	10%	1/2W	(D270/G3100)
⚠R1601	1-217-637-00	FUSIBLE	1	5%	1/4W	F (N255)
⚠R1601	1-219-139-11	FUSIBLE	0.68	5%	1/4W	F (D270/G3100)
⚠R1602	1-219-119-81	FUSIBLE	0.1	5%	1/4W	F (D270/G3100)
⚠R1602	1-219-136-11	FUSIBLE	0.22	5%	1/4W	F (N255)
⚠R1603	1-219-119-81	FUSIBLE	0.1	5%	1/4W	F (D270/G3100)
⚠R1603	1-219-136-11	FUSIBLE	0.22	5%	1/4W	F (N255)

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

TRANSFORMER

Ref.No.	Part No.	Description	Remark
		< SWITCH >	
⚠S1601	1-572-675-11	SWITCH, POWER VOLTAGE CHANGE (VOLTAGE SELECTOR) (N255:E2, PX, AR)	
		**********	
		MISCELLANEOUS	
		**********	
⚠155	1-569-007-11	ADAPTER, CONVERSION 2P (N255:PX)	
⚠155	1-569-008-11	ADAPTER, CONVERSION 2P (N255:AR)	
156	1-769-977-11	WIRE (FLAT TYPE) (13 CORE) (D270/G3100/N255:E2, AUS, PX, MX, AR)	
156	1-773-009-11	WIRE (FLAT TYPE) (15 CORE) (N255:AEP, G, IT, EE)	
157	1-776-238-11	WIRE (FLAT TYPE) (19 CORE)	
158	1-773-024-11	WIRE (FLAT TYPE) (15 CORE)	
221	1-698-705-11	MOTOR, WIRE	
251	1-500-322-11	HEAD, WIRE (E) (DECK B)	
253	1-500-319-11	HEAD, HOLDER (DECK B)	
255	1-500-320-11	HEAD, WIRE R/P (DECK B)	
256	1-500-321-11	HEAD, WIRE P.B (DECK A)	
314	1-762-610-11	SWITCH, PLATE	
315	1-762-613-11	SWITCH, WIRE LEAF (DECK A)	
316	1-762-612-11	SWITCH, WIRE LEAF (DECK B)	
* 357	1-452-538-11	MAGNET	
⚠401	8-848-387-01	OPTICAL PICK-UP KSS-213BA/S-N	
402	1-769-069-11	WIRE (FLAT TYPE) (16 CORE)	
⚠CNP160	11-555-750-00	CORD, POWER (N255:AR)	
⚠CNP160	11-558-943-51	CORD, POWER (N255:E2, PX, MX)	
⚠CNP160	11-575-042-21	CORD, POWER (D270/G3100)	
⚠CNP160	11-575-651-21	CORD, POWER (N255:AEP, G, IT, EE)	
⚠CNP160	11-696-966-11	CORD, POWER (N255:AUS)	
HE901	1-500-318-11	HEAD, E (ERASE) (DECK B)	
HP901	1-543-424-21	HEAD (PLAYBACK) (DECK A)	
HRP901	1-543-424-21	HEAD (RECORD/PLAYBACK) (DECK B)	
⚠F1601	1-532-299-00	FUSE (5A/125V) (N255)	
⚠F1602	1-532-299-00	FUSE (5A/125V) (N255)	
⚠F1603	1-533-419-11	FUSE (4A/125V) (D270:CND)	
⚠F1603	1-533-420-11	FUSE, GLASS CYLINDRICAL (DIA. 5) (5A/125V) (D270:US/G3100)	
FL501	1-517-489-11	INDICATOR TUBE, FLUORESCENT	
M101	X-4917-523-4	MOTOR ASSY (SPINDLE)	
M102	X-4917-504-1	MOTOR ASSY (SLED)	
M201	A-4660-977-A	MOTOR ASSY (TABLE)	
M901	X-3372-231-1	MOTOR ASSY (CAPSTAN/REEL)	
S1	1-571-556-11	SWITCH, LEAF (MOTOR) (DECK A)	
S2	1-571-745-11	SWITCH, LEAF (PLAY) (DECK A)	
S3	1-761-611-11	SWITCH, LEAF (TYPE 2) (DECK A)	
S4	1-571-556-11	SWITCH, LEAF (MOTOR) (DECK B)	
S5	1-571-745-11	SWITCH, LEAF (PLAY) (DECK B)	
S6	1-762-611-11	SWITCH, LEAF (TYPE 2) (DECK B)	
S7	1-571-556-11	SWITCH, LEAF (REC) (DECK B)	
S101	1-572-085-11	SWITCH, LEAF (LIMIT)	
⚠T1001	1-429-307-11	TRANSFORMER, POWER (N255:AEP, G, IT, EE)	
⚠T1001	1-429-308-11	TRANSFORMER, POWER (N255:E2, AUS, PX, MX, AR)	
⚠T1001	1-429-341-11	TRANSFORMER, POWER (D270:US/G3100)	
⚠T1001	1-429-428-11	TRANSFORMER, POWER (D270:CND)	
		**********	
		ACCESSORIES & PACKING MATERIALS	
		**********	
	1-501-374-11	ANTENNA, LOOP (N255:AEP, G, IT, EE)	
	1-501-804-11	ANTENNA (FM) (N255:AEP, IT, EE)	
	3-810-806-31	MANUAL, INSTRUCTION (ENGLISH, FRENCH, SPANISH, PORTUGUESE) (N255:AEP)	
	3-810-806-41	MANUAL, INSTRUCTION (GERMAN, DUTCH, SWEDISH, ITALIAN) (N255:AEP, IT)	
	3-810-806-71	MANUAL, INSTRUCTION (GERMAN) (N255:G)	
	3-810-806-81	MANUAL, INSTRUCTION (ENGLISH, POLISH) (N255:EE)	
*	4-973-139-01	CUSHION	
*	4-979-293-01	INDIVIDUAL CARTON (N255:AEP, G, IT, EE)	
*	4-979-371-01	COVER, BATTERY (for RM-SD25)	
*	4-979-431-01	CUSHION (BOTTOM)	
*	4-980-140-01	CUSHION (UPPER) (N255:E2, AUS, PX, G, IT, EE, MX)	
	8-917-538-90	REMOTE COMMANDER (RM-SD25)	
		**********	
		HARDWARE LIST	
		**********	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#2	7-685-871-01	SCREW +BVTT 3X6 (S)	
#3	7-682-548-04	SCREW +BVTT 3X8 (S)	
#4	7-685-650-79	SCREW +BVTP 3X16 TYPE2 IT-3	
#5	7-621-770-87	SCREW +PTT 2.6X5 (S)	
#6	7-685-782-01	SCREW +PTT 2X5 (S)	
#7	7-621-773-86	SCRTEWTOTSU PTTWH 2.6X4	
#8	7-621-255-25	SCREW +PTT 2X4 (S)	
#9	7-685-104-19	SCREW +P 2X6 TYPE2 NON-SLIT	
#10	7-621-255-15	SCREW +P 2X3	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

9-960-497-12

Sony Corporation
Home A&V Products Company

97C097511-1
Printed in Hungary © 1997. 3
Published by Service and Safety Engineering Dept (Shibaura)

MC-Service